

Contents [[hide](#)][1 zero88 Chilli Pro 2410i Bypass RCD Dimmer Owner's Manual](#)[2 Security](#)[3 Documents / Resources](#)[3.1 References](#)

zero88 Chilli Pro 2410i Bypass RCD Dimmer Owner's Manual



Security

This option allows you to lock the dimmer, disabling all menu access. The dimmer is locked and unlocked manually by entering a four digit code.

Global Unlock Code

There is a global unlock code which will unlock the Chilli Dimmer. If the code to unlock the dimmer has been forgotten, contact Zero 88 or your dealer for further information.

Networked Dimmers

A networked dimmer can be locked locally as described in this section.

This will not prevent the dimmer from being controlled from a Chilli Master Controller or Chilli control panels connected to the network.

A networked dimmer can also be locked and unlocked from a Chilli Master Controller.

Locking the Dimmer

Select the Security option from the top level options menu, and press the ENT key. The screen shows:

Lock Dimmer

Code: xxxx

Use the numeric keypad to enter a 4 digit code and then press the ENT key. The screen shows:

Confirm Code

Code: xxxx

Re-enter the same 4 digit code and then press the ENT key to confirm.

If the codes match – the dimmer is locked, the screen returns to the main screen, and all menu access is disabled.

If the codes do not match – an error message is briefly shown, and the screen returns to the Lock Dimmer screen above.

Unlocking the Dimmer

If the dimmer is locked, the main screen will be shown, and all menu access will be disabled.

If the ENT key is pushed in order to gain access to the menus, the screen shows:

Dimmer Locked

Code: xxxx

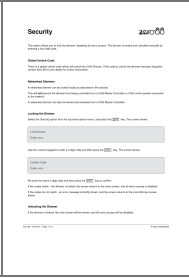
Enter the 4 digit code using the numeric keypad, and then press the ENT key.

If the correct code is entered – the dimmer is unlocked, and the screen shows the first screen in the top level menu structure (Manual Control).

If an incorrect code is entered – an error message is briefly shown and the screen returns to the main screen.



Documents / Resources

	zero88 Chilli Pro 2410i Bypass RCD Dimmer [pdf] Owner's Manual Chilli Pro 2410i Bypass RCD Dimmer, Chilli Pro, 2410i Bypass RCD Dimmer, Bypass RCD Dimmer, RCD Dimmer, Dimmer
--	--

References

- [User Manual](#)

zero88

2410i Bypass RCD Dimmer, Bypass RCD Dimmer, Chilli Pro, Chilli Pro 2410i Bypass RCD Dimmer, Dimmer, RCD Dimmer, zero88

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.