

**Contents** [ [hide](#) ]

- [1 Chilli Pro Bypass RCD Dimmer](#)
- [2 Set All Channels](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)

## Chilli Pro Bypass RCD Dimmer

Select the Manual Control option from the top level menu options, and press the **ENT** key to enter the Manual

Control menu. The following options are available:

- Set Chan Level
- Set All Chans

Use the cursor keys to scroll between the options. Press the **ENT** key to enter the menu for the selected option.

### Set Channel Level

This option allows you to set up a manual control level between 0 – 100% for each of the dimmer channels.

Select the Set Chan Level option from the menu, and press the ENT key to enter the menu.

## **Standard mode**

When operating in Standard mode, the screen shows:

Channel: xx

Level: xxx

The cursor is shown in the Channel field.

## **ChilliNet mode**

When operating in ChilliNet mode, the screen shows:

A (xx) Channel: xx

Level: xxx

The cursor is shown in the Channel field.

The area number A(xx) shows the area that the dimmer channel is assigned to and is for information only.

In both Standard and ChilliNet modes, individual channel levels can then be adjusted using the numeric keypad or cursor keys. Press the **ENT** key to move between the Channel and Level fields.

The # key can be used as a quick method of setting the manual control levels to full or off. The first push will take it 100%, the second push will take it 0% etc.

## **Set All Channels**

### **Standard Mode**

In Standard mode, you can set a manual control level for all the channels on the dimmer in a single operation.

Select the Set All Chans option from the menu, and press the ENT key. The screen shows:

All Channels

Level: 0

### **ChilliNet Mode**

In ChilliNet mode you can set a manual control level for all the channels in a specified area on the dimmer in a single operation.

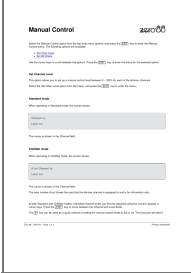
Select the Set All Chans option from the menu, and press the ENT key. The screen shows:

Area: 1

Level: 0



The cursor is in the Area field. Press the **ENT** key to move between the Area and Level fields. The area number must be valid (i.e. the dimmer has one or more channels assigned to that area) to adjust the Level field.

## Documents / Resources

	<a href="#">zero88 Chilli Pro Bypass RCD Dimmer [pdf]</a> Instructions Chilli Pro Bypass RCD Dimmer, Chilli Pro, Bypass RCD Dimmer, RCD Dimmer
---	---

## References

- [User Manual](#)

 Bypass RCD Dimmer, Chilli Pro, Chilli Pro Bypass RCD Dimmer, RCD Dimmer,  
 zero88    zero88

---

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.