



ZigBee Wireless Dimmer Switch Instruction Manual

[Home](#) » [zigbee](#) » ZigBee Wireless Dimmer Switch Instruction Manual 

Contents

- [1 ZigBee Wireless Dimmer Switch](#)
- [2 Function introduction](#)
- [3 Product Data](#)
- [4 Safety & Warnings](#)
- [5 Operation](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)




ZigBee Wireless Dimmer Switch



Important: Read All Instructions Prior to Installation

Function introduction

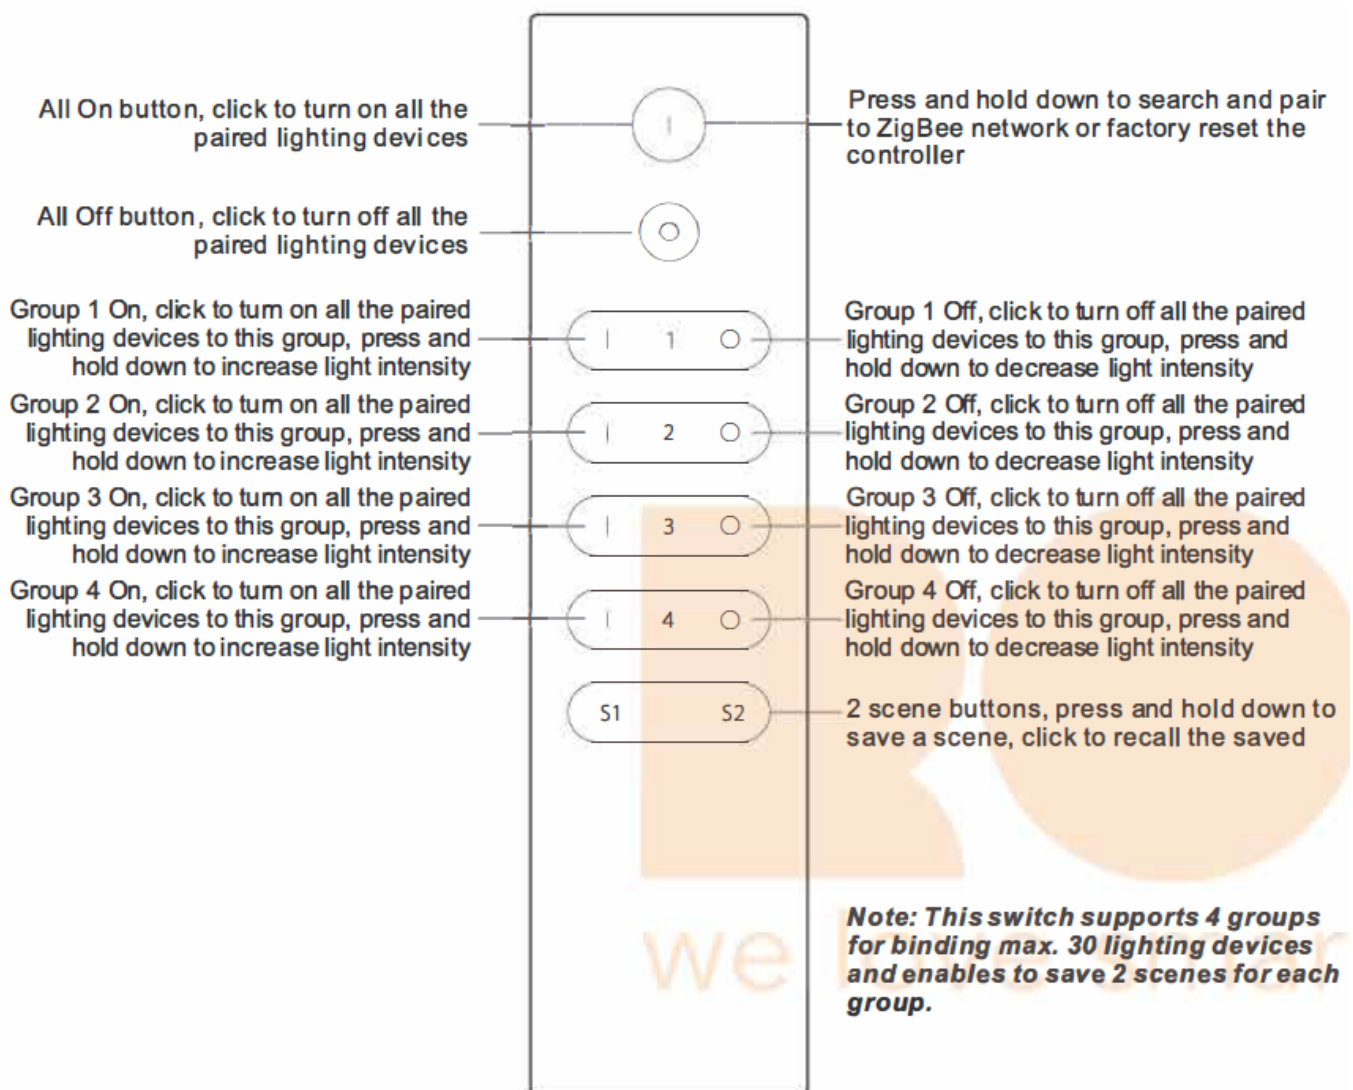



Note: Before the first use, please remove the protective film on the battery.

Product Data

Protocol		Zig Bee 3.0
Operation Voltage		3VDC (CR2032)
Transmission Frequency		2.4GHz
Transmission Range (free field)	+	30m
Protection Type	+	IP20
Dimming Range		0.1%-100%
Dimension		150×38.6×12mm



Magnetic Bracket


- Zig Bee dimmer switch based on Zig Bee 3.0

- Enables to pair Zig Bee lighting devices via touchlink commissioning without coordinator
- Supports find and bind mode to pair with Zig Bee lighting devices in the same net work
- Supports 4 groups for binding max. 30 lighting devices
- 2.4 GHz global operation
- Long battery life mesh technology
- Transmission range up to 30m
- Compatible with universal Zig Bee Gate way products
- Compatible with universal single color Zig Bee lighting devices

Safety & Warnings

- This device contains a button lithium battery that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

Quick Start (Simplified Operations Compared to Standard Operations in “Operation” part)

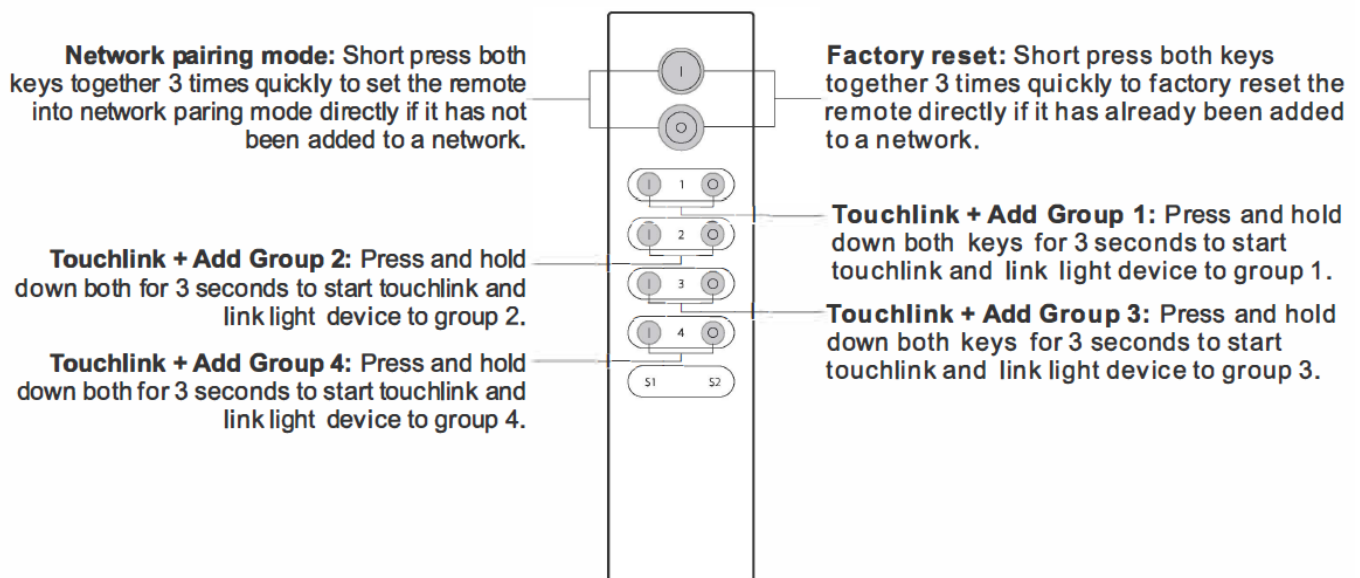

Zig Bee Clusters Supported by This Remote Are As Follows:

Input clusters:

- Basic
- Power Configuration
- Identify
- Diagnostics

Output clusters:

- Identify
- Scenes
- Group
- On/off


- Level control
- Ota

Operation

1. This Zig Bee Dim remote is a wireless transmitter that communicates with a variety of Zig Bee compatible systems. This transmitter sends wireless radio signals that are used to remotely control a compatible system.
2. This ZigBee remote supports 4 groups for binding max. 30 lighting devices and enables to control single color Zig Bee lighting devices.
3. Zig bee Network Pairing through Coordinator or Hub {Added to a Zig bee Network}

Step 1: Remove the remote from previous zigbee network if it has already been added to it, otherwise pairing will fail. Please refer to the part "Factory Reset Manually".

Step 2: From your zigbee controller or hub interface, choose to add device or accessory and enter Pairing mode as instructed by the controller.

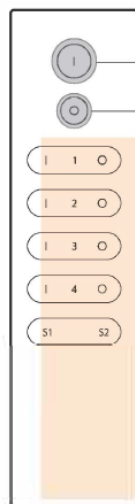


Step 3: Press and hold down until LED indicator turns on.

Step 4: Immediately short press to search nearby network, indicator flashes every 1 second, 20 seconds timeout if there is no network. Indicator will then blink 5 times quickly for successful pairing.

Note:

1. After pairing successfully, the remote information will appear on the controller or hub interface.
 2. No remote information will appear on the hub interface if pairing to Philips Hue Bridge.
4. Removed from a Zig bee Network through Coordinator or Hub Interface

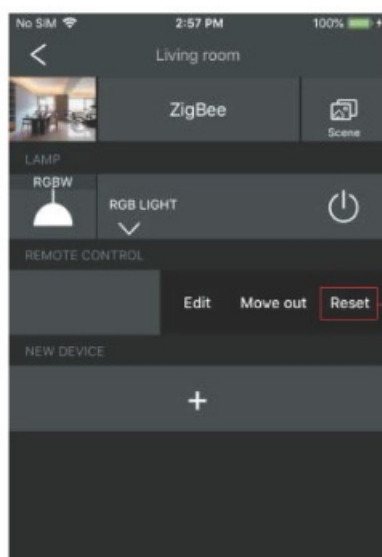


From your ZigBee controller or hub interface, choose to delete or reset the remote as instructed, indicator flashes 3 times quickly to indicate successful removing.

5. Touch Link to a Zigbee Lighting Device

Step 1: Set the zigbee lighting device to start TouchLink commissioning, please refer to its manual to learn how.

Step 3: Short press ON button | of group 1/2/3/4 to choose a group that you would like to pair the device to.

Step 5: Short press to start TouchLink pairing procedure of the remote. LED indicator will flash fast for 3s to start TouchLink and then flash 6 times slowly to indicate successful pairing to the device.

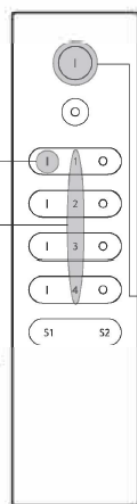

Step 2: Bring the remote within 10cm of the lighting device.



Step 4: Press and hold down until LED indicator turns on.


Note:

1. Directly Touch link (both not added to a ZigBee network), each remote can link with 30 devices.
 2. TouchLink after both added to a Zig Bee network, each remote can link with max. 30 devices.
 3. For Hue Bridge & Amazon Echo Plus, add remote and device to network first then Touch link.
 4. After Touch link, the remote can control the linked lighting devices.
6. Remove a Touchlink Paired ZigBee Lighting Device

Step 1: Set the Touchlink paired zigbee device to start TouchLink commissioning, please refer to its manual to learn how.

Step 3: Short press ON button | of group 1/2/3/4 to choose a group that the device was linked to.

Step 5: Immediately short press twice to start TouchLink removing of the remote. LED indicator flashes fast for 3S, then flash 6 times slowly to indicate successful removing.

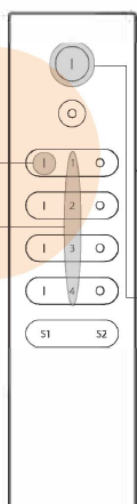


Step 2: Bring the remote within 10cm of the lighting device.



Step 4: Press and hold down until LED indicator turns on.

7. Factory Reset Manually

Step 1: Press and hold down until LED indicator turns on.

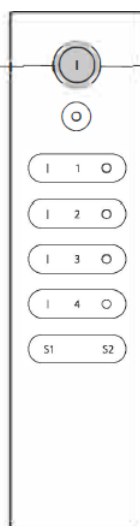

Step 2: Immediately short press 5 times continuously, indicator flashes 3 times quickly to indicate successful reset.


Note: All configuration parameters will be reset after the remote is reset or removed from the network.

8. Factory Reset a Lighting Device (Touch Reset)

Note: the device shall be added to a network, the remote added to the same one or not added to any network.

Step 1: Set the zigbee device to start TouchLink commissioning, refer to its manual.

Step 4: Short press five times continuously to start Touch Reset of the remote. LED indicator will flash fast for 3s and then flash 3 times slowly to indicate successful reset of the device.

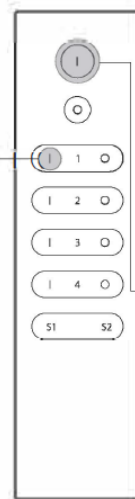

Step 2: Bring the remote within 10cm of the lighting device.

< 10cm

ZigBee Lighting Device

Step 3: Press and hold down until LED indicator turns on.


9. Find and Bind a Zigbee Lighting Device

Note: Make sure the device and remote already added to the same zigbee network.

Step 1: Start find and bind mode on the Zigbee lighting device (initiator node) and enable it to find and bind target, refer to its manual.

Step 3: Press and hold down until LED indicator turns on.

Step 4: Short press to enable the remote (target node) to find and bind initiator. LED indicator flashes 4 times for successful binding or twice if binding fails.

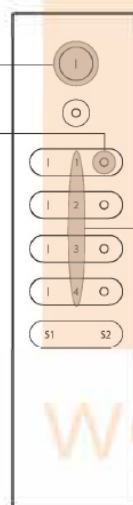

Step 2: Short press ON button | of group 1/2/3/4 to choose a group that you would like to bind the device to.

ZigBee Lighting Device


Note: Each remote can bind max. 30 lighting devices.

10. Find and Unbind a Zigbee Lighting Device

Step 1: Start find and bind mode on the ZigBee lighting device (initiator node) and enable it to find and unbind target, refer to its manual.

Step 3: Press and hold down until LED indicator turns on.

Step 4: Short press twice to enable the remote (target node) to find and unbind initiator. LED indicator flashes 4 times for successful unbinding or twice if unbinding fails.

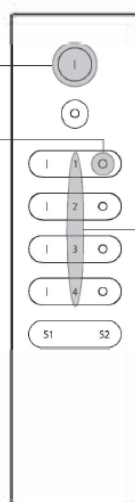


Step 2: Short press ON button | of group 1/2/3/4 to choose a group that the device already bound to.

ZigBee Lighting Device

11. Clear All Find and Bind Mode Paired Lighting Devices of a Group

Step 1: Short press ON button | of group 1/2/3/4 to choose the group that you would like to unbind all devices.

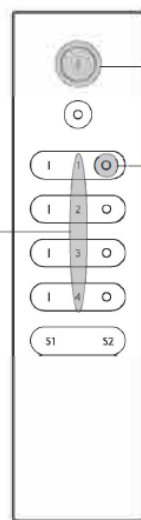

Step 2: Press and hold down until LED indicator turns on.


Step 3: Short press 5 times continuously to clear all bound lighting devices with this group. LED indicator flashes 4 times for successful unbinding.

12. Setup a Network & Add Devices to the Network (No Coordinator or Hub Required)

Step 1: Factory reset the remote and the lighting device, refer to their manuals.

Step 3: Press and hold down until LED indicator turns on.

Step 4: Short press to enable the remote to discover and add devices, LED indicator will flash twice. 180 seconds timeout, repeat the operation.

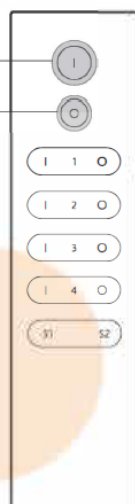

Step 2: TouchLink the remote and device to setup a network, refer to their manuals.

< 10cm

ZigBee Lighting Device

Step 5: Set another remote into network pairing mode and pair it to the network, refer to its manual.

Step 6: Add more remotes to the network as you would like.

Step 7: Factory reset the lighting devices that you would like then add them to the network, refer to their manuals.


Step 8: Touchlink to pair the added remotes and lighting devices, refer to their manuals. Each remote can link with max. 30 lighting devices. Each lighting device can be linked by max. 30 remotes.

13. How to Save and Recall Scenes

1. Save Scenes

Step 1: Make sure that lighting devices have already been paired to the 4 groups that you would like to save scenes for.

Step 3: Press and hold down a scene button (e.g. S1) until LED lights blink to save the brightness for each individual group at the same time.

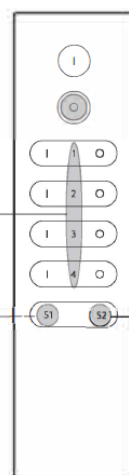

Step 2: Press and hold | or ○ button of the 4 groups to adjust a desired brightness for each individual group.

Step 4: Repeat above 3 steps, and adjust another brightness for each individual group, then press and hold the other scene button (e.g. S2) to save the brightness for each individual group at the same time.

2. Recall the Saved Scenes

Step 1: Short press button S1 /S2 to recall a saved scene for each individual group at the same time.

14. OTA

The remote supports firmware updating through OTA, and will acquire new firmware from zig bee controller or

hub every 10 minutes automatically.

15. How to Check Whether the Remote Belongs to a Network or not

Activate the remote by clicking All On/Off button (indicator on), then short press any other buttons except group buttons, indicator blinking 3 times means the remote does not belong to any network, blinking once or twice means it has already been added to a network.


16. Battery Power Monitor Function

The remote will report battery power value to the coordinator under following situations:

- When powered on.
- When short pressing both I and O buttons of group 1 simultaneously.
- When operating the switch to send data packets (over 4 hours since last operation).
- When added to the network by a coordinator.



Documents / Resources

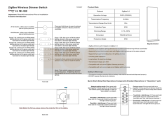	Zigbee ZigBee Wireless Dimmer Switch [pdf] Instruction Manual ZigBee, Wireless, Dimmer Switch
--	--