



zintronic How To Configure Push Alarms On Bitvision App User Guide

[Home](#) » [Zintronic](#) » zintronic How To Configure Push Alarms On Bitvision App User Guide



How to configure push alarms on Bitvision app
This manual refers to Zintronic® 'B' & 'D' product series.

Contents [[hide](#)]

[1 Configuration of push messages in Bitvision.](#)

[1.1 Turning on push messages.](#)

[1.2 Setting alarm area and alarm period.](#)


[2 Documents / Resources](#)

[3 Related Posts](#)


Configuration of push messages in Bitvision.

Turning on push messages.


1. Go to Bitvision main menu, then click three lines in the top right corner.

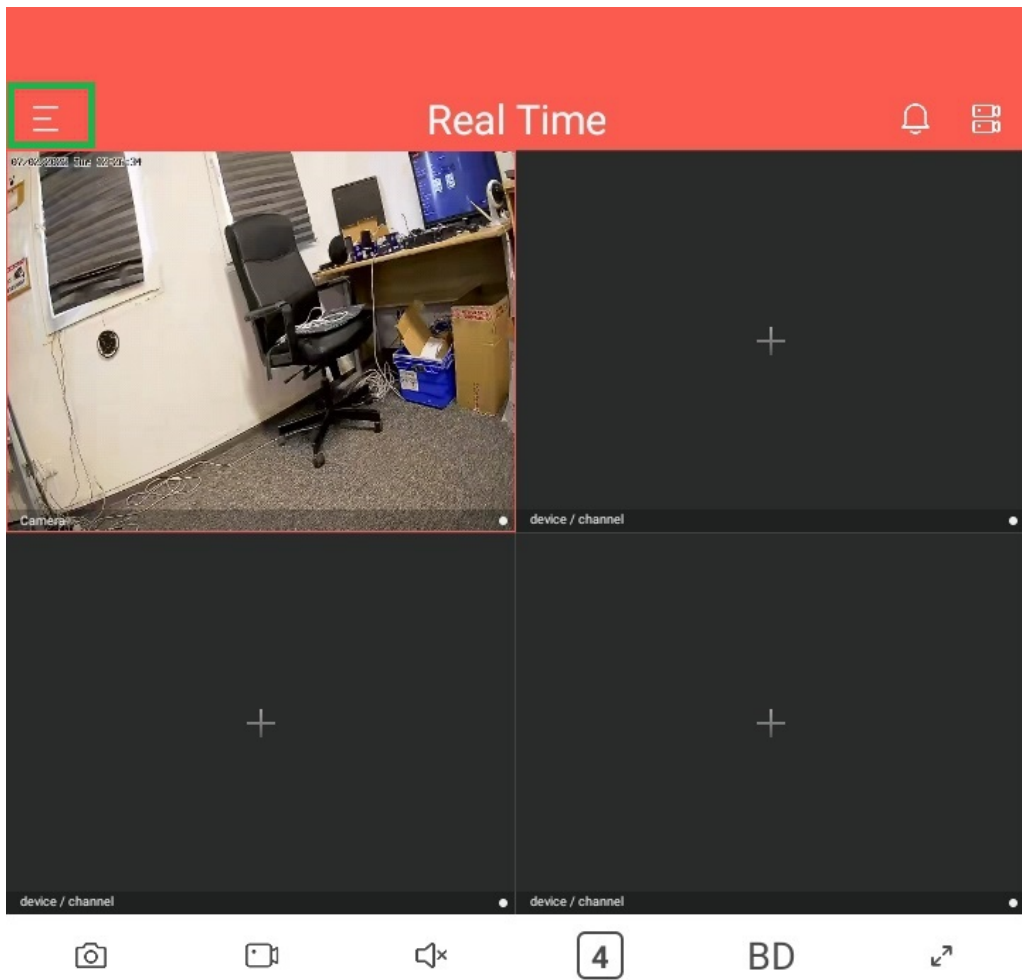

2. Press 'Device Configuration'.

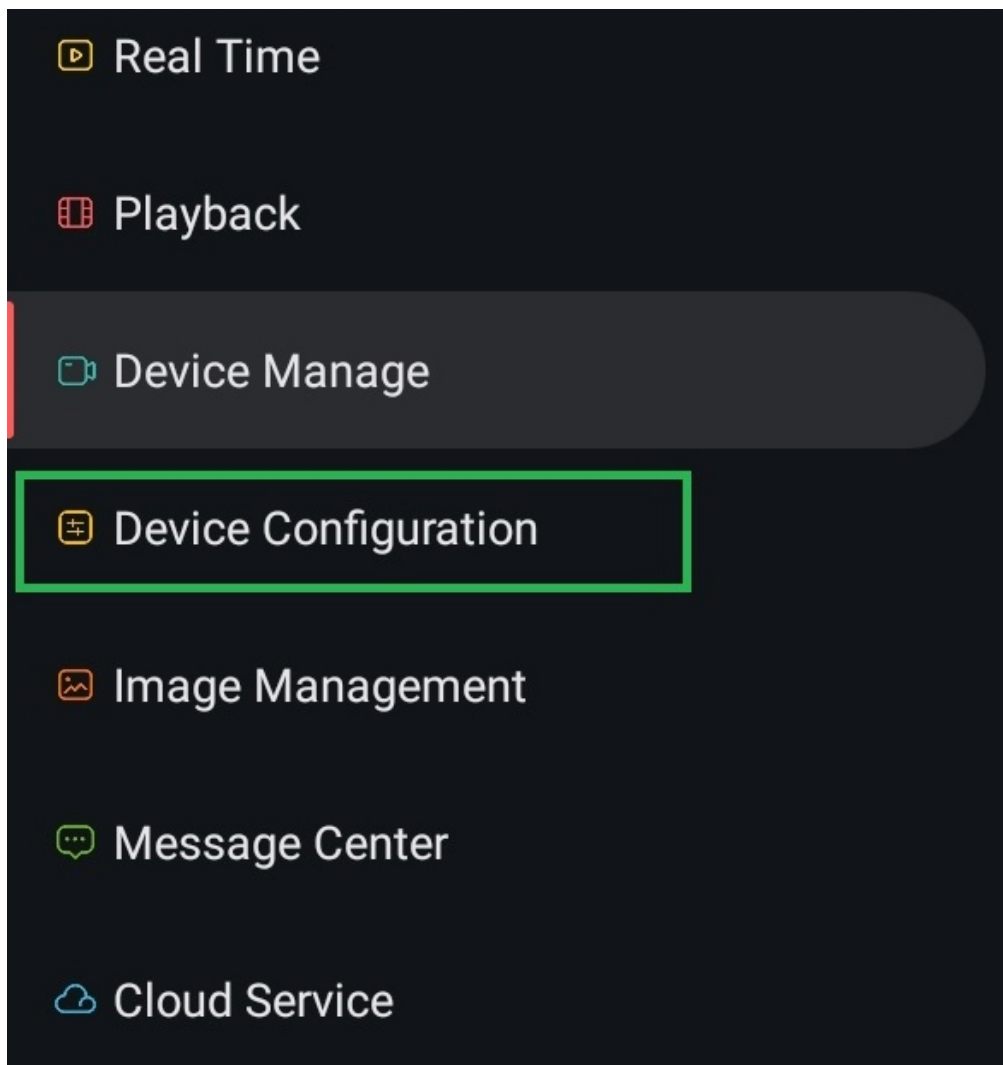

3. Choose your camera.

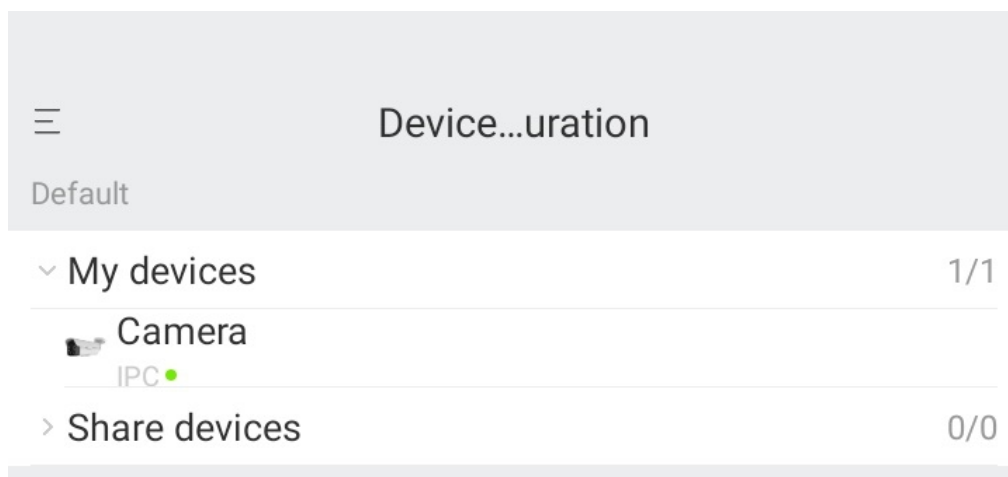

4. Check the slider next to 'Push Image'.



Setting alarm area and alarm period.

1. Go to 'Normal Alarm'.



2. Check the slider next to 'Motion detection'.

3. Set the parameters according to your own liking ('Sensitivity' and 'Detection Period').

< Motion...tection

Motion Detection ☒

Humanoid Motion Detection Only ☐

Detection Area  >


Sensitivity(0-10) 5

Detection Period >

4. Go to 'Detection Area'.

5. Set the area manually like it is shown on photo below.

6. Press 'Save' in the top right corner after you finished setting it up.

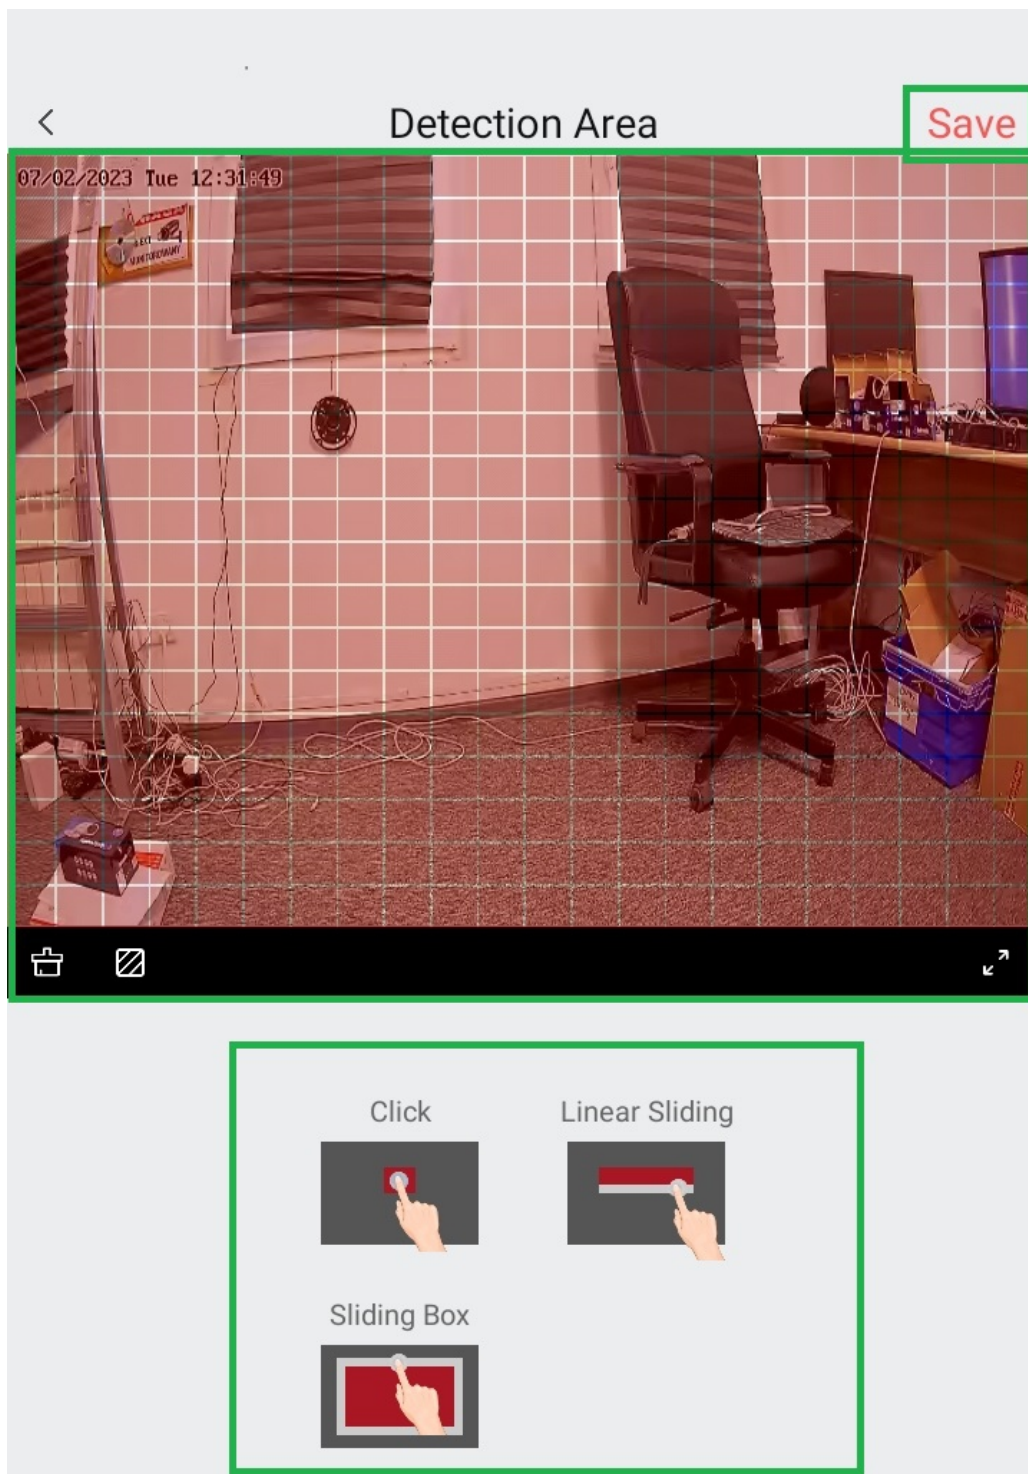

ul. J. K Branickiego 31A, 15-085 Białystok



+48 (85) 677 70 55



biuro@zintronic.pl

Documents / Resources

How to configure push alarms on Bitvision app zintronic Table of Contents: 1. Installing the app on your smartphone 2. Setting up the app on your smartphone	zintronic How To Configure Push Alarms On Bitvision App [pdf] User Guide How To Configure Push Alarms On Bitvision App, How To Configure, Push Alarms On Bitvision App, Bitvision App
---	---