

## **Zintronic SD Card Recording Configuration for Cameras** Instructions

Home » Zintronic » Zintronic SD Card Recording Configuration for Cameras Instructions



## **Contents**

- 1 SD Card Recording Configuration for Cameras 1.1 I. SD Card and record configuration for cameras.
- 2 Documents / Resources
- **3 Related Posts**

## **SD Card Recording Configuration for Cameras**


SD Card Recording Configuration This manual refers to Zintronic® 'B' & 'D' product series.




## I. SD Card and record configuration for cameras.

- · SD Card formatting.
- 1. Go into 'Configuration'.
- 2. Click on 'Storage'>'Storage management'.
- 3. Check the box on the left side where the status says 'Unformat' and shows SD Card capacity.
- 4. After checking box, click on 'Format'.

- 5. After a while card is formatted.
- 6. Click on 'Save' button.

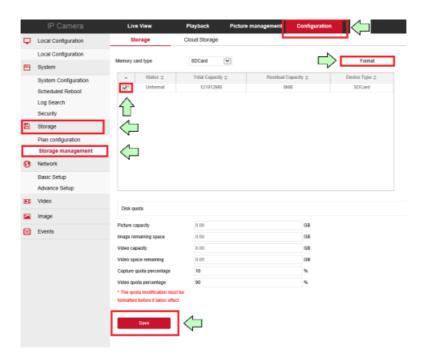


- · Continous recording configuration.
- 1. Go to 'Plan configuration'.
- 2. Check 'Enable Record' box.
- 3. Click on 'Select All'.
- 4. Click the 'Save' button.

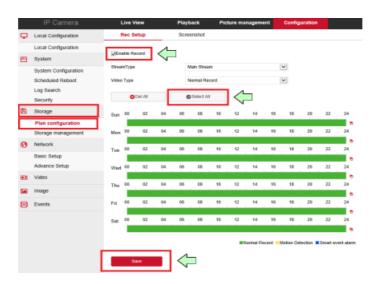

- · Alarm recording configuration.
- 1. Go to 'Plan configuration'.
- 2. Check 'Enable Record' box.
- 3. In video type select 'Motion detection'.
- 4. Click on 'Select All'.
- 5. Click the 'Save' button.



- Motion detection configuration to get camera to detect motion alarms, you need to set motion detection as in the steps shown below in text manual and manual picture.
- 1. Go to 'Configuration'.
- 2. Choose 'Events'.
- 3. Choose 'Ordinary Event'.
- 4. Check the 'Enable' box.
- 5. Set area using mouse cursor.
- 6. Click 'Save'.

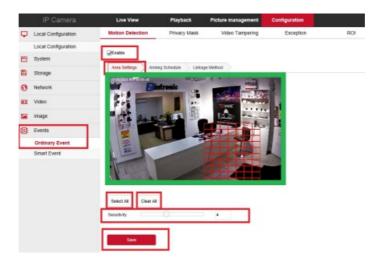







Zintronic SD Card Recording Configuration for Cameras [pdf] Instructions SD Card Recording Configuration for Cameras, SD Card Recording Configuration

Manuals+,