

[Skip to content](#)

## **Manuals+**

User Manuals Simplified.



# **ziosk Z600 Pro Android POS Terminal User Guide**

[Home](#) » [ziosk](#) » ziosk Z600 Pro Android POS Terminal User Guide

Contents [hide](#)

[1 ziosk Z600 Pro Android POS Terminal](#)

[2 Tok now the product](#)

[3 Using the touchscreen Click](#)

[4 FCC Regulations](#)

[5 Radio Frequency \(RF\) Energy](#)

[6 The operating environment](#)

[7 Children's health](#)

[8 The charger security](#)

[9 Repair and Maintenance](#)

[10 Documents / Resources](#)

[11 Related Posts](#)



**ziosk Z600 Pro Android POS Terminal**



Thanks for your purchase of Product Description. Please read this guide first before you use the device, and it will ensure your safety and the proper use of equipment. About the equipment configuration, please check with the relevant contracts of the device or consult the seller who sells the equipment to you.

The pictures in this guide are for reference only,

if some pictures do not match the physical product, please in kind prevail. Many network function which is described in this manual is the specific service by the network service providers.

Whether use these functions,it depends on the Internet service provider who services for you.

Without the company's permission, anyone should not use any forms or any ways to copy, excerpts, backup, modify, spread, translate into other languages,all or partly used for commercial

**Warning:** may hurt themselves or others

**Caution:** may damage your equipment or other devices

**Note:** the annotations, use hints or additional information

## Tok now the product

### Front view



Back View



1. Turn on/off the power  
To power on the terminal, press the power button for approximately 3 seconds, Touch the power button, and the device enters hibernation.
2. Charge the device  
If the device cannot be turned on, please plug in the Type-c data cable to charge the device. The charging time is generally 3-4 hours.Or put it on a wireless charger
3. Forcibly restart the server  
When the terminal cannot work or freezes, you can press the power button for about 10 seconds to forcibly start it.  
\* The finger strap is optional, the equipment is divided into two configurations, one with the finger strap, one without the finger strap

## Using the touchscreen Click

Touch once, select or open the function menu, options or



## FCC Regulations

- This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.  
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/ TV technician for help.
- Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## Radio Frequency (RF) Energy

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate, or SAR. The SAR limit recommended by the general public is 1.6W/kg. Averaged over one gram of tissue by IEEE Std 1528.

The FCC has granted an Equipment Authorization for this product with all reported SAR Levels evaluated as in compliance with the FCC RF exposure guidelines.

While there may be differences between the SAR levels of various product and at various positions, they all meet the government requirements.

SAR compliance for body-worn operation is based on a separation distance of 10mm between the unit and the human body. Carry this device at least 10mm away from your body to ensure RF exposure level compliant or lower to the reported level.

### **The operating environment**

- Please do not use this device in thunderstorm weather, because the thunderstorm weather may result in equipment failure, or click the danger.
- Please put the equipment from rain, moisture and liquids containing acidic substances, or it will make the electronic circuit boards corrosion.
- Don't store the device in overheating, high temperature, or it will shorten the life of electronic devices.
- Don't store the device in a too cold place, because when the device's temperature rises, moisture can form inside, and it might damage the circuit board.
- Do not attempt to disassemble the device, non-professional personnel handling can damage it.
- Do not throw, beat or intensely crash the device, because rough treatment will destroy the device's parts, and it may cause the device failure.

### **Children's health**

- Please put the device, its components and accessories in the place where children can't touch.
- This device is not toys, so children should be under adult supervision to use it.

### **The charger security**

- When charging the device, power sockets should be installed near the device and should be easy to hit. And the areas must be far away from the debris, flammable or chemicals.
- Please do not fall or crash the charger. When the charger shell is damaged, please ask the vendor for a replacement.
- If the charger or the power cord is damaged, please do not continue to use, so as to avoid electric shock or fire.
- Please do not fall or crash the charger. When the charger shell is damaged, please ask the vendor for a replacement.
- Please do not use wet hand to touch the power cord, or with power supply cable way out the charger.
- The charger must meet the "2.5 restricted power" in the request of the standard <GB4943.1 information

technology equipment safety

- IF the device needs to connect USB port, please make sure the SUB contains USB port – IF logo and its performance is in accordance with the relevant specification of the USB – IF.

## Repair and Maintenance

- Don't use strong chemicals or powerful detergents to clean the device. If it is dirty, please use a soft cloth to clean the surface with a very dilute solution of glass cleaner.
- The screen can be wiped with an alcohol cloth, but be careful not to let the fluid accumulate around the screen. Dry the display with a soft non-woven cloth immediately, in order to prevent the screen from leaving the strip traces.

## Documents / Resources



[ziosk Z600 Pro Android POS Terminal](#) [pdf] User Guide

ZPRO600, XOX-ZPRO600, XOXZPRO600, Z600 Pro Android POS Terminal, Android POS Terminal

### [Manuals+](#),

- [home](#)
- [privacy](#)