



Zip HydroTap Installation Guide

[Home](#) » [Zip](#) » Zip HydroTap Installation Guide 

Zip HydroTap Installation Guide

Installation instructions

Zip HydroTap



Touch-Free Wave, Elite Plus, Classic Plus, Classic
B, BA, BC, BCS, CS, C



Australia



UK

Visit our website to download the manuals

Using these instructions

Please refer to all safety and installation requirements detailed in the Quick start guide provided with the HydroTap Command Centre, and HydroTap Command Centre installation instructions found online, prior to installation of, or any change to, the complete system.



WARNING



Read the instructions

Before commencing the installation, download & read the HydroTap Command Centre installation instructions

Tools needed for tap installation

In addition to normal tools, the following (or equivalent equipment) will be required.

- 35mm diameter sheet metal hole punch for sinks.
- 35mm diameter hole saw for worktops.
- Tube spanner for fixing the tap assembly (supplied).



Be aware of the risks of hazards which could cause harm when using tools. Assess the risks before starting the installation.

Water supply pressure requirements

	Min - Max pressure, kPA (bar)	
	Australia	UK
HydroTap	170 (1.7) - 700 (7.0)	170 (1.7) - 500 (5.0)
Sparkling HydroTap	250 (2.5) - 700 (7.0)	250 (2.5) - 500 (5.0)
Booster	200 (2.0) - 700 (7.0)	200 (2.0) - 500 (5.0)


Contents

- 1 (1) Positioning
- 2 (2) Cut the hole & fit the spacer
- 3 (3) Mount the tap
- 4 (4) Secure the tap
- 5 (5) Familiarize yourself with the tap connections
- 6 (6) Command Centre connections
- 7 (7) Cleaning and general maintenance
- 8 Documents / Resources
- 9 Related Posts

(1) Positioning

Position the tap such that it dispenses into the sink bowl with clearance for a cup or tea pot.

Wave Tap: Observe 100mm 360 clearance envelope around the tap head.

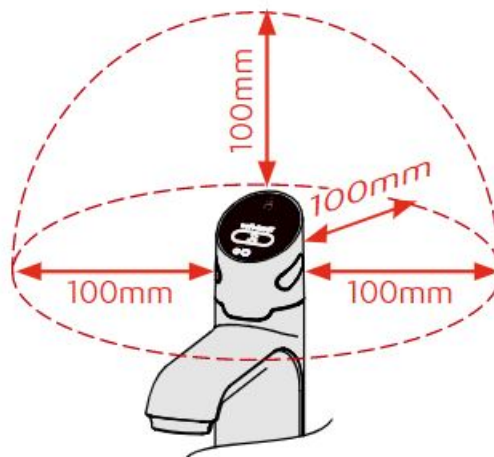


Wave clearance



Ensure that taps are positioned to minimize the risks of scalding when dispensing boiling water.

Position Command Centre and Tap as close together as possible.


and Tap as close together as possible.

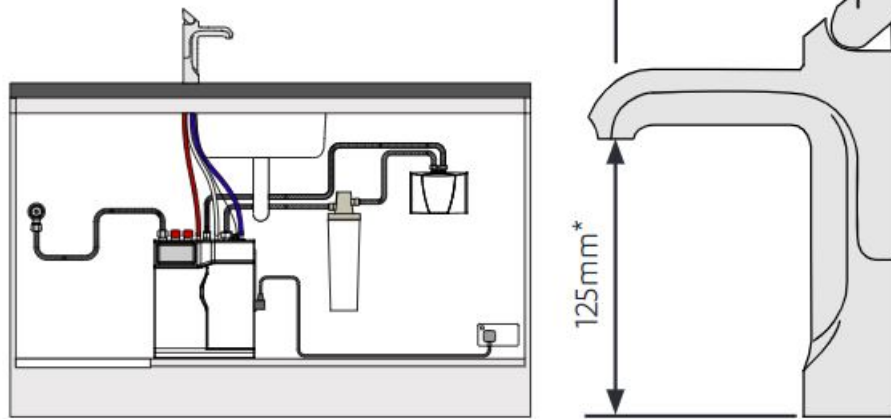

*Dispense height may be increased with the tap extension kit (sold separately)

(2) Cut the hole & fit the spacer


- Cut a Ø35mm hole in the worktop / sink.
- Apply a light smearing of silicone sealant on the underside of the spacer to ensure a watertight fit.

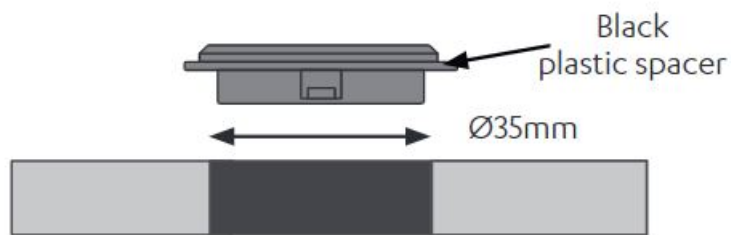

Pass the tubes and USB cable through the Ø35mm


(3) Mount the tap

Pass the tubes and USB cable through the Ø35mm hole.

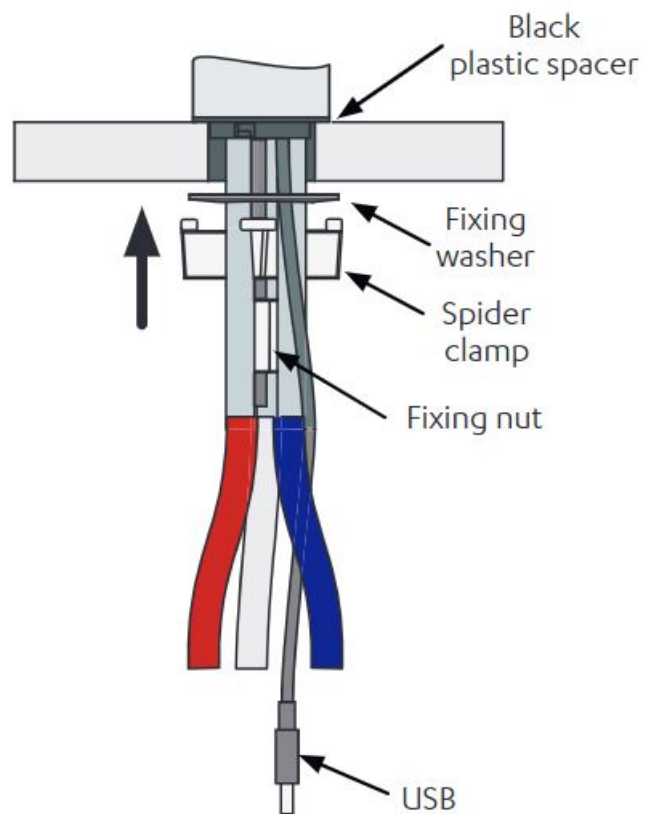


(4) Secure the tap

Use a tube spanner to secure the tap in place.

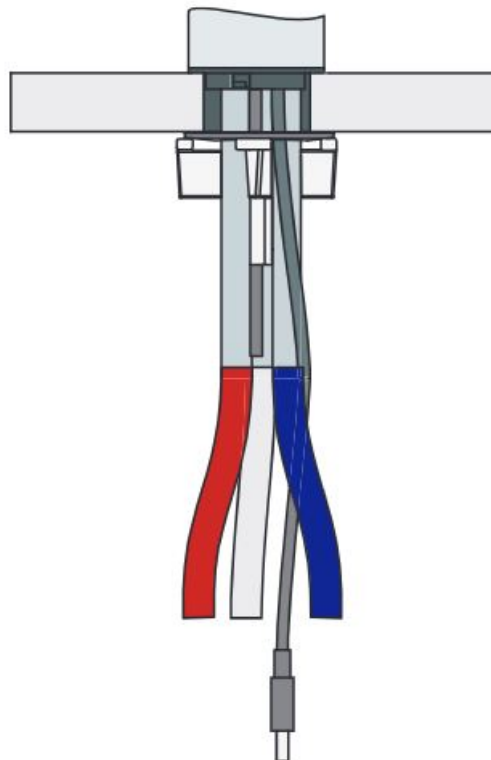

(5) Familiarize yourself with the tap connections

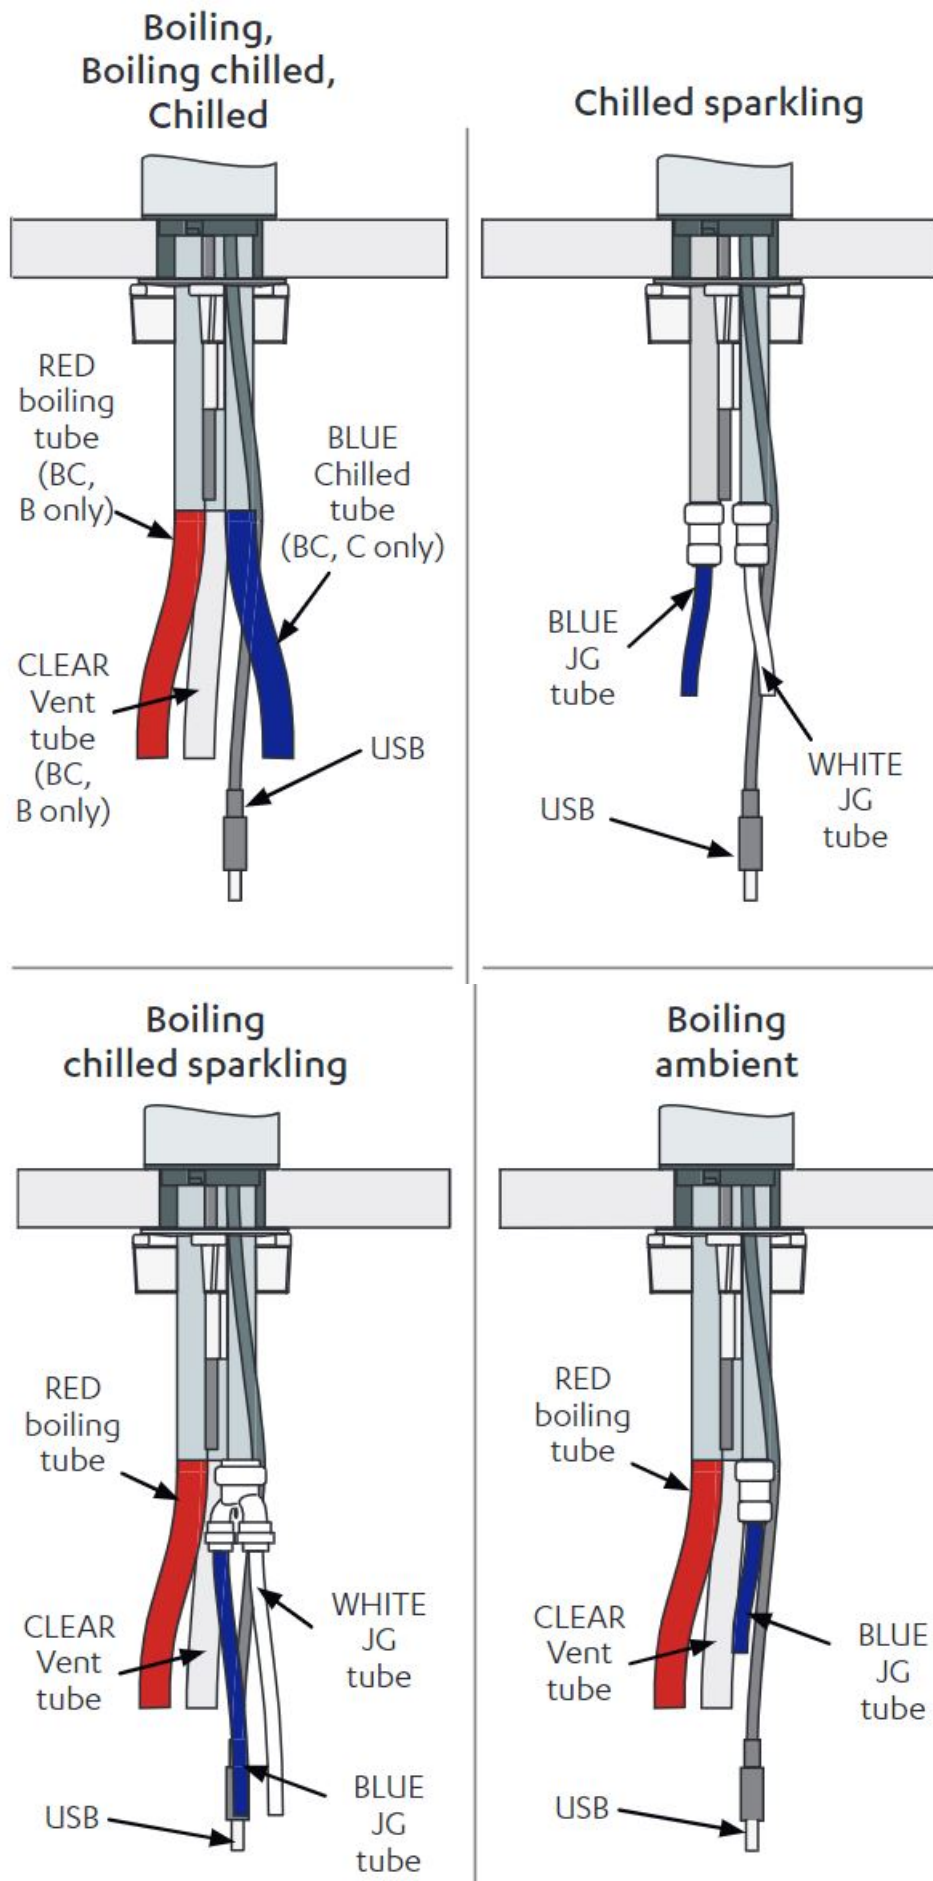

(6) Command Centre connections

USB	Connected to the Tap.
Boiling out	Red silicone tube from tap. Cut to length.
Chilled out	(BC, C) Blue silicone tube from tap, (BCS, CS) Blue JG tube from tap. Cut to length.
Vent	Clear silicone tube from tap. Cut to length.
Sparkling out	White JG tube from tap. Cut to length.
Ambient out	Blue JG tube from tap. Cut to length.

(7) Cleaning and general maintenance

- Wipe surfaces with a damp cloth and then wipe dry with a clean, dry cloth.



IMPORTANT – For Touch-Free Wave Tap:

- Do not use air-drying disinfectant sprays.
- Do not use abrasives to clean the sensor lenses at the sides, top and rear of the Touch-Free Wave Tap.
- This could cause permanent malfunction and void warranty.



Zip Water (Aust) Pty Ltd

ABN 46 000 578 727

67 – 77 Allingham Street, Condell Park, NSW 2200

Postal: Locked Bag 80, Bankstown 1885, Australia

(+612) 9796 3100 | Free Call (Aust): 1800 947 827

www.zipwater.com

Zip Water UK

Trafalgar House


Rash's Green, Dereham,

Norfolk NR19 1JG

0345 6 005 005 | sales@zipindustries.co.uk

specify.zipwater.co.uk

Documents / Resources

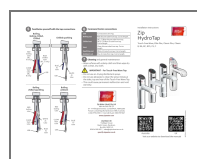

[Zip HydroTap](#) [pdf] Installation Guide
H5E784Z03AU, HydroTap