



ZIP Supa-S DVR upa Mid Range User Guide

[Home](#) » [Zip](#) » ZIP Supa-S DVR upa Mid Range User Guide

Contents [[hide](#)]

1 ZIP Supa-S DVR upa Mid Range

2 PRODUCT OVERVIEW

3 Step by Step First Time Setup

4 Operation

5 Login

6 Tech Tips

7 Mobile App Links

8 SPECIFICATION

9 DISPOSAL

10 Documents / Resources

10.1 References

11 Related Posts




ZIP Supa-S DVR upa Mid Range




PRODUCT OVERVIEW

FRONT PANEL

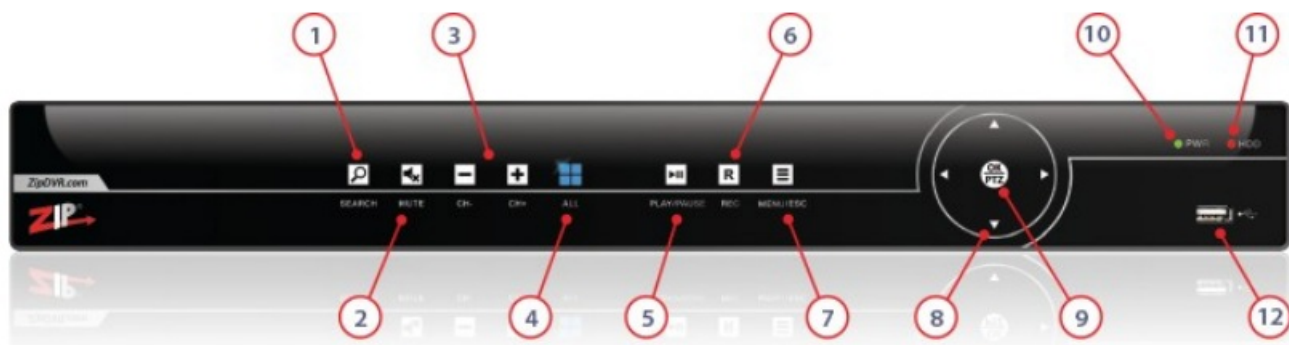

1. SEARCH
2. MUTE
3. CH-/CH+
4. ALL
5. PLAY/PAUSE 11 HDD
6. REC
7. MENU/ESC
8. Arrows
9. OK/PTZ
10. PWR

REAR PANEL

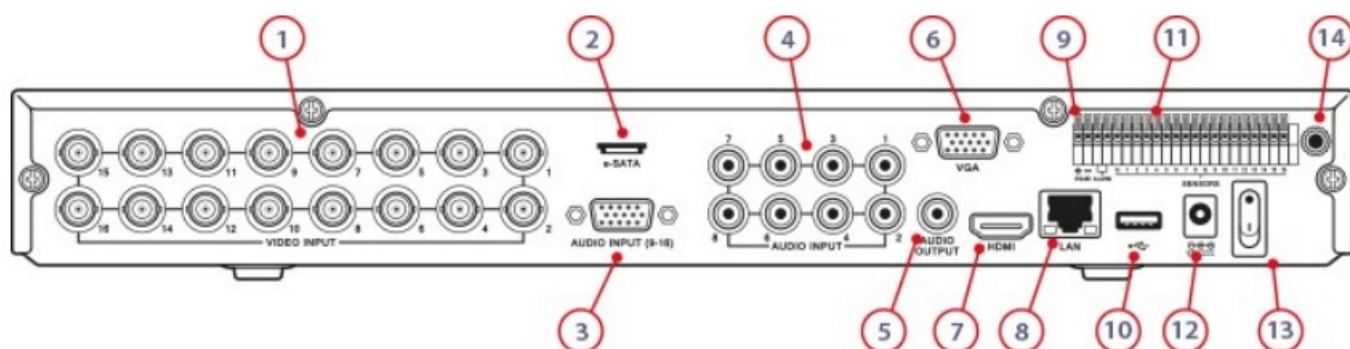

1. Video In
2. e-SATA Interface
3. Audio In (Secondary)
4. Audio In (Primary)
5. Audio Out
6. VGA
7. HDMI
8. LANInterface
9. RS485 Interface
10. USB Interface
11. Alarm In/Out
12. Power
13. Power Switch

14. IR Extender

Note different models may vary

Step by Step First Time Setup


1. Connect the monitor to the DVR using a HDMI or VGA cable for the video, and turn on the monitor.
2. Connect the cameras to the DVR and Power up the DVR using the power supply provided. Note – do not use a 3rd party or different power supply unless instructed to do so by the manufacturer.
3. Once the DVR has booted up, connect the USB, see Operation below and connect the Network cable to the DVR.

See Troubleshooting if you do not get an image on the monitor after “System Configuring”.

4. Program the basic settings using Smart Setup.

Operation

IR Remote Control

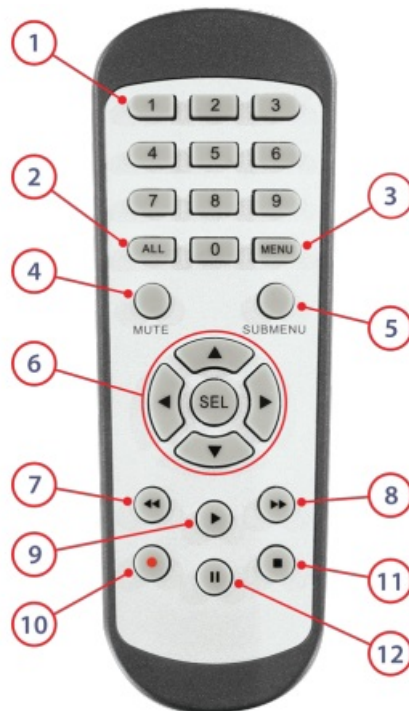

1. Numeric Buttons
2. Display All
3. Menu/Escape
4. Mute
5. Sub-menu
6. Navigation/ Enter
7. Rewind
8. Fast Forward
9. Play
10. Record
11. Stop

12. Pause

Mouse



- **Left Click**
 - **Single Click**
 - **Live view:** displayQuick Setting toolbar
 - **Menu:** select and enter
 - **Live view:** drag channel
 - **Click & Drag**
 - **Privacy Masking and Motion Detection:** select target area
 - **Digital zoom-in:** zoom in to target area
- **Right Click**
 - **Single Click**
 - **Live view:** show menu
 - **Menu:** exit current menu to upper level menu
- **Scroll Wheel**
 - **Scrolling**
 - Scroll up / down through highlighted field / drop down list

Login

- As all the ZIP DVRs come with the same admin password, for security the DVR password needs needs to be changed.

A screenshot of a 'Login' configuration window. It has a dark blue header with the word 'Login' in white. Below the header, there are several input fields and controls: 'New Admin Name' with a text box containing 'admin'; 'Password Strength' with a progress bar showing four segments, the first two of which are filled; 'Admin Default Password' with a text box and a 'Show Password' checkbox; 'New Admin Password' with a text box and a 'Show Password' checkbox; 'Confirm Password' with a text box and a 'Show Password' checkbox; and 'Unlock Pattern Enable' with a dropdown menu currently set to 'Disable'. At the bottom center is an 'Apply' button.

- The admin name can be changed from “admin” in order to make the DVR even more secure, how this can be left on “admin”.
 1. Enter the Admin Default Password which is 555555.
 2. To set a new password enter the desired password into the New Admin Password field.

3. Then re-enter the new password into the Confirm Password field.

The Password Strength bar gives an indication as to how secure the password is. Aim for a strong password using at least 8 characters and a combination of letters and numbers.

Note: Do not use a simple code like 12345, if the recorder is on a network this is too weak and easily accessed by malware.

Tech Tips

How to Select a Network Address

[zipdvr.com/howto/TIP457-
How-To-Select-A-Network-
Address.html](http://zipdvr.com/howto/TIP457-How-To-Select-A-Network-Address.html)



How to Setup Motion Detection

[zipdvr.com/howto/TIP462-
How-To-Setup-Motion-
Detection.html](http://zipdvr.com/howto/TIP462-How-To-Setup-Motion-Detection.html)

How to Add IP Cameras [zipdvr.com/howto/TIP459- How-To-Add-IP-Cameras.html](http://zipdvr.com/howto/TIP459-How-To-Add-IP-Cameras.html)



Mobile App Links

ZipVision Pro Android
softcctv.com/mobileapps/ZipVisionAndroidClient.html



ZipVision Pro Apple
softcctv.com/mobileapps/ZipVisionAppleClient.html

ZipVision Pro App Manual
systemq.com/PDF/manual/xZipAPP.pdf



SPECIFICATION


	SUPA-S004	SUPA-S008	SUPA-S016
Codec	H265 / H264		
Input	TVI / CVI / AHD / Analogue (CVBS) / IP		
Network Interface	RJ45 – 100Mbps	RJ45 – 100Mbps	RJ45 – 1000Mbps
Cameras	4 (Analogue)	8 (Analogue)	16 (Analogue)
IP Cameras	2	4	4
Recording Resolution (Analogue)	5MP Lite @30fps / 4MP Lite @ 30fps / 1080p / 720P / 960H		
Recording Resolution (IP)	5MP/4MP/1080P/720P		
e-SATA	Yes		
HDD	8TB Max (1x8TB)	8TB Max (1x8TB)	16TB Max (2x8TB)
Power	12V DC / 2A	12V DC / 2A	12V DC / 5A
Dimensions	300 x 227 x 53mm	300 x 227 x 53mm	378 x 340 x 50mm

All specifications are approximate. System Q Ltd reserves the right to change product specifications or features without notice. Whilst every effort is made to ensure that these instructions are complete and accurate, System Q Ltd cannot be held responsible for any losses, no matter how they arise, from errors or omissions in these instructions, or the performance or non-performance of the equipment referred to.

DISPOSAL

This symbol indicates that equipment must not be mixed with general household waste. For treatment, recovery and recycling please return to your local designated WEE/CG0783SS collection point as defined by your local council.

Documents / Resources

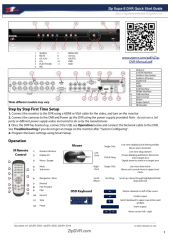	<p>ZIP Supra-S DVR upa Mid Range [pdf] User Guide</p> <p>Supra-S DVR upa Mid Range, Supra-S DVR, upa Mid Range, Mid Range</p>
---	---

References

-  [ZipNVR: Home](#)