



ZKTECO C2-260 InBio2-260 Access Controller User Guide

[Home](#) » [ZKTECO](#) » ZKTECO C2-260 InBio2-260 Access Controller User Guide 

ZKTECO C2-260 InBio2-260 Access Controller User Guide



Due to regular upgrades of systems and products, ZKTeco could not guarantee exact consistency between the actual product and the written information in this manual.

Contents


- 1 What's in the Box
- 2 Safety Precautions
- 3 Product PIN Diagram
- 4 LED Indicators
- 5 Panel Installation
 - 5.1 Wall Mounting
- 6 Installation Diagram
- 7 RS485 Readers Connection
- 8 Additional Modules of RS485
 - 8.1 Connection with DM10
 - 8.2 Connection with AUX485
 - 8.3 Connection with WR485
- 9 Connection to ZKBioAccess Software
- 10 Specifications
- 11 Documents / Resources
- 12 Related Posts

What's in the Box


- C2-260 / inBio2-260




- 4 Screws & Anchors

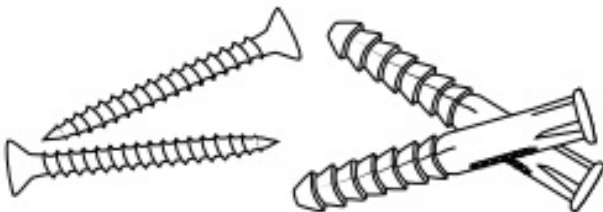

- 2 Screwdrivers

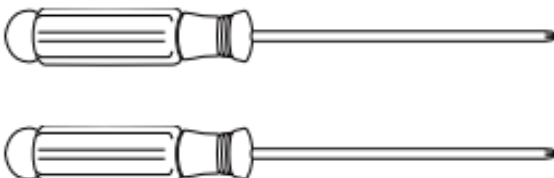



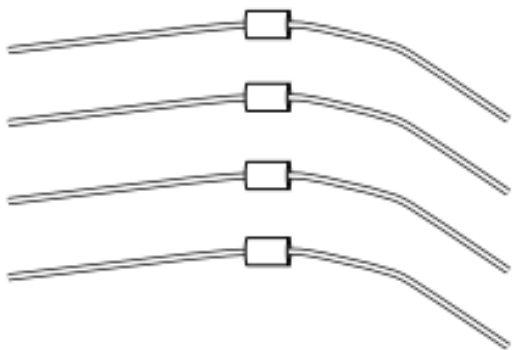






- 4 Diodes



Safety Precautions

The following precautions are to ensure user's safety and prevent any damage. Please read the instructions carefully before installation.

-  **Do not** expose to direct sunlight, water, dust and soot.
-  **Do not** place any magnetic objects near the product. Magnetic objects such as magnets, CRT, T V, monitors or speakers may damage the device.
-  **Do not** place the device near any heating equipment.
-  **Prevent** water, drinks or chemicals leaking into the device.
-  This product is not intended for use by children unless they are supervised.
-  **Do not** drop or damage the device.
-  **Do not** disassemble, repair or modify the device.
-  **Do not** use the device for any purpose other than those specified.
-  **Remove** dust or dirt regularly. While cleaning, wipe the dust off with a smooth cloth or towel instead of water.

Contact your supplier in case of any query.

Product PIN Diagram

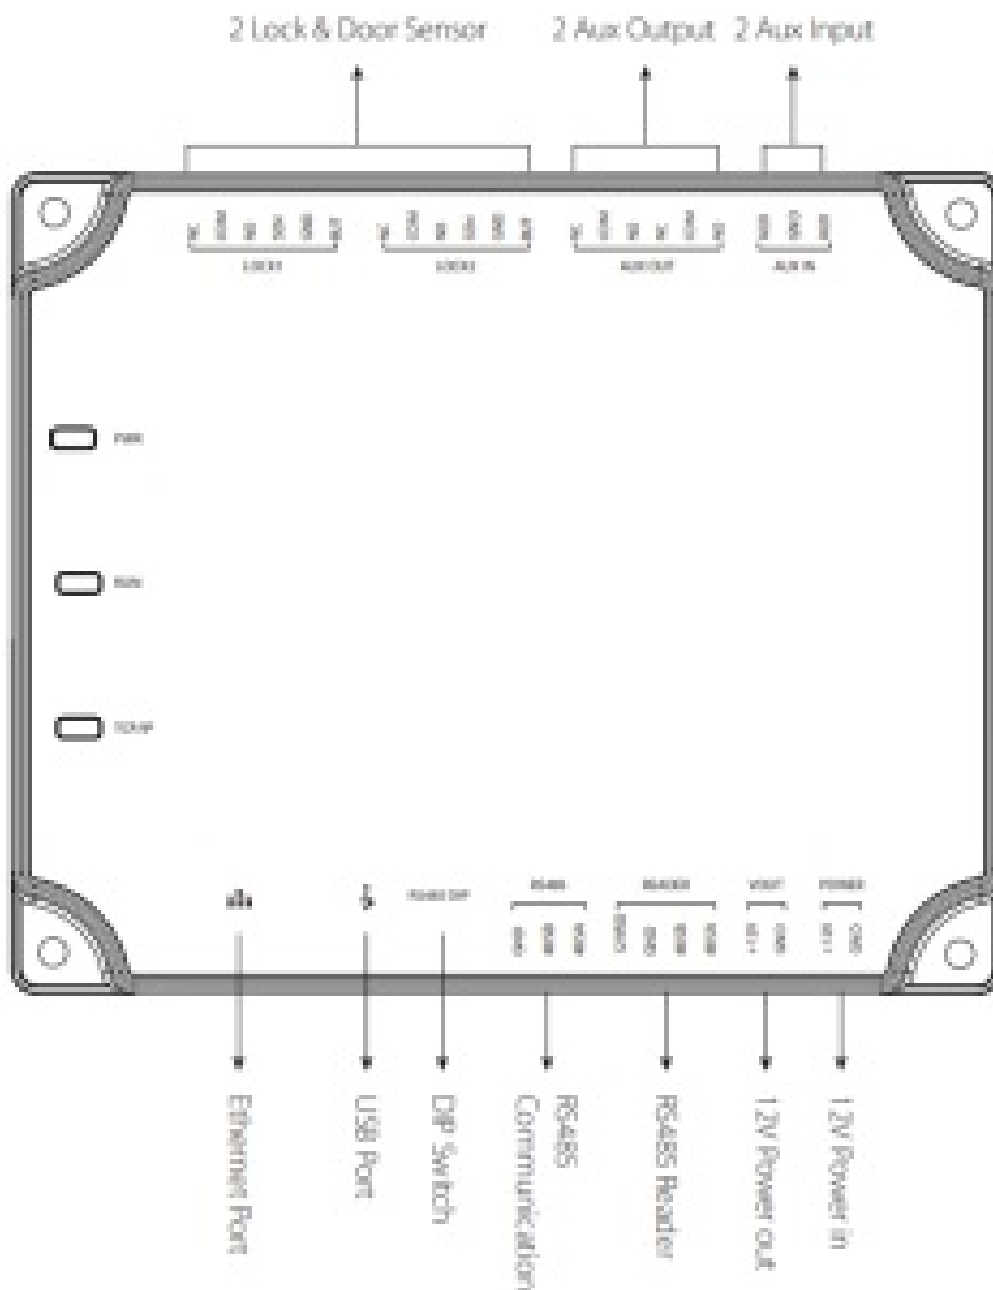


Figure 1

LED Indicators

- **LINK Solid Green LED** indicates TCP/IP communication is normal.
- **Flashing (ACT) Yellow LED** indicates data communication is in progress

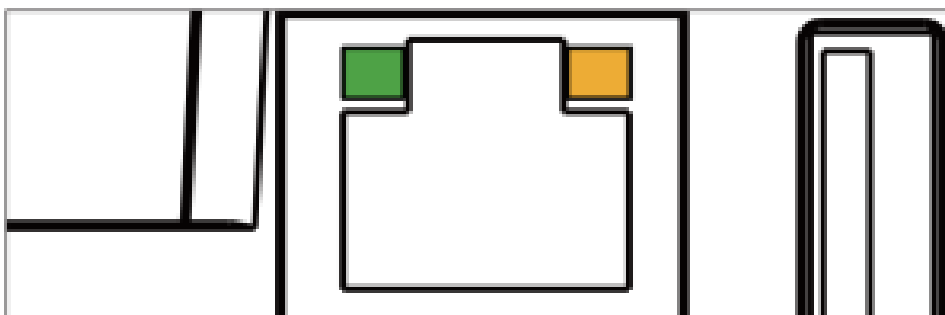


Figure 2

- **Solid (POWER) Red LED** indicates the panel is powered on.

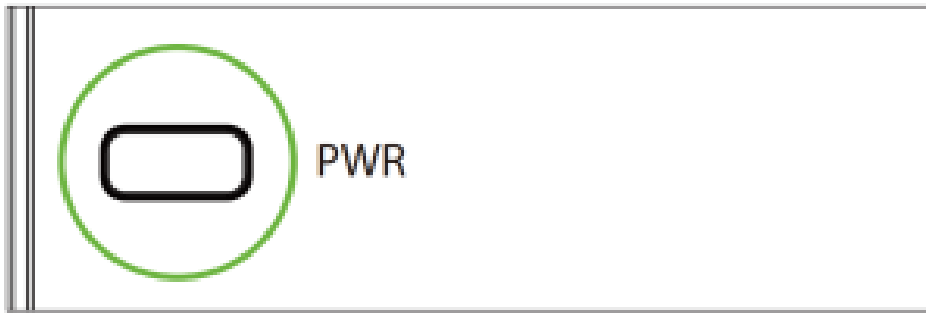


Figure 3

-  **Slowly flashing Green LED** indicates normal working status of the system.

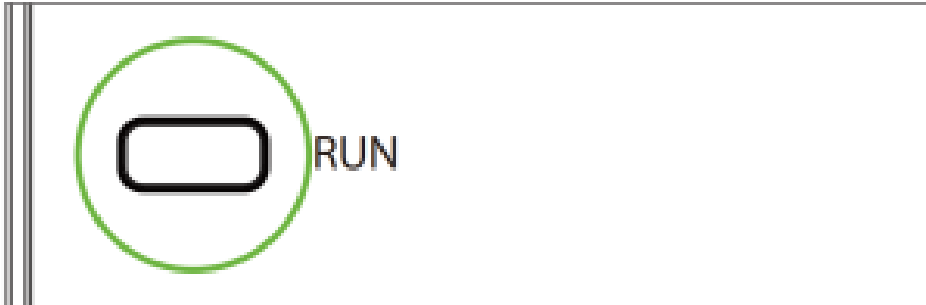


Figure 4

-  **TCP/IP continuously flashing Yellow LED** indicates data transmission.
-  **TCP/IP slowly flashing Yellow LED** indicates real-time monitoring status.



Figure 5

Panel Installation

Wall Mounting

- **Step 1**
Drill holes on the wall.

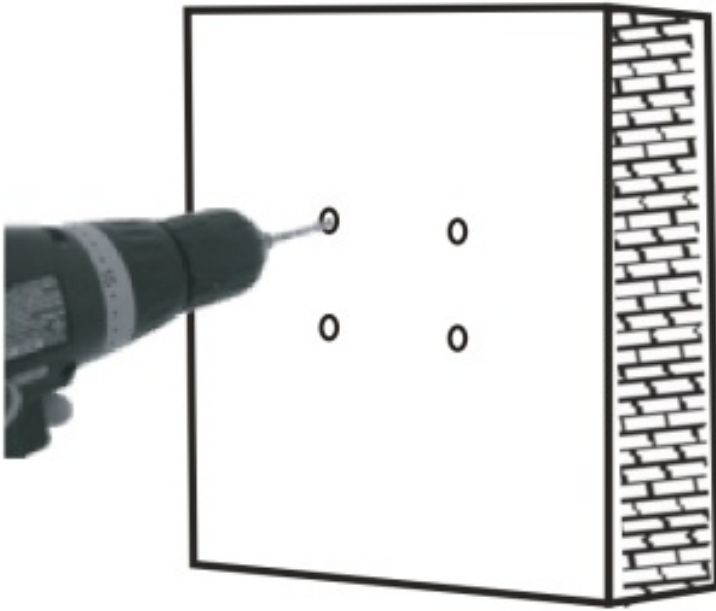


Figure 6

- **Step 2**

Fix the device with four screws

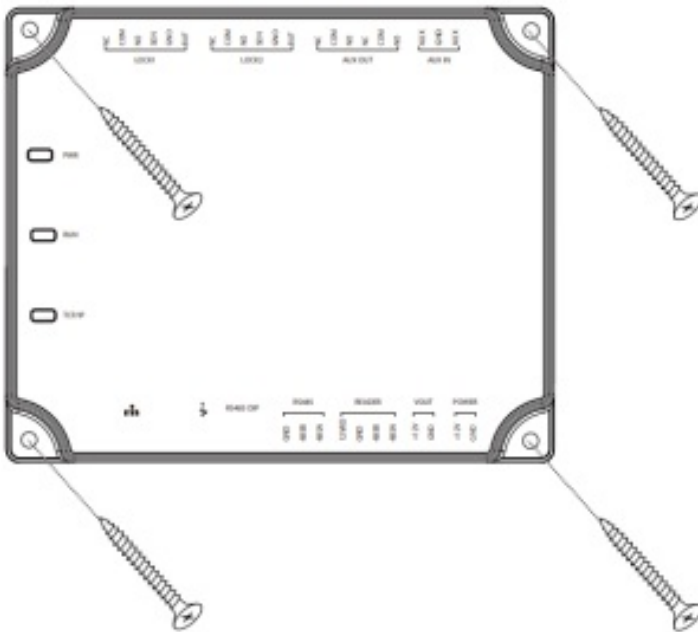


Figure 6

Rail Mounting

- **Step 1**

Fix the guide rail on the wall.

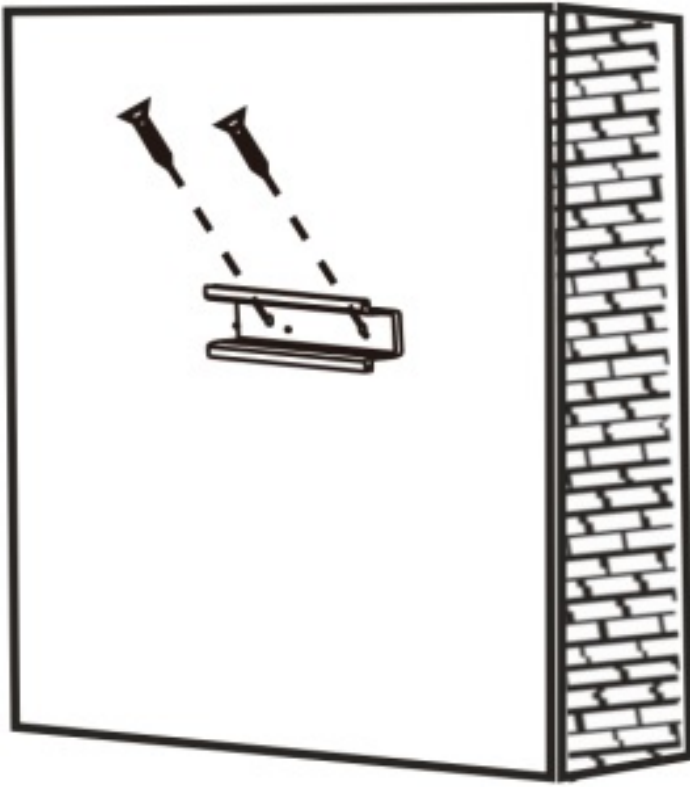


Figure 7

- **Step 2**

Fix the device to the rail mounting.

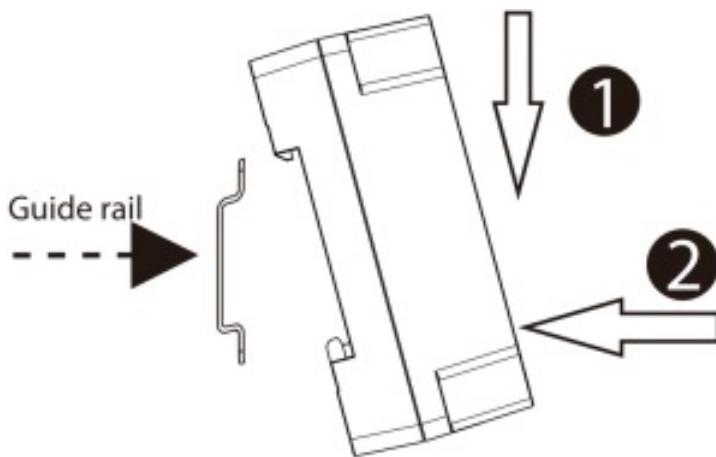


Figure 7

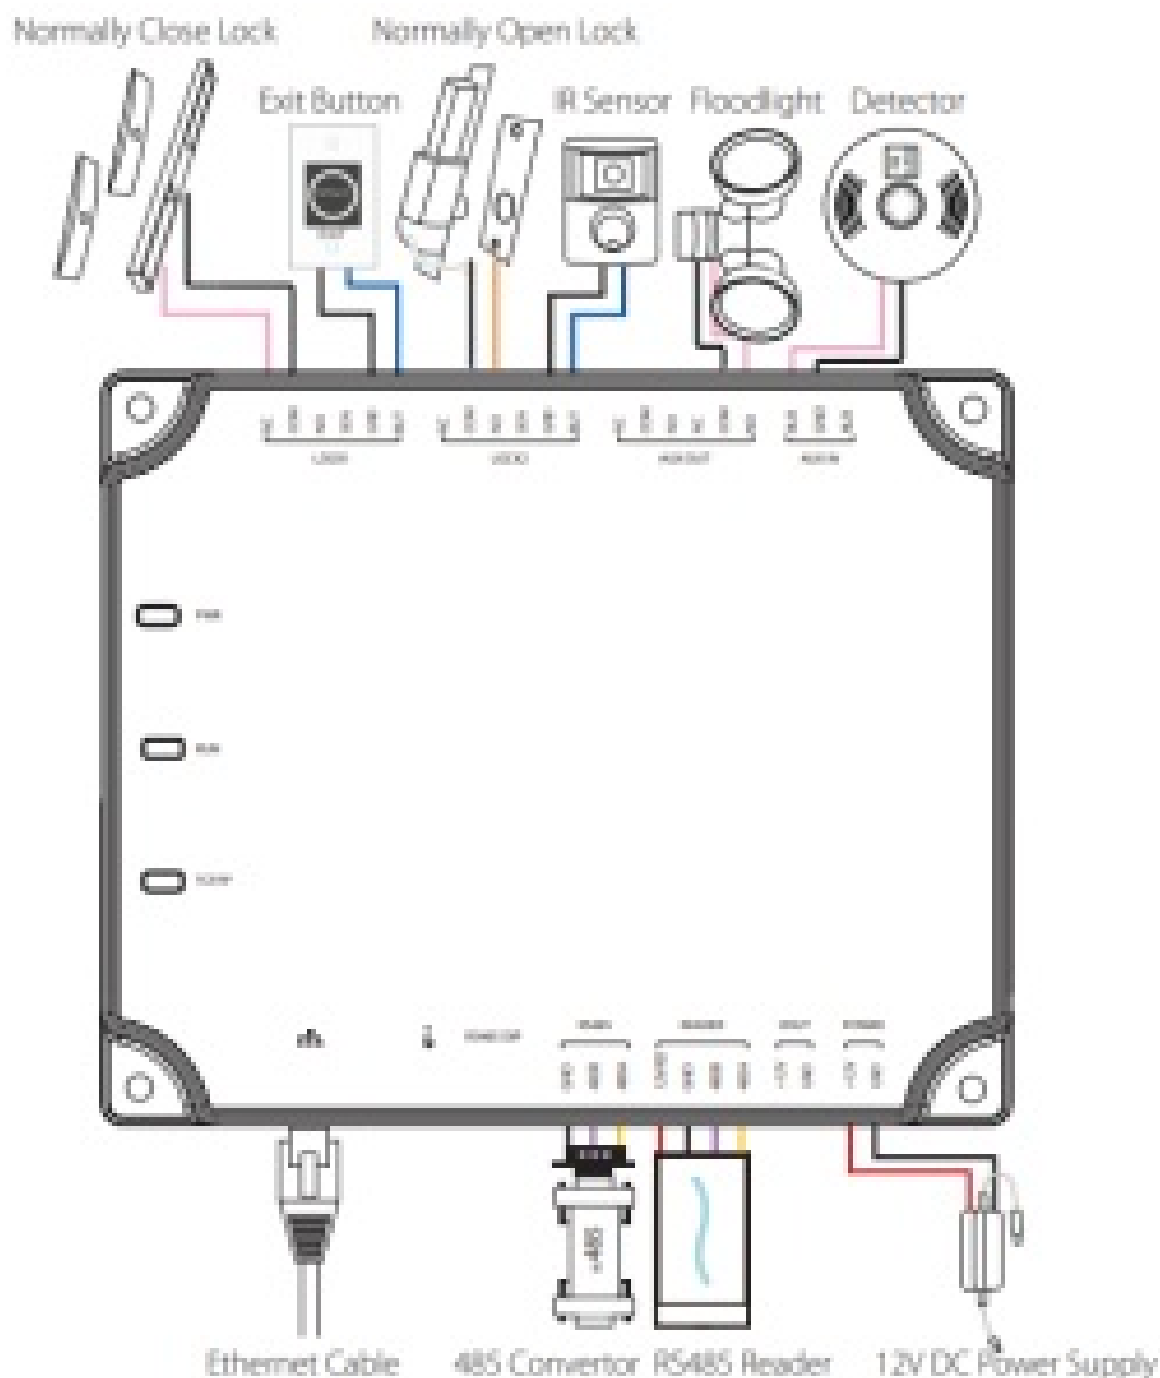


Figure 8

The auxiliary input may be connected to infrared body detectors, fire alarms, or smoke detectors. The auxiliary output may be connected to alarms, cameras or door bells, etc.

Installation Diagram


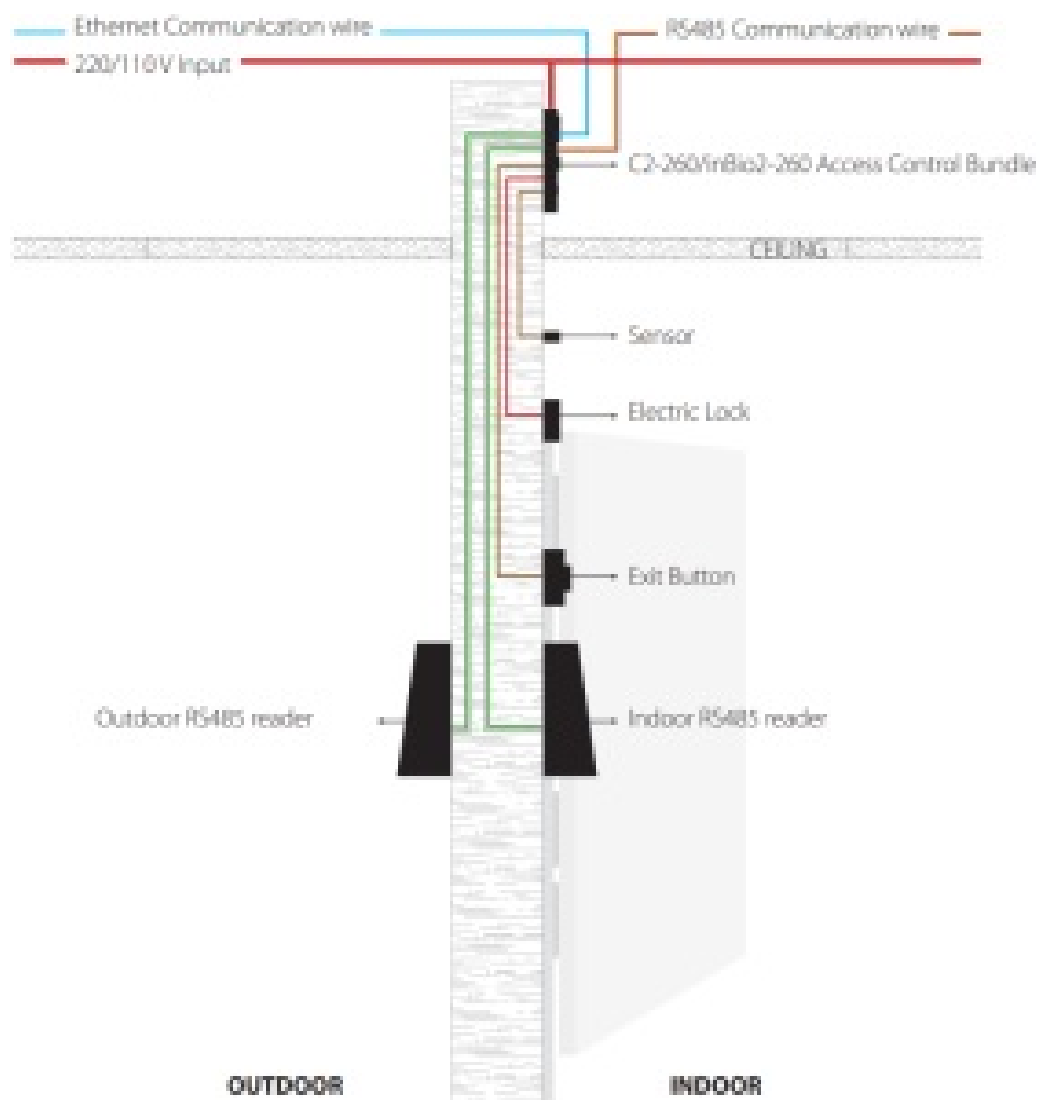


Figure 9

RS485 Readers Connection

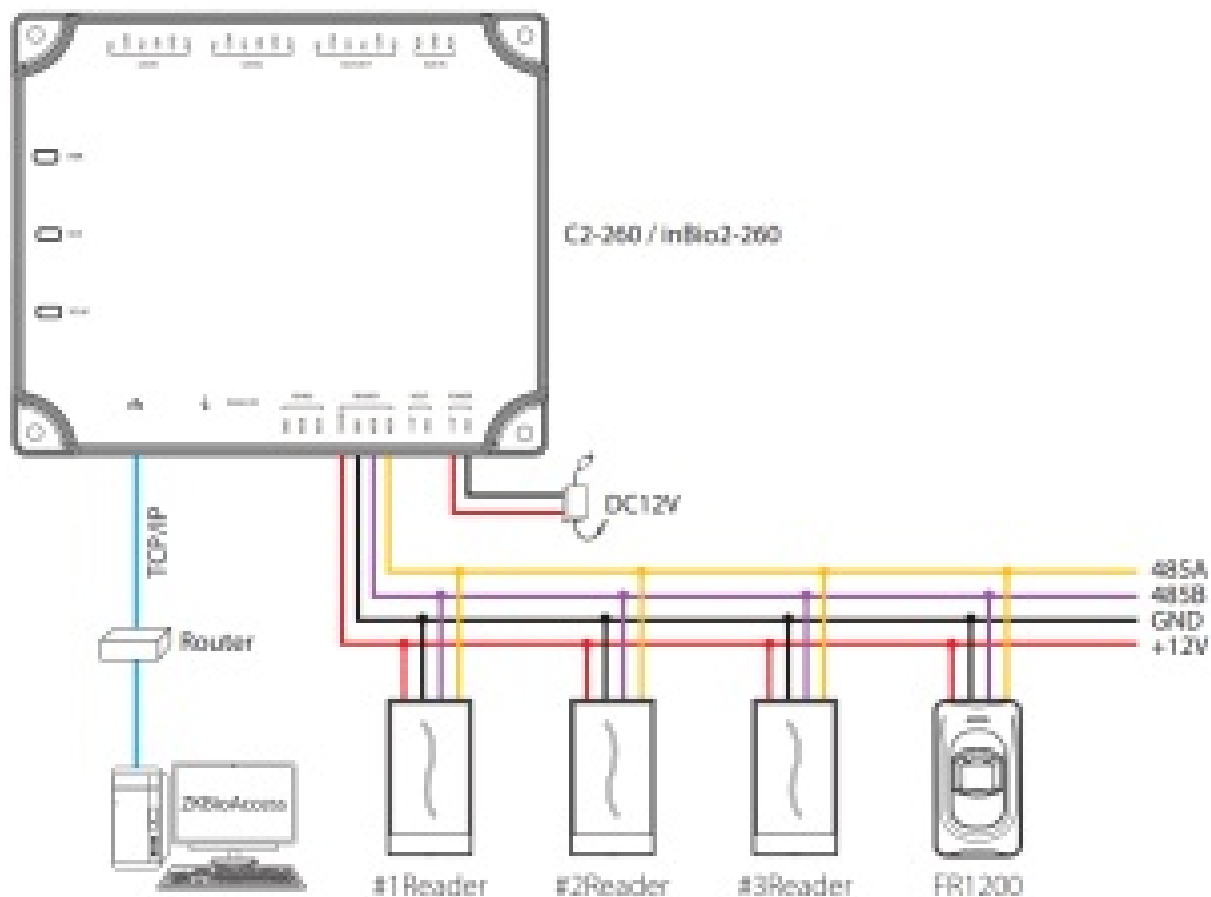


Note:

1. It's recommended to connect maximum four readers to one C2-260/inBio2-260.
2. A single RS485 reader interface can supply a maximum of 750 mA (12V) current. So the entire current consumption should be less than this max value when the readers share the power with the panel.
3. Only in Bio2-260 supports connection with FR1200 readers.

Additional Modules of RS485


Connection with DM10

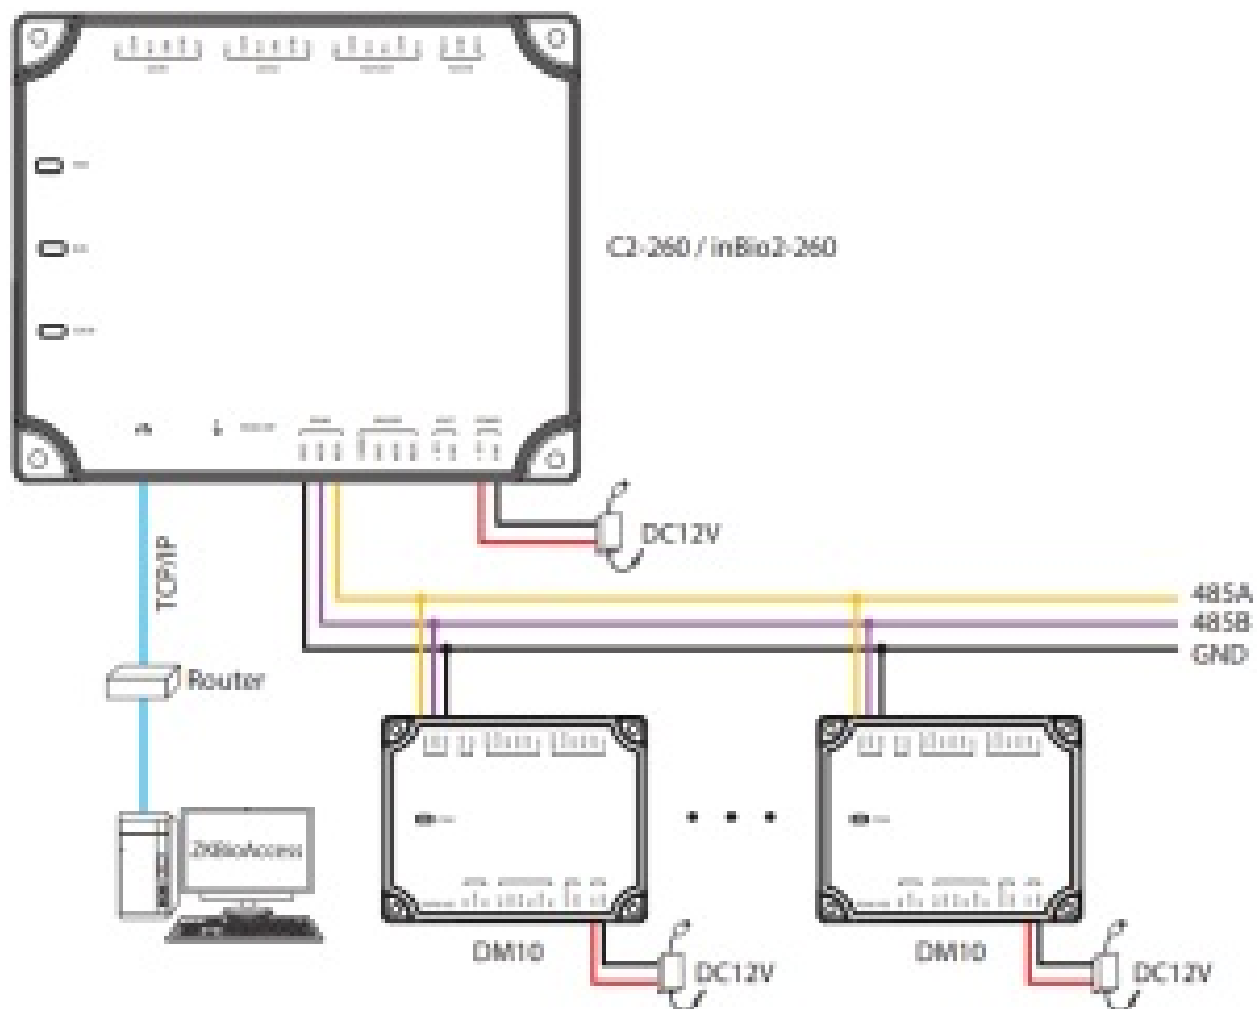

Note:

1. A C2-260/inBio2-260 can connect to maximum eight DM10 modules..
2. Each DM10 module requires a separate power supply.


Connection with AUX485

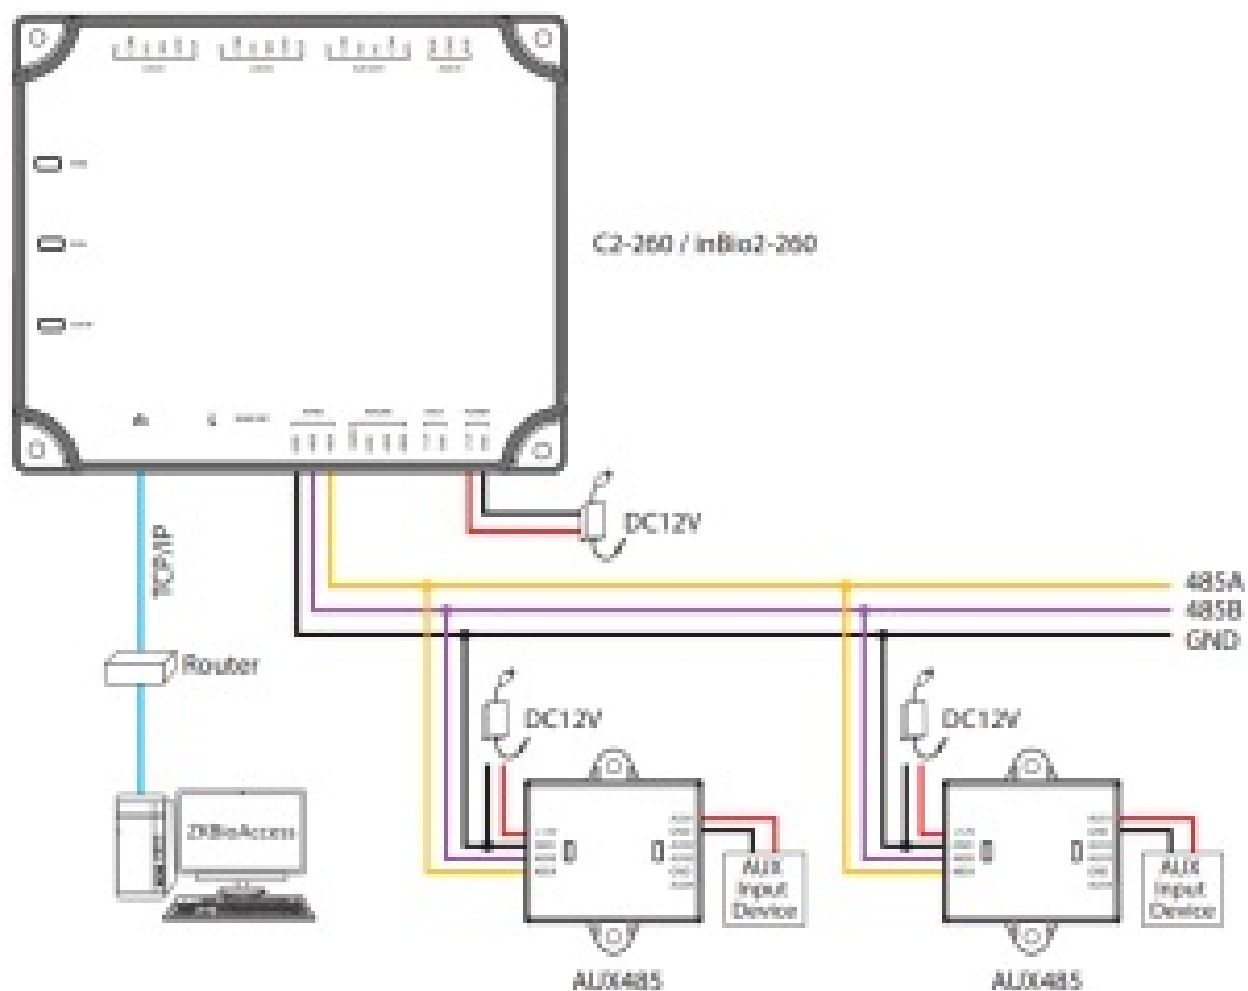

Note:

1. A C2-260/inBio2-260 can connect to maximum two AUX485 modules.
2. Each AUX485 module can connect to maximum four auxiliary devices.
3. Each AUX485 module requires a separate power supply.

Connection with WR485

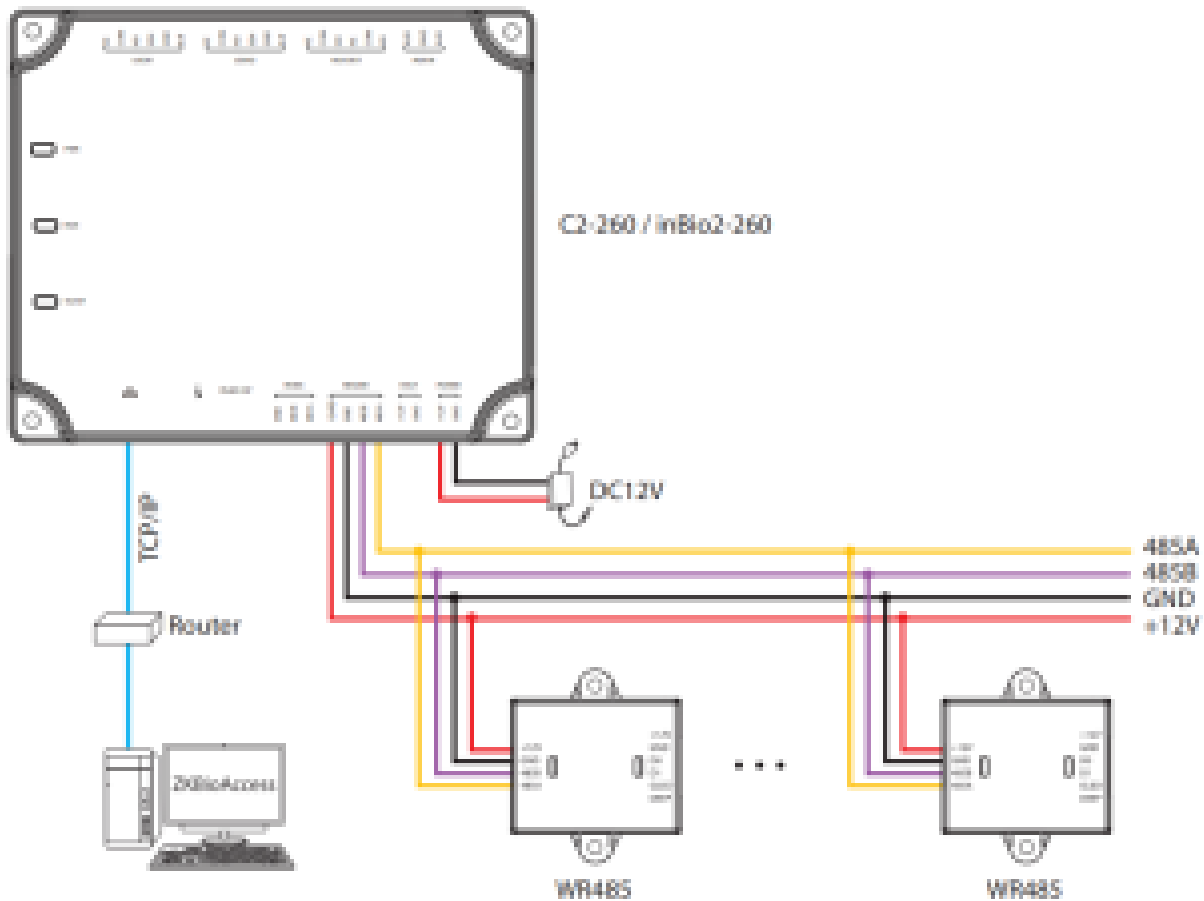

Note:


1. A C2-260/inBio2-260 can connect to maximum four WR485 modules.

Connection to ZKBioAccess Software

Here the connection between C2-260/inBio2-260 and AUX485 is used as an example to illustrate the software settings. After proper wiring, perform the following steps:

1. Set the RS485 address of AUX485 from 1-15.
2. **Inclusion of C2-260/inBio2-260 to software:**


Open the ZKBio Access Software. Click **[Access]** > **[Device]** > **[Device]** > **[New]**, enter the relevant information, and then click **[OK]**.

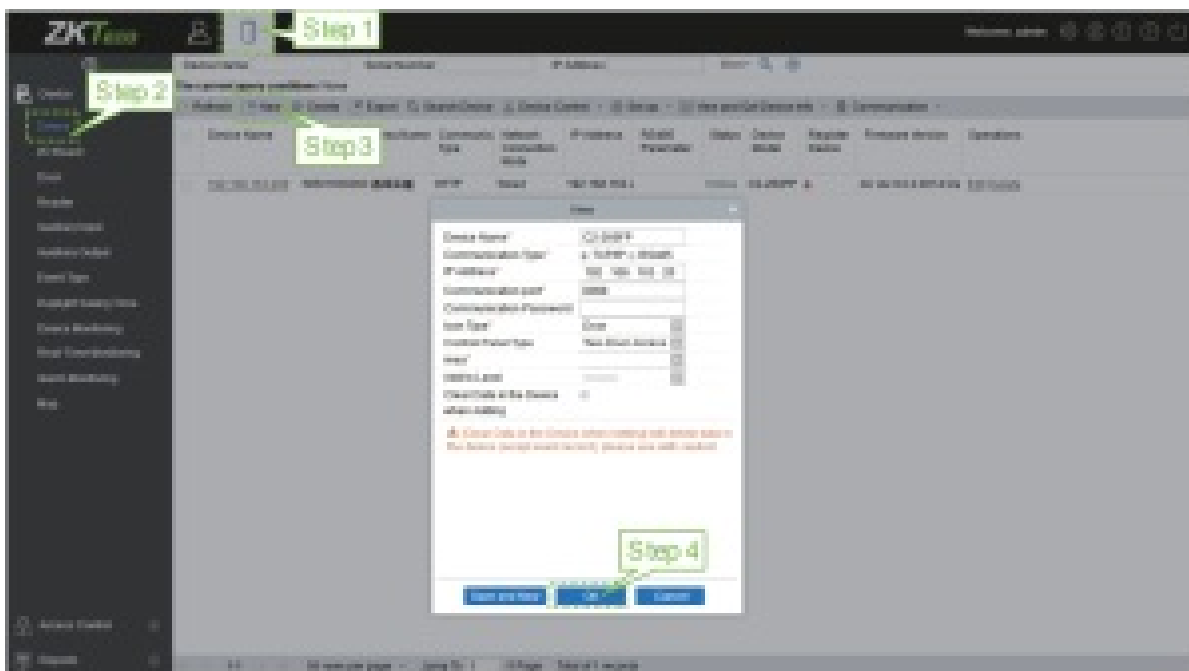


After adding successfully, the TCP/IP indicator of inBio2-260 ashes every two seconds, indicating the communication is normal.

3. Inclusion of AUX485 module to the software:

Click **[Device] > [I/O Board] > [New]**, enter the name and RS485 address of AUX485, and then click **[OK]**.

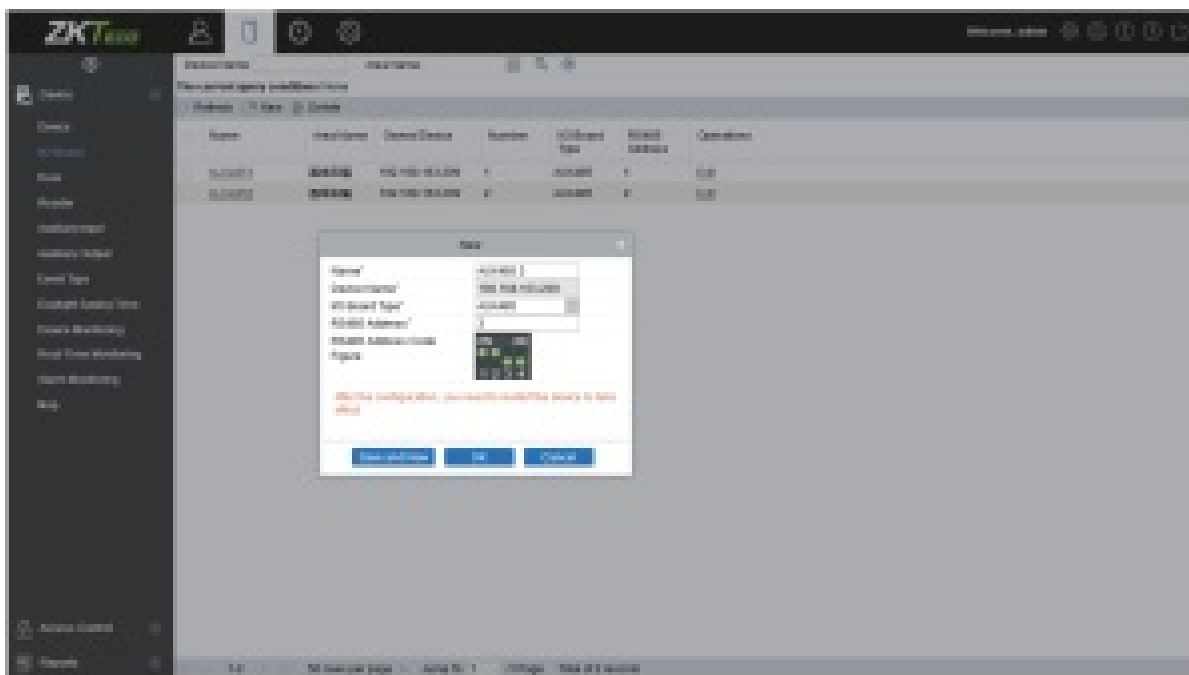

4. Click **[Device] > [Auxiliary Input]** to view all the auxiliary inputs

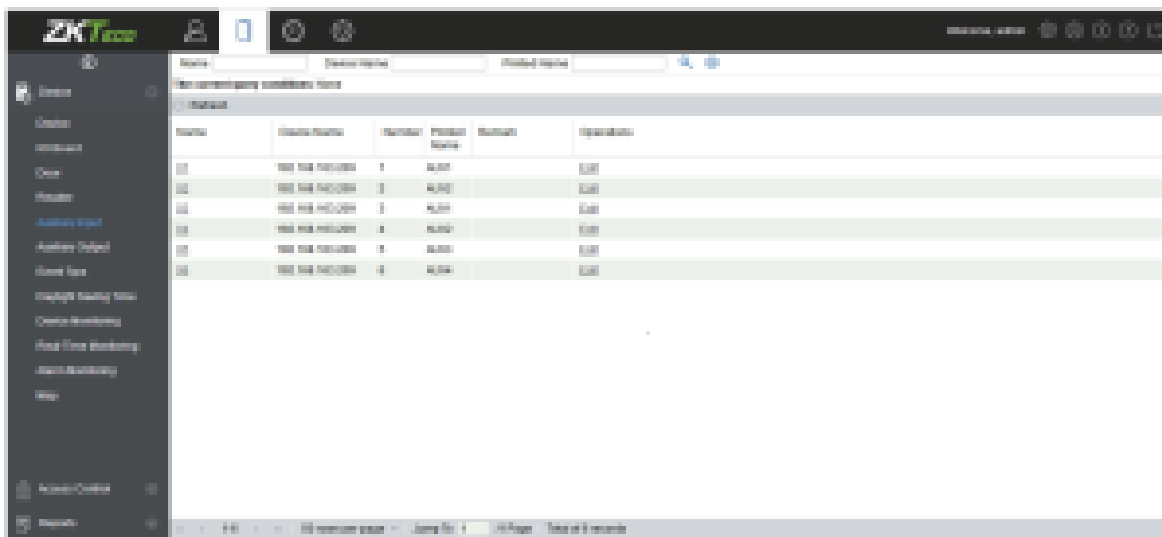

Note: For other specific operations, please refer to **ZKBioAccess User Manual**.

Specifications

| | |
|--|---|
| Model | C2-260 |
| Number of Doors Supported by Default | 2 |
| Number of Auxiliary Inputs | 2 |
| Number of Auxiliary Outputs | 2 |
| RS485 Extension Port | 1 |
| RS485 Reader Port | 1 |
| Number of Readers Supported | 4 |
| Types of Readers Supported | RS485 card reader, Wiegand reader (WR485) |
| DM10 (Single-Door Extension Board) (Optional) | Max. 8 |
| AUX485 (RS485-4 Aux. IN Converter) (Optional) | 2 |
| WR485 (RS485-Weigand Converter) (Optional) | 4 |

| | |
|------------------------------|-------------------------------|
| Card Capacity | 30,000 |
| Log Capacity | 200,000 |
| Communication | TCP/IP, RS458 |
| CPU | 32-bit 1.0GHz |
| RAM | 64MB |
| Power | 9.6V – 14.4V DC |
| Dimensions (L*W*H) | 116.47*96.49*31.40 mm |
| Operating Temperature | -10°C to 50°C / 14°F to 122°F |
| Operating Humidity | 20% to 80% |

www.zkteco.eu

Copyright © 2020 ZKTECO CO., LTD. All Rights Reserved.



Documents / Resources

| | |
|---|---|
| The image shows the cover of a 'Quick Start Guide' for the ZKTECO C2-260 InBio2-260 Access Controller. The cover is white with a grey and green design, featuring the ZKTECO logo and the product name. | <p>ZKTECO C2-260 InBio2-260 Access Controller [pdf] User Guide C2-260, C2-260FP, InBio2-260 Access Controller</p> |
|---|---|