



ZKTeco LockerPad-7B Intelligent Locker System User Guide

[Home](#) » [ZKTECO](#) » ZKTeco LockerPad-7B Intelligent Locker System User Guide

Contents [[hide](#)]


- [1 ZKTeco LockerPad-7B Intelligent Locker System](#)
- [2 Overview](#)
- [3 RS485 Connection of Lock Control Board](#)
- [4 Lock Control Board Address Code Settings](#)
- [5 Wiegand Input Connection](#)
- [6 Power Connection](#)
- [7 Parameter Settings](#)
- [8 Storage and Pick-up](#)
- [9 View Records](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)




ZKTeco LockerPad-7B Intelligent Locker System



Overview

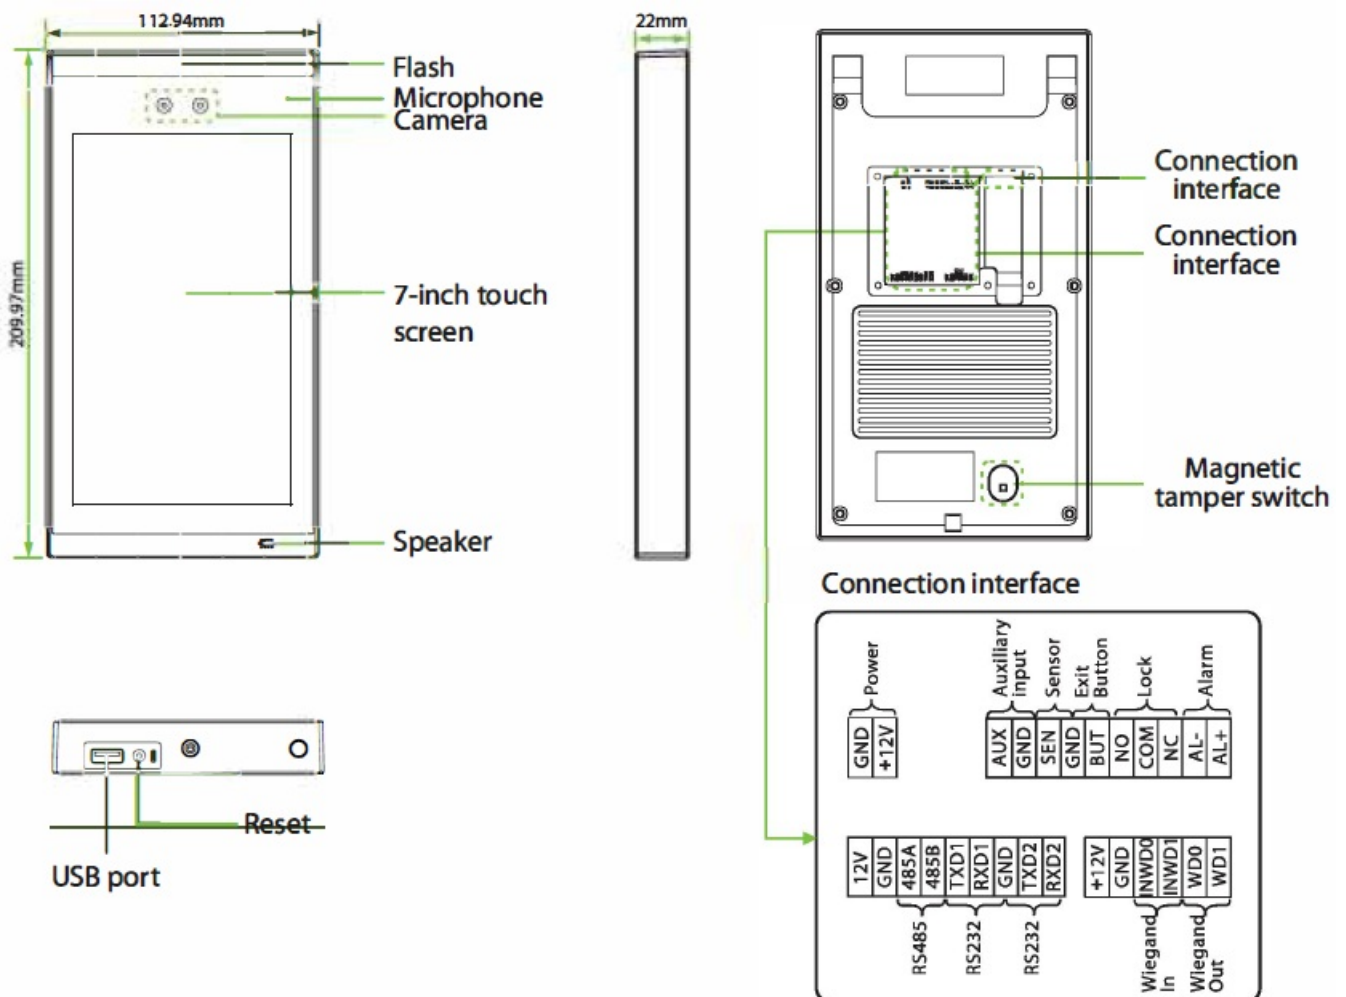


RS485 Connection of Lock Control Board

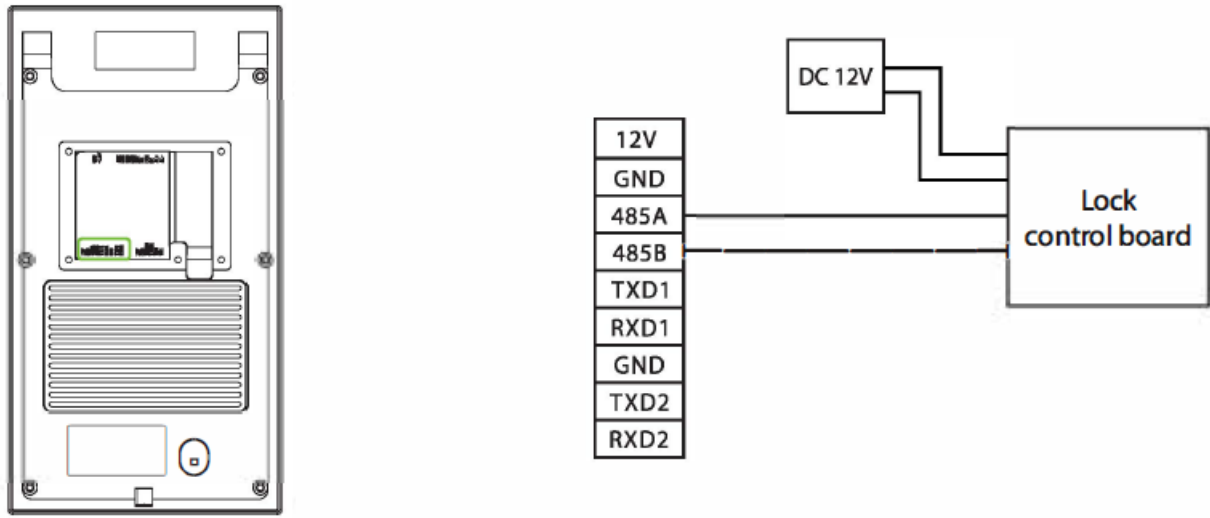

Notice: One lock control board could be powered by LockerPad-7B, but more than one board, they need be powered by independent power.

Lock Control Board Address Code Settings


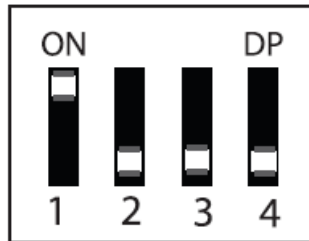


Board ID	Lock Range	Switch1	Switch2	Switch3	Switch4
1	1-12	1	0	0	0
2	13-24	0	1	0	0
3	25-36	1	1		0



4	37-48	0	0	1	0
5	49-60			1	0
6	61 – 72	0	1	1	0
7	73-84	1	1	1	0
8	85-96	0	0	0	1

Notice: When the Compartment cannot be unlocked after verification, or the lock is unlocked incorrectly, please check whether the lock control board address code is set correctly.

Wiegand Input Connection

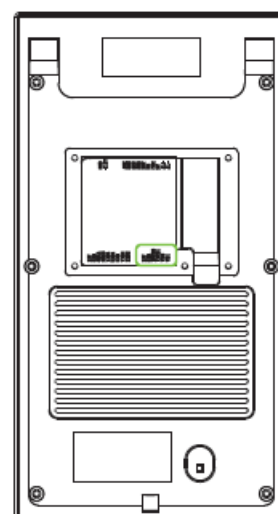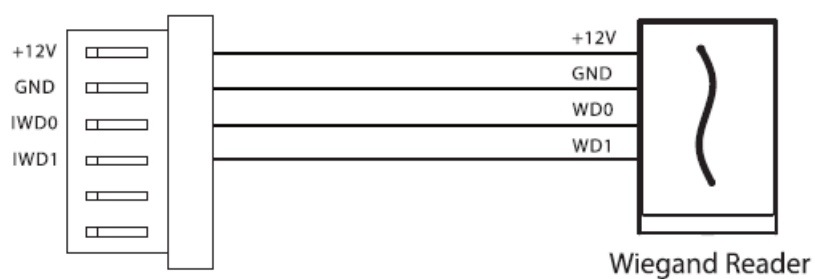

Power Connection

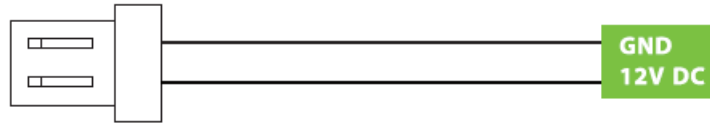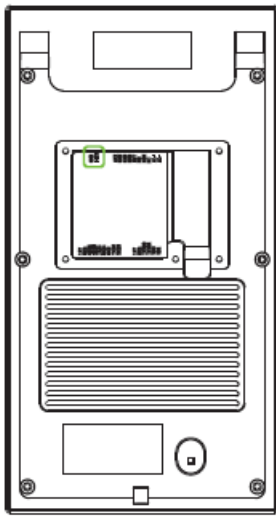

Recommended power supply

1. 12V \pm 10%, at least 3000mA.
2. To share the power with other devices, use a power supply with higher current ratings.

Parameter Settings


Parameter Name	Default Value	Other Value
Allow Visitor to Use	Open	Close
Allow Sharing the Compartment	Close	Open
Allow Halfway Out	Open	Close

Wiegand Format	Wiegand26	Wiegand26 26a; Wiegand34 34a; Wiegand36 36a; Wiegand37 37a; WiegandSO
Wiegand Input Bits	26	34;36;37;50
Compartment Size	Small Compartment	Medium Compartment Large Compartment
Number of Compartment	12	1-96

Notice: On this document, we just guide you the basic parameters, if you want more details about settings, please check user manual document.

Storage and Pick-up

Storage: Click this icon to enter the storage process. When there are multiple types of compartments, the user successfully authenticates and selects the desired type of compartment, and the compartment is automatically unlocked.

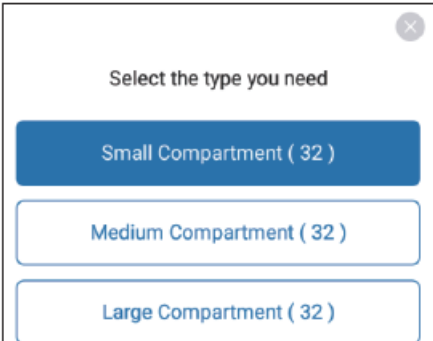

Select the type you need

Small Compartment (32)


Medium Compartment (32)

Large Compartment (32)

Pick-up: Click this icon to enter the pick-up process.




- If the administrator has set “Allow Halfway Out” after clicking the pickup, the system will prompt a question asking whether to set as [All Out] or [Halfway Out].
- If the administrator does not set to Allow Halfway Out, the user can only pick up once and must take out all

items at one time.

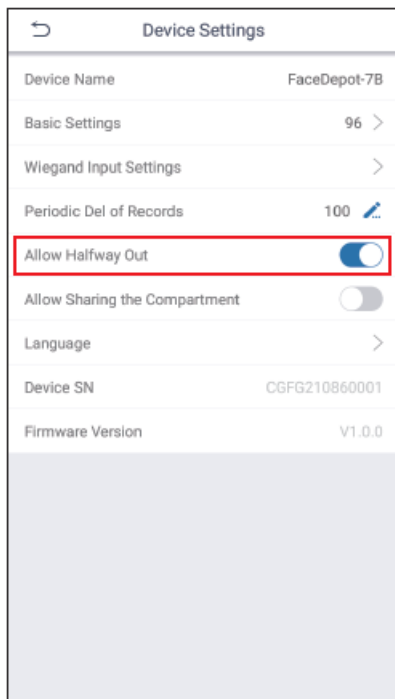

View Records

Click [Administrator Login] > [Settings] > [Record] on the device to view the records.

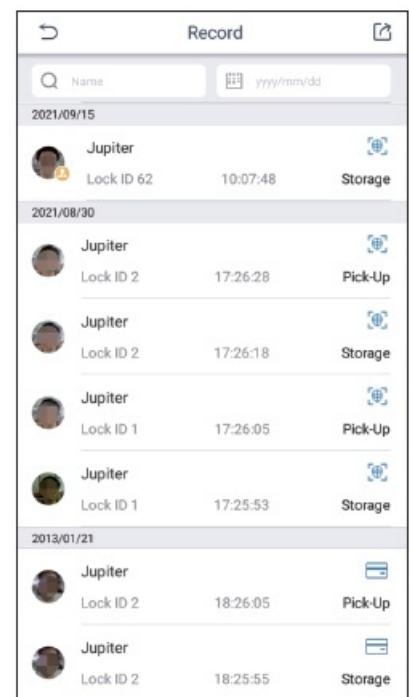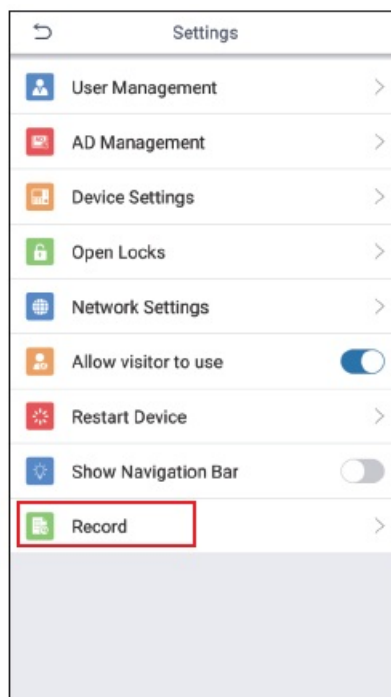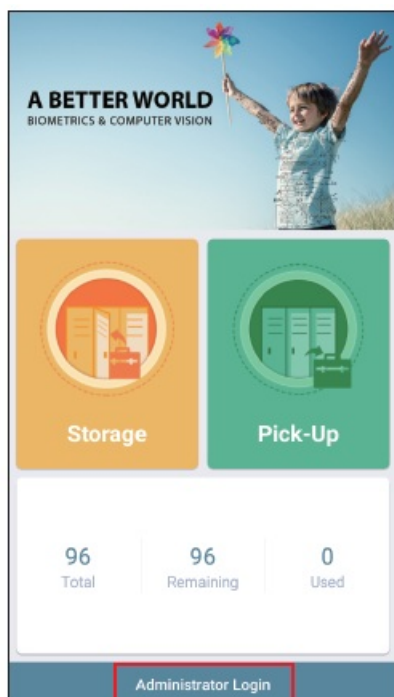

ZKTeco Industrial Park, No. 32, Industrial Road, Tangxia Town, Dongguan, China.
Phone : +86 769-82109991 Fax : +86 755 -89602394 www.zkteco.com Copyright e 2021 ZKTECO CO., LTD. All Rights Reserved.

Documents / Resources



[ZKTeco LockerPad-7B Intelligent Locker System](#) [pdf] User Guide
LockerPad-7B Intelligent Locker System, LockerPad-7B, Intelligent Locker System