



# ZKTECO ProFace X (DS) Body Temperature Measurement Access Installation Guide

[Home](#) » [ZKTECO](#) » ZKTECO ProFace X (DS) Body Temperature Measurement Access Installation Guide 



**Installation Guide**  
**ProFace X (DS)**  
**Version: 1.0**





Due to regular upgrades of systems and products, ZKTeco could not guarantee exact consistency between the actual product and the written information in this manual.

## Contents

- [1 How to Install the Device?](#)
- [2 Door Sensor, Exit Button & Alarm Connection](#)
- [3 Wiegand Reader Connection](#)
- [4 Barrier Connection](#)
- [5 Power Connection](#)
- [6 Ethernet Connection](#)
- [7 Printer Connection](#)
- [8 Download Center](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)


## How to Install the Device?

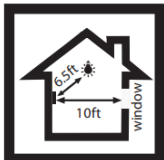Please refer to the following recommendations for installation.

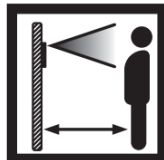			
KEEP DISTANCE	AVOID GLASS REFRACTION	AVOID DIRECT SUNLIGHT AND EXPOSURE	KEEP EFFECTIVE DISTANCE 0.3-2.5m

### Install on the wall

1. Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
2. Fix the backplate on the wall using wall mounting screws.
3. Attach the device to the backplate.
4. Fasten the device to the backplate with a security screw.

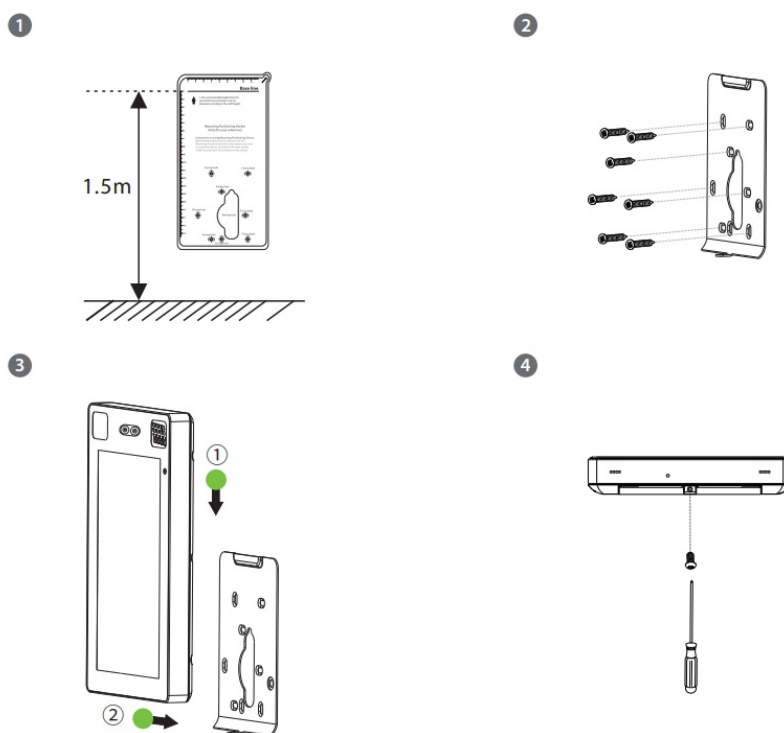


### Install on the barrier gate


Please thread the wire through the bracket before installation.

1. Drill a hole on the barrier gate, insert the bracket into the hole and fix it with a nut.
2. Adjust the angle of the device.



1

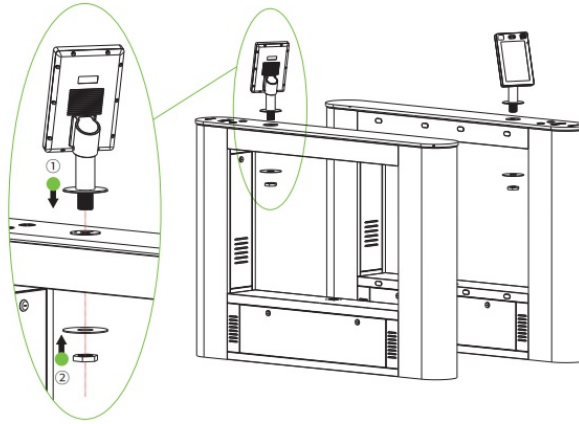



2

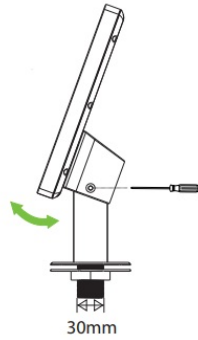



## Door Sensor, Exit Button & Alarm Connection

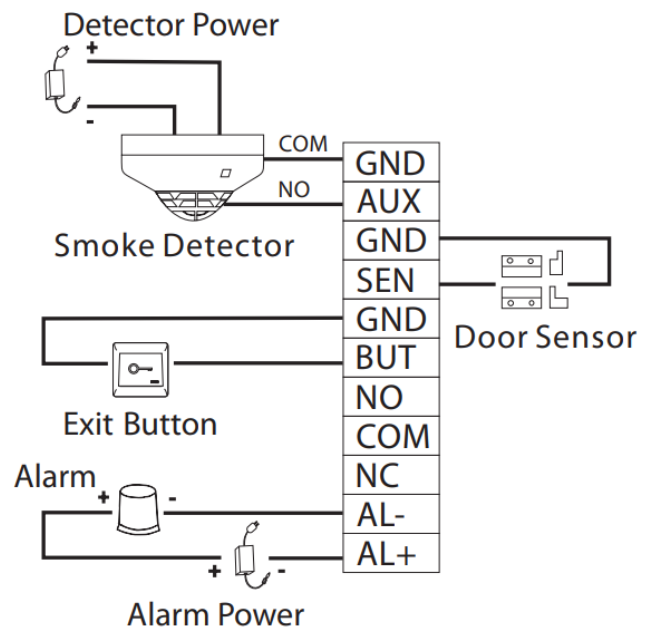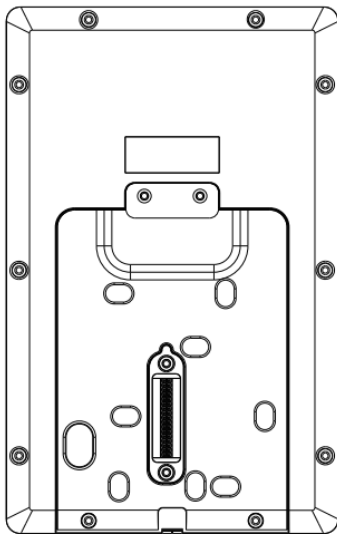



## Wiegand Reader Connection

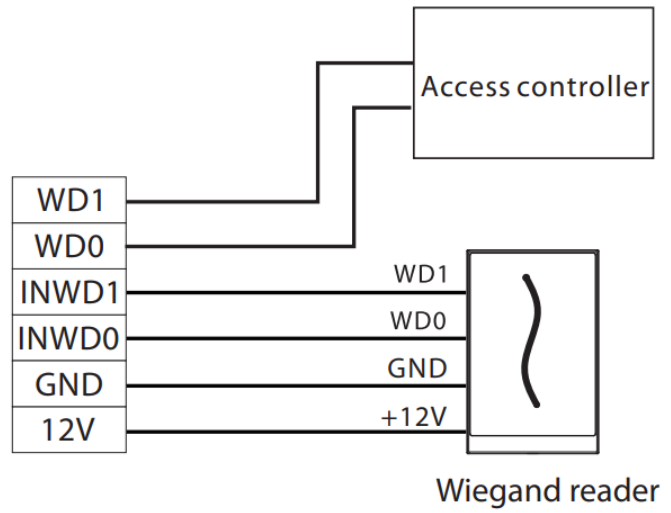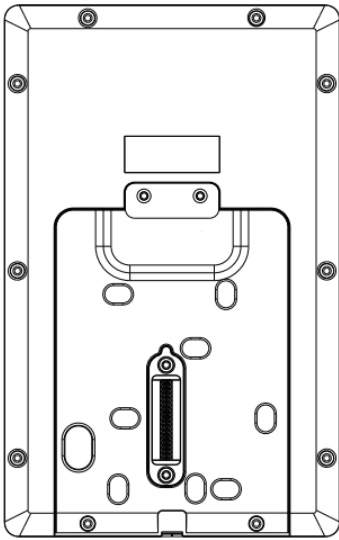

### Barrier Connection

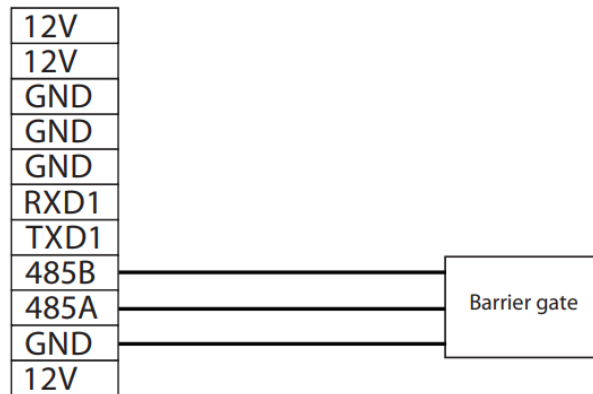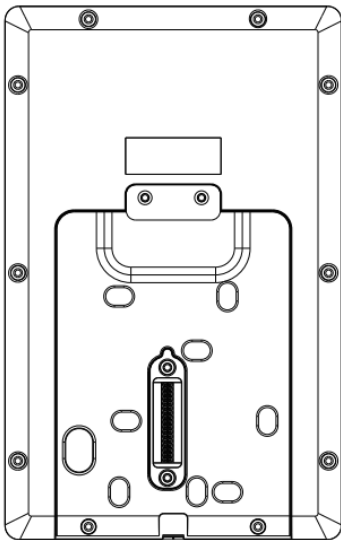


### RS485 Connection

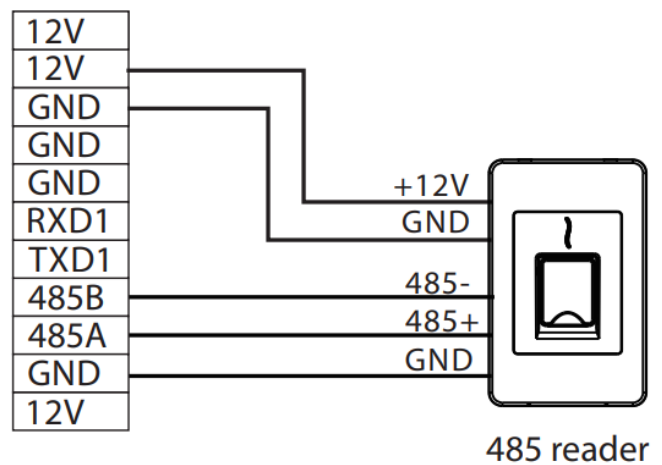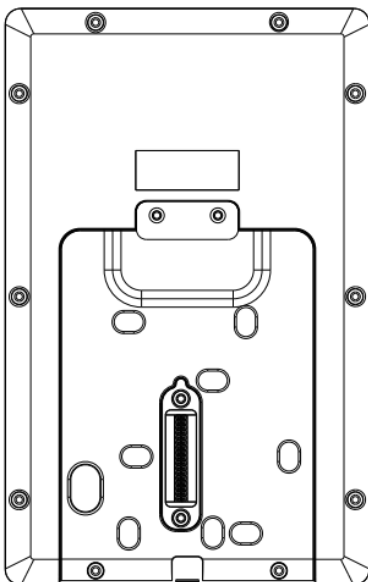

**Note:** 485A and 485B can be connected to the Barrier gate or the 485 Reader, separately, but cannot be connected to the gate and reader at the same time.


## Power Connection

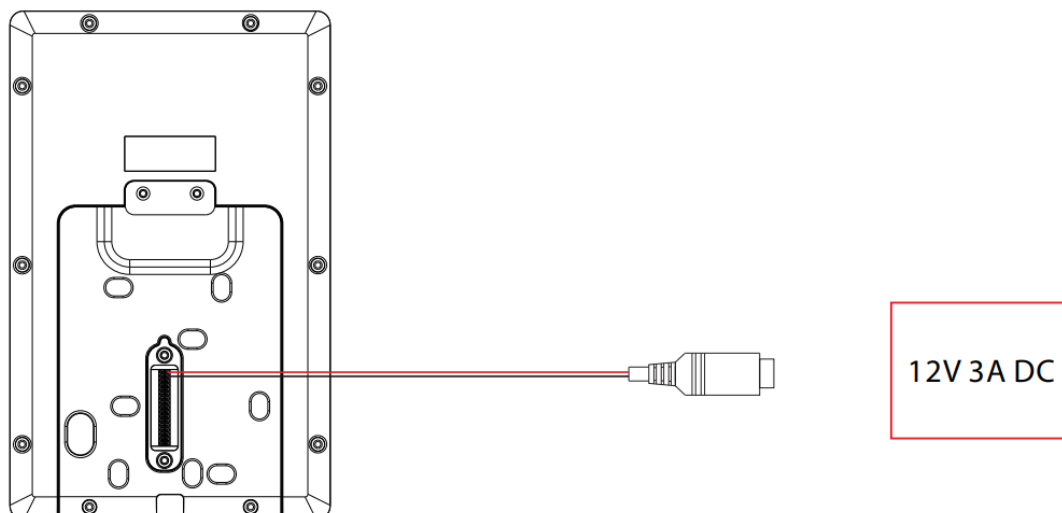

- Recommended power supply: 12V – 3A
- To share the power with other devices, use a power supply with higher current ratings.

## Ethernet Connection



Connect the device and computer software over an Ethernet cable. An example is shown below:

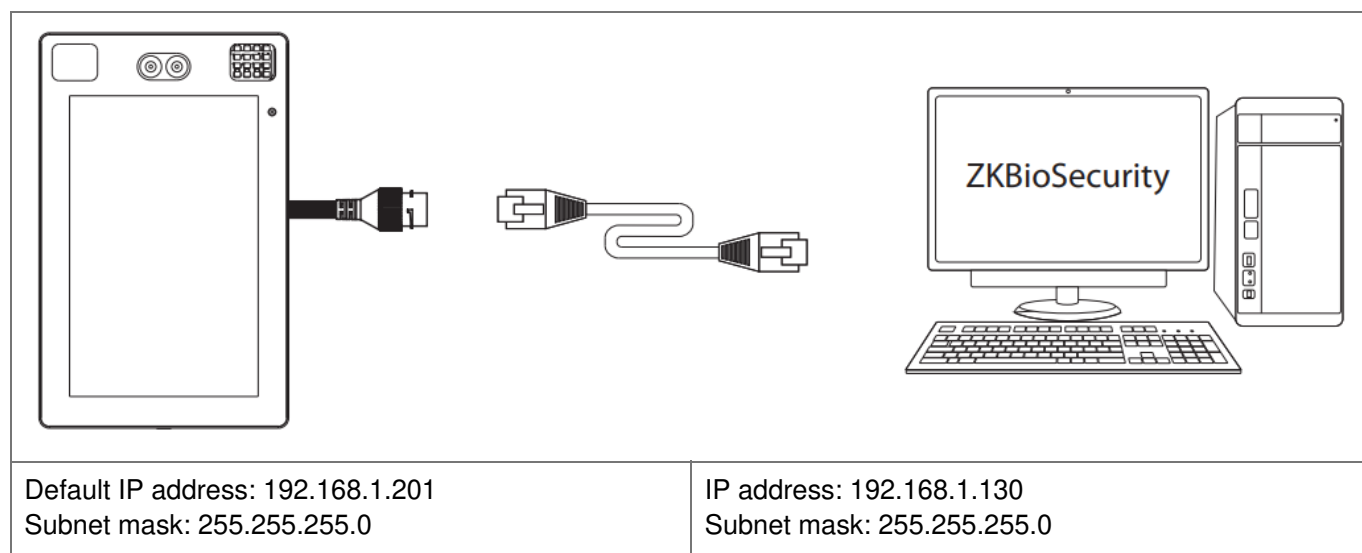

**Note:** In LAN, the IP addresses of the server (PC) and the device must be in the same network segment when connecting to ZKBioSecurity software.

Click on [Comm.] > [Ethernet] > [IP Address], input the IP address and click on [OK].

## Printer Connection

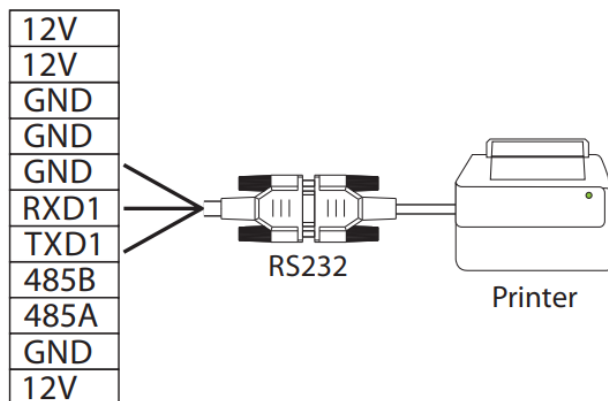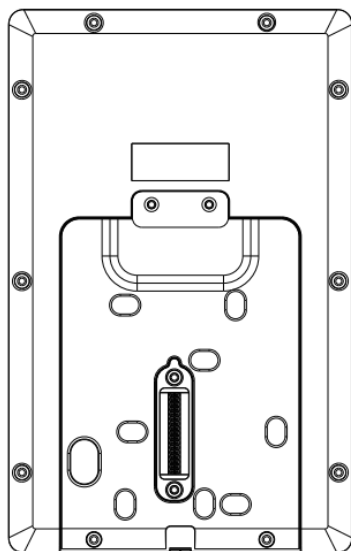

## Download Center

Scan the QR Code to download the User Manual, Installation Guide, and Quick Start Guide.



[https://www.zkteco.com/en/download\\_catgory/41.html](https://www.zkteco.com/en/download_catgory/41.html)

ZKTeco Industrial Park, No. 32, Industrial Road,  
Tangxia Town, Dongguan, China.

Phone : +86 769 – 82109991

Fax : +86 755 – 89602394

[www.zkteco.com](http://www.zkteco.com)



<https://www.zkteco.com/en/>

Copyright©2022 ZKTECO CO., LTD. All Rights Reserved.

## Documents / Resources



[ZKTECO ProFace X \(DS\) Body Temperature Measurement Access](#) [pdf] Installation Guide  
ProFace X DS, Body Temperature Measurement Access, Temperature Measurement Access, P  
roFace X DS, Measurement Access, Access Device

## References

- [ZKTeco | Home Page](#)