



Contents [[hide](#)]


- [1 ZKTECO SenseFace 3 Series Multi-Biometric Access Control Terminal](#)
- [2 Overview](#)
- [3 Installation Environment](#)
- [4 Ethernet Connection](#)
- [5 Power Connection](#)
- [6 Lock Relay Connection](#)
- [7 User Registration](#)
- [8 MORE INFORMATION](#)
- [9 FAQs](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)



ZKTECO SenseFace 3 Series Multi-Biometric Access Control Terminal



Overview

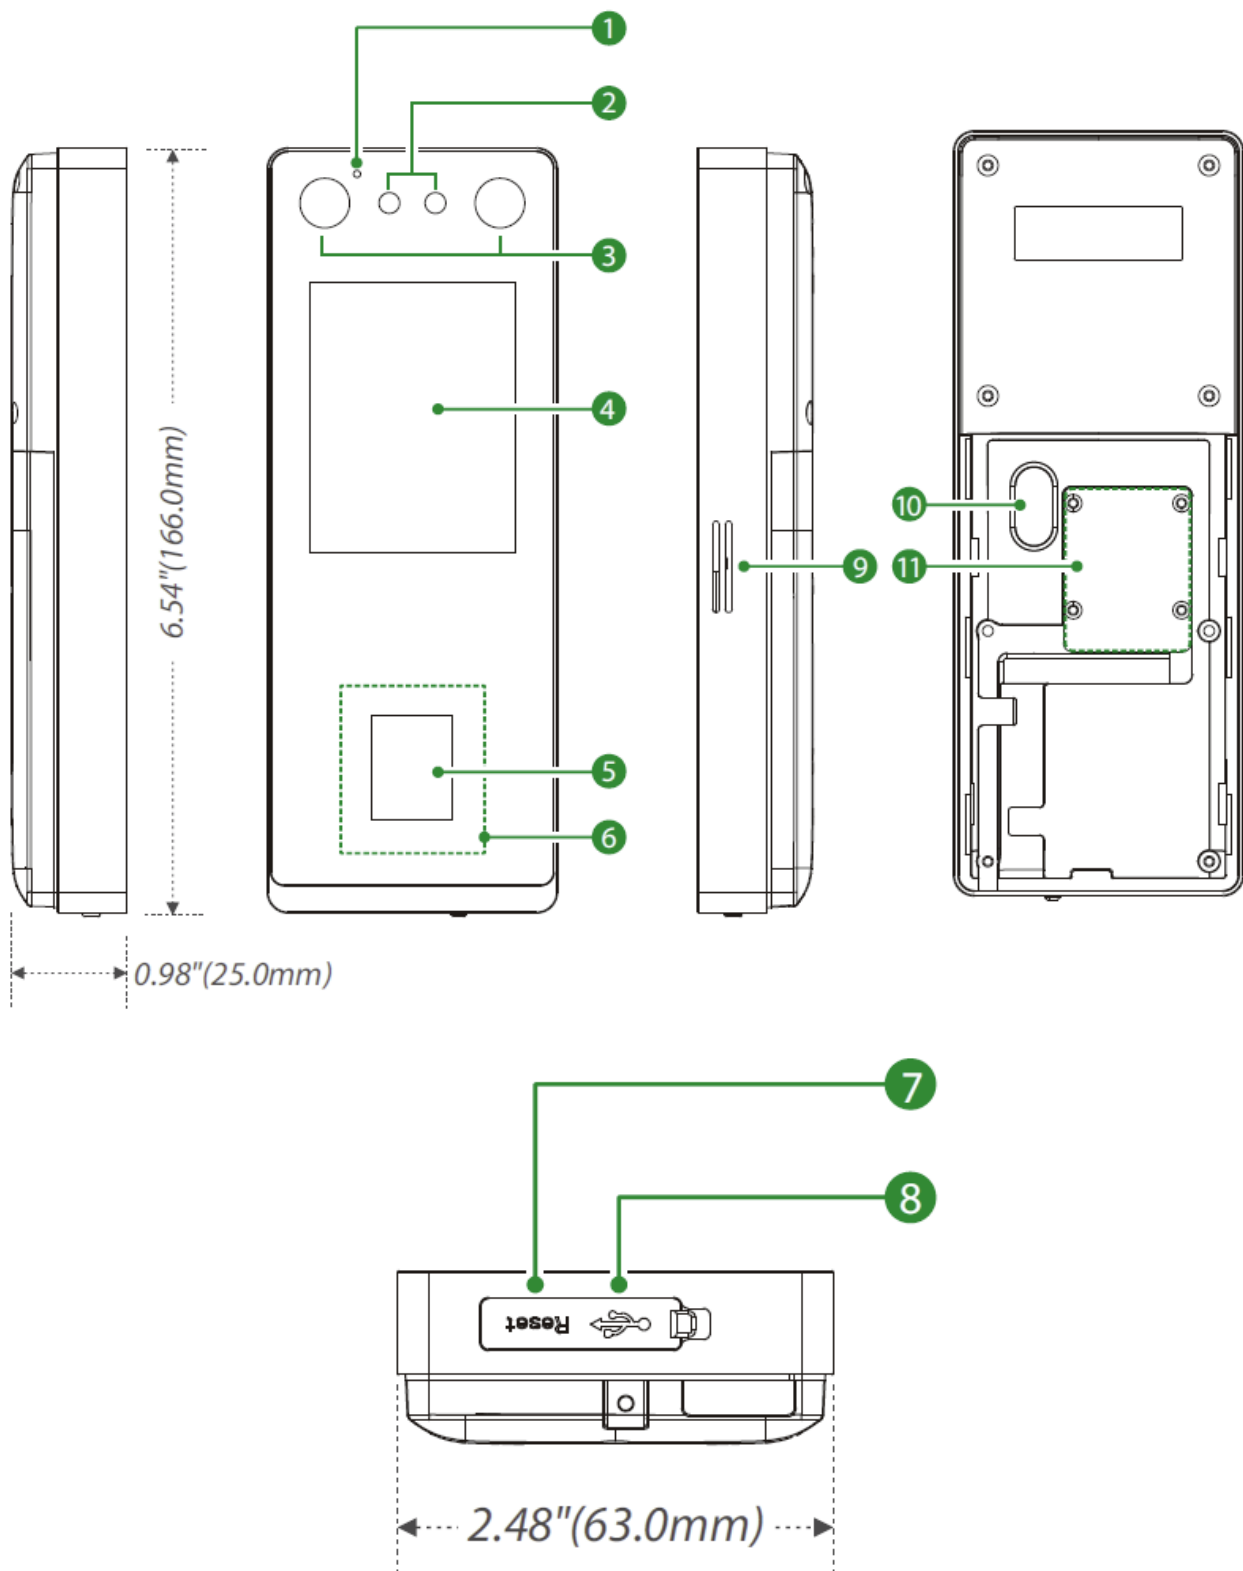

1. Microphone
2. Camera
3. Near-Infrared Flash
4. 2.8-inch Touch Screen
5. Fingerprint Sensor
6. Card Reading Area
7. Reset

- 8. USB Interface
- 9. Speaker
- 10. Tamper Switch
- 11. Terminal Block

Note: Not all products have the function with, the real product shall prevail.

Installation Environment



INSTALL INDOORS
ONLY



AVOID INSTALLATION
NEAR
GLASS WINDOWS



AVOID DIRECT
SUNLIGHT
AND EXPOSURE







AVOID USE OF ANY
HEAT SOURCE
NEAR THE DEVICE


Device Installation

Install on the wall


1. Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.
2. Fix the backplate on the wall with the wall mounting screws.
3. After passing the wires through the wiring hole and connecting them to the device, and then snap the device onto the backplate and push it down into place.
4. Fasten the device to the backplate with a security screw.

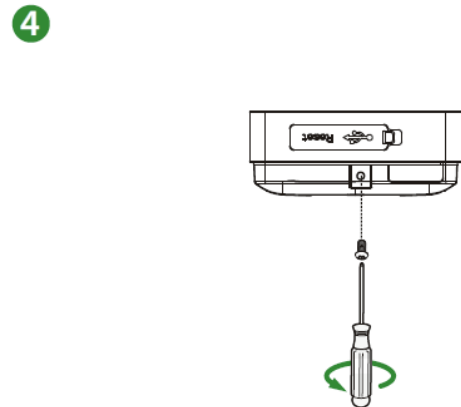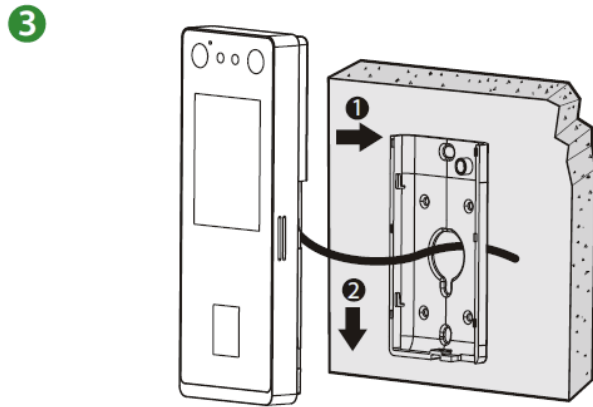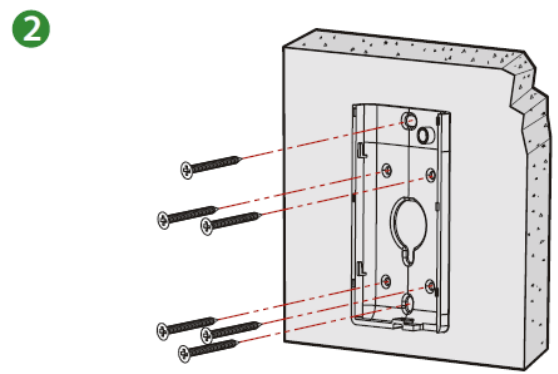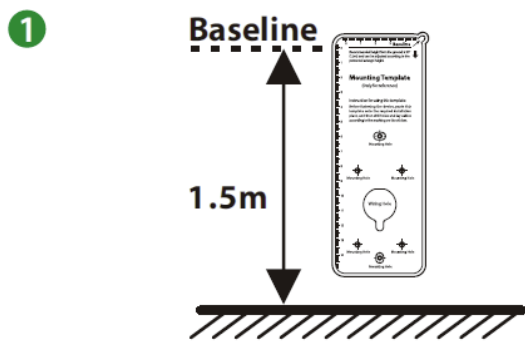

Standalone Installation

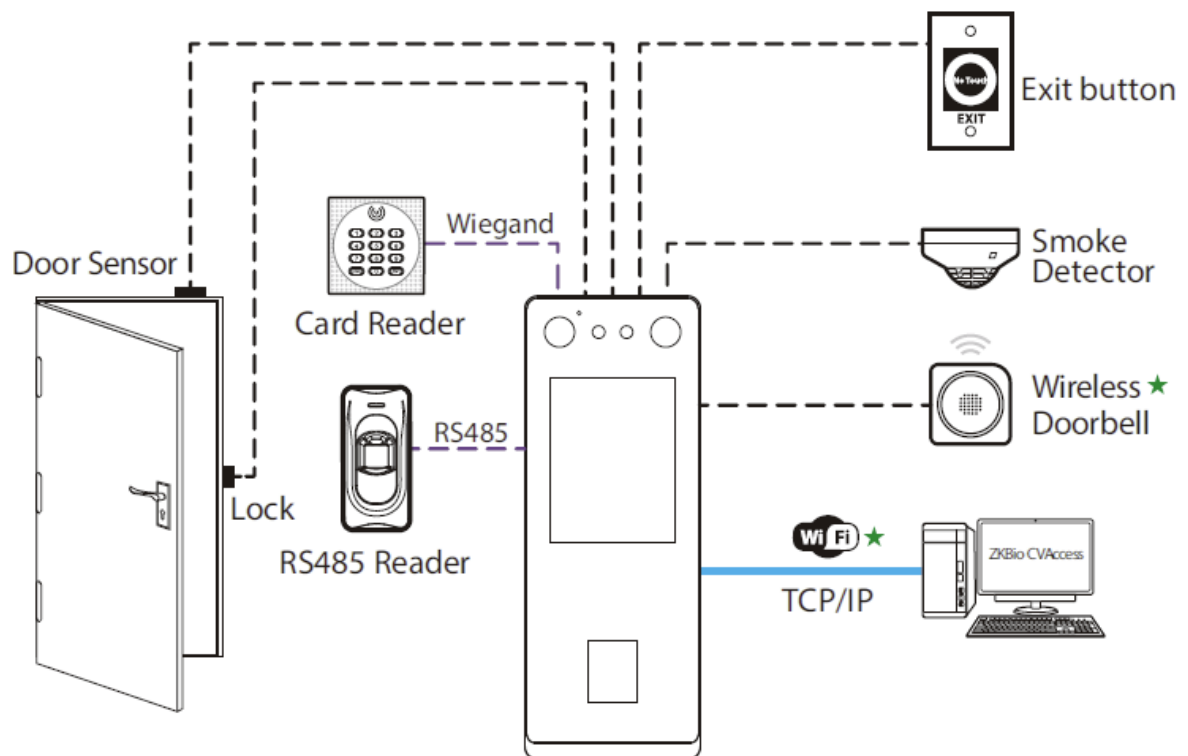



Terminal Block

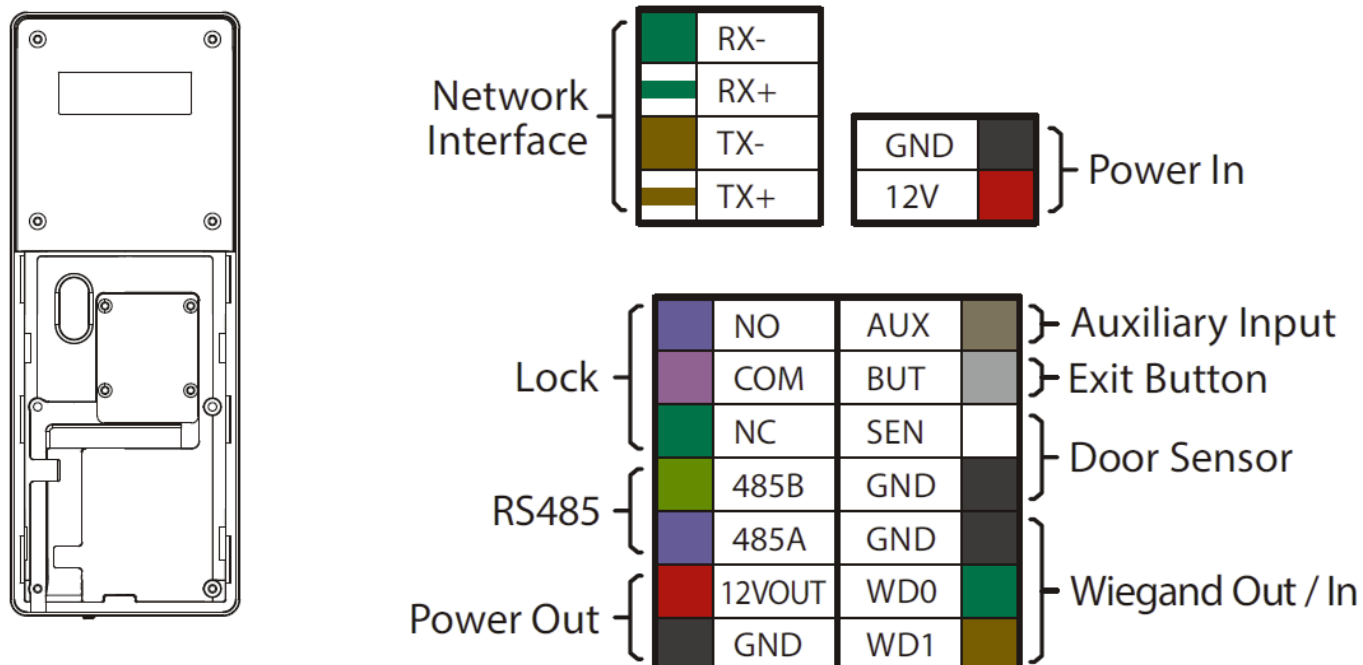

Ethernet Connection


Establish the connection between the device and the software using an Ethernet cable. An illustrative example is provided below:

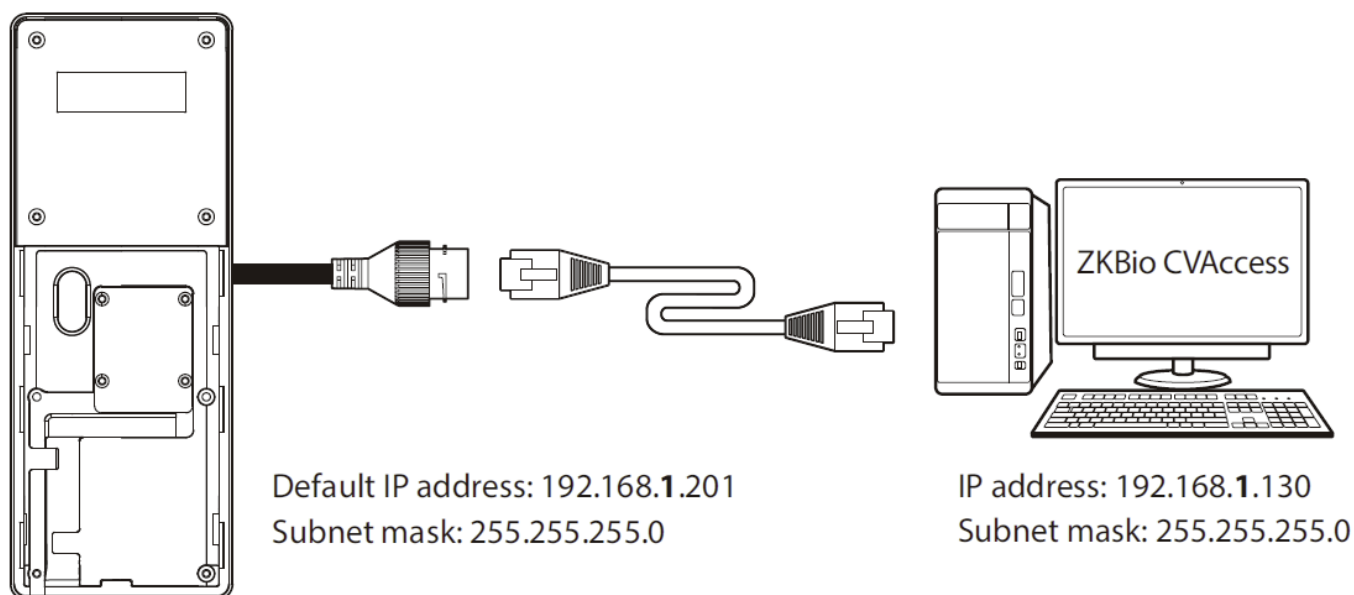


Tap on  to enter the main menu. And then click on [Comm.] > [Ethernet] > [IP Address] to input the IP address.

Note: In LAN, IP addresses of the server (PC) and the device must be in the same network segment when connecting to the software.



Power Connection

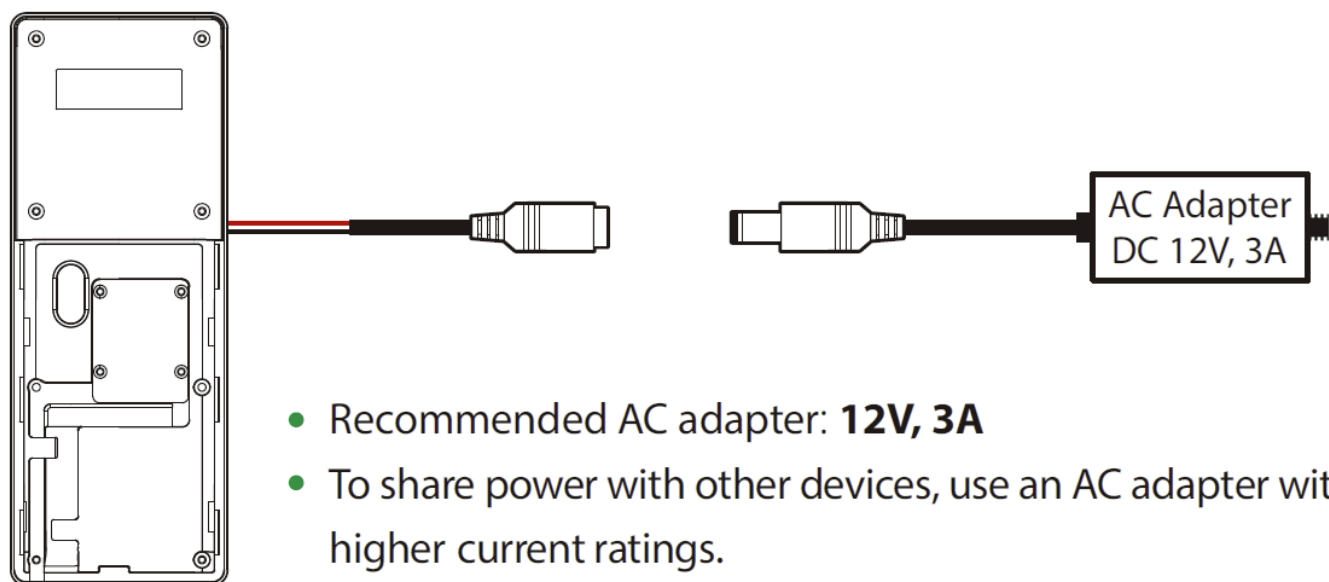

Exit Button, Door Sensor & Auxiliary Connection

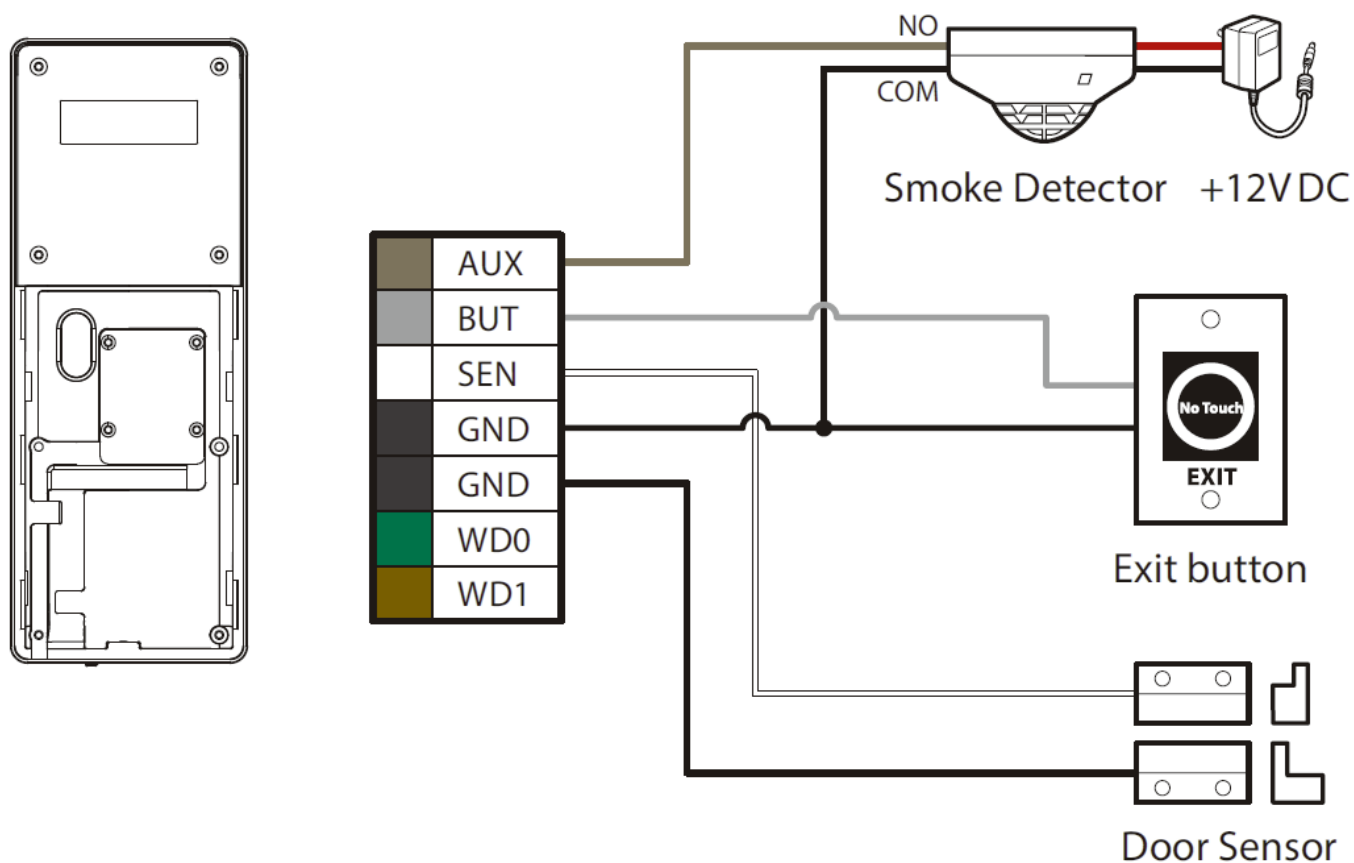


RS485 Connection

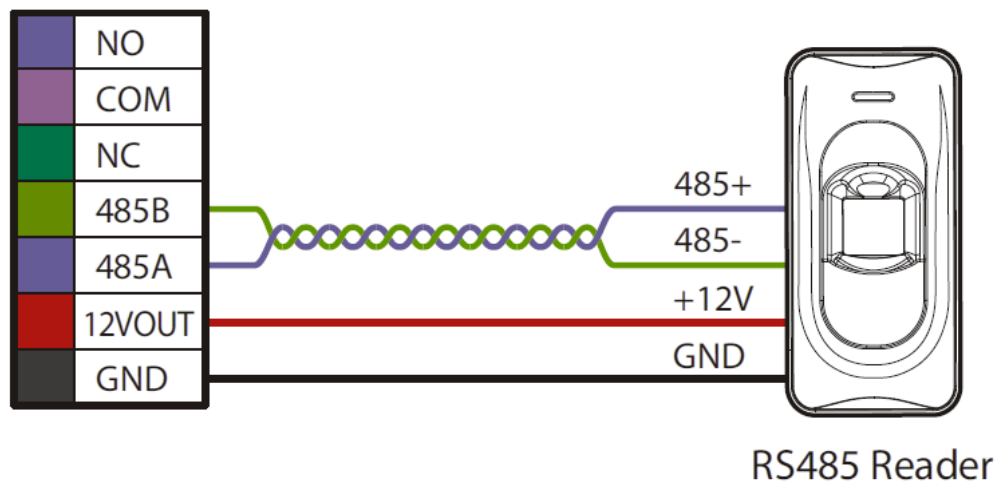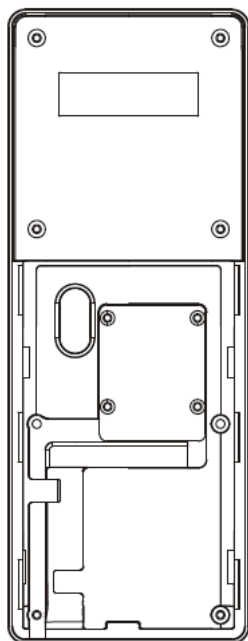

Lock Relay Connection


The system supports both Normally Opened Lock and Normally Closed Lock. The NO LOCK (normally opened at power on) is connected with 'NO' and 'COM' terminals, and the NC LOCK (normally closed at power on) is connected with 'NC' and 'COM' terminals. Take NC Lock as an example below:

1. Device not sharing power with the lock

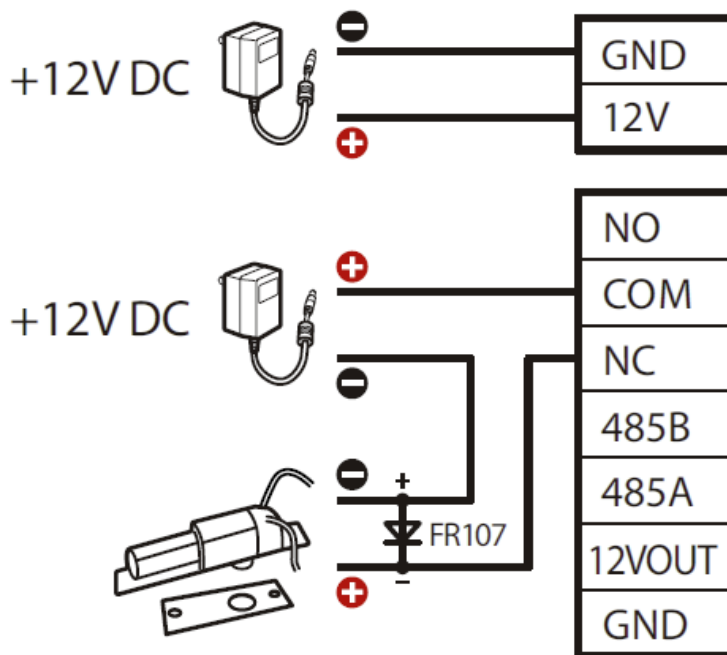


Normally Closed Lock

2. Device sharing power with the lock

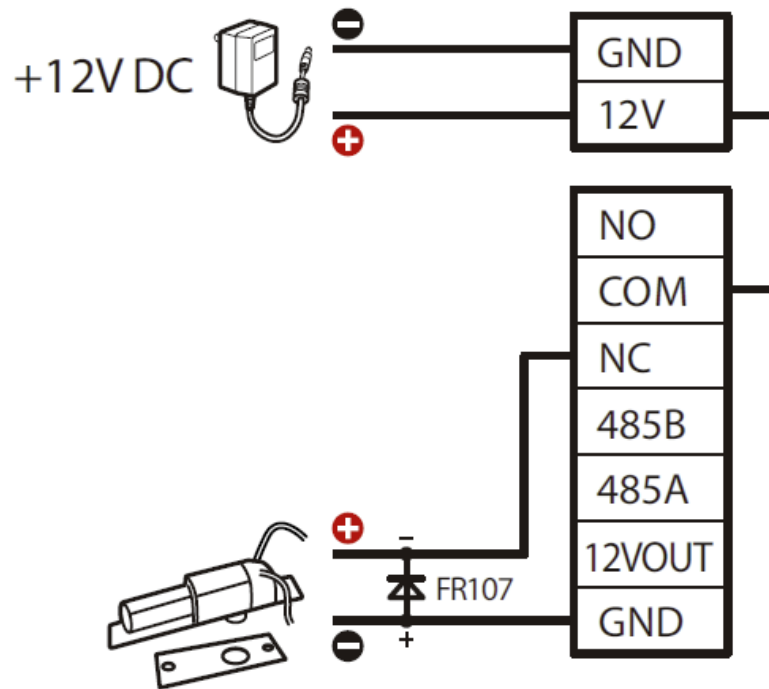


Normally Closed Lock

Wiegand Reader Connection

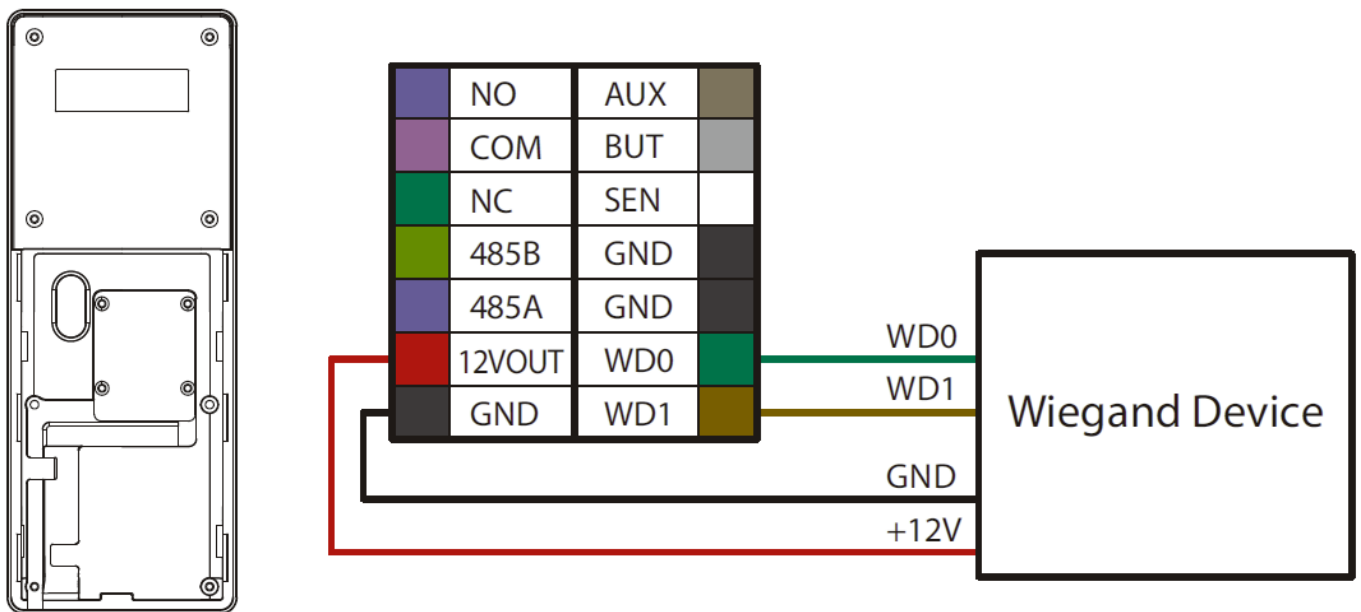


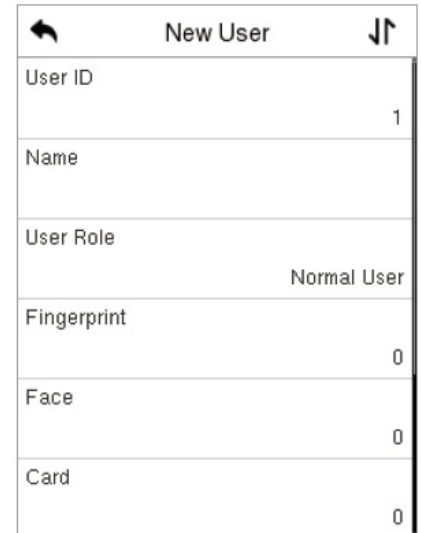
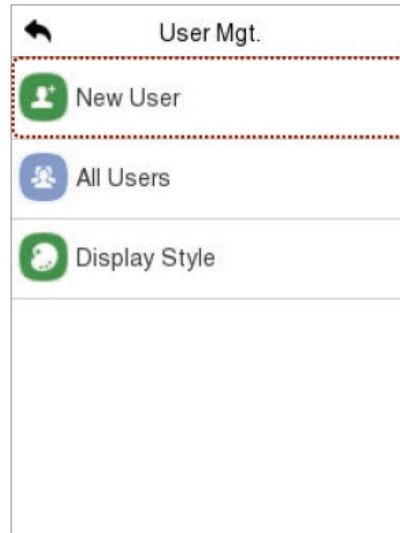
Note: The Wiegand interface is shared, and the user can choose to use either the Wiegand input or Wiegand output function to interface with different Wiegand devices.

User Registration

Click  to enter the Main Menu screen. When a super administrator is set up, administrator verification is required when entering the menu. For security purposes, it is recommended to register a super administrator when using it for the first time.




Method 1: Registering on the device

Click  > [User Mgt.] > [New User] to register a new user. The options include entering the user ID and Name, setting User Role and Access Control Role, registering Face, Fingerprint, Card Number, Password and Profile Photo.



The New User registration form contains the following fields:


New User	
User ID	1
Name	
User Role	Normal User
Fingerprint	0
Face	0
Card	0

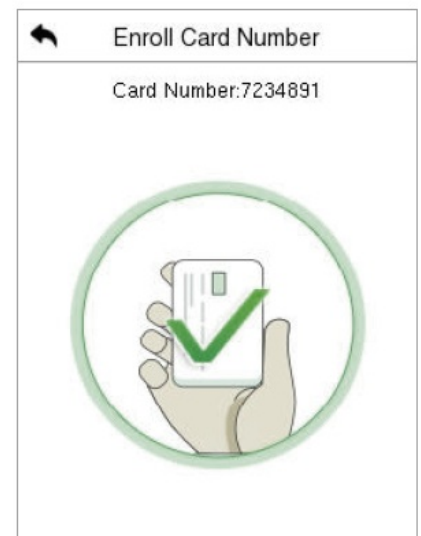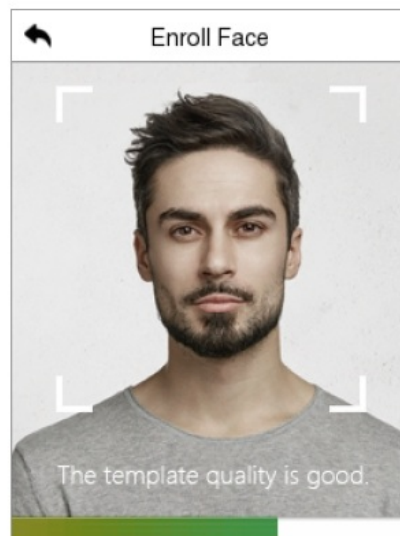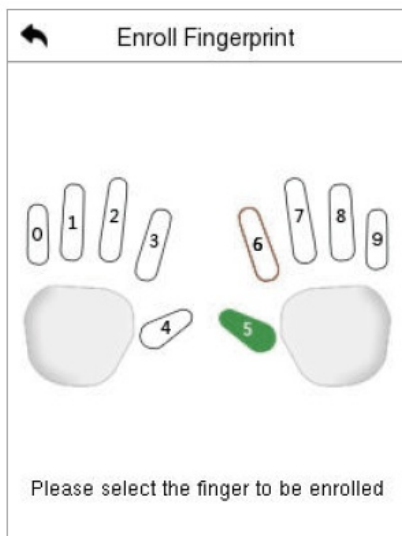

Method 2: Register on ZKBio CVAccess software

Please set the IP address and cloud service server address in the COMM. menu option on the device.

1. Click [Access] > [Access Device] > [Device] > [Search] to search the device on the software. When an appropriate server address and port is set on the device, the searched devices are displayed automatically.


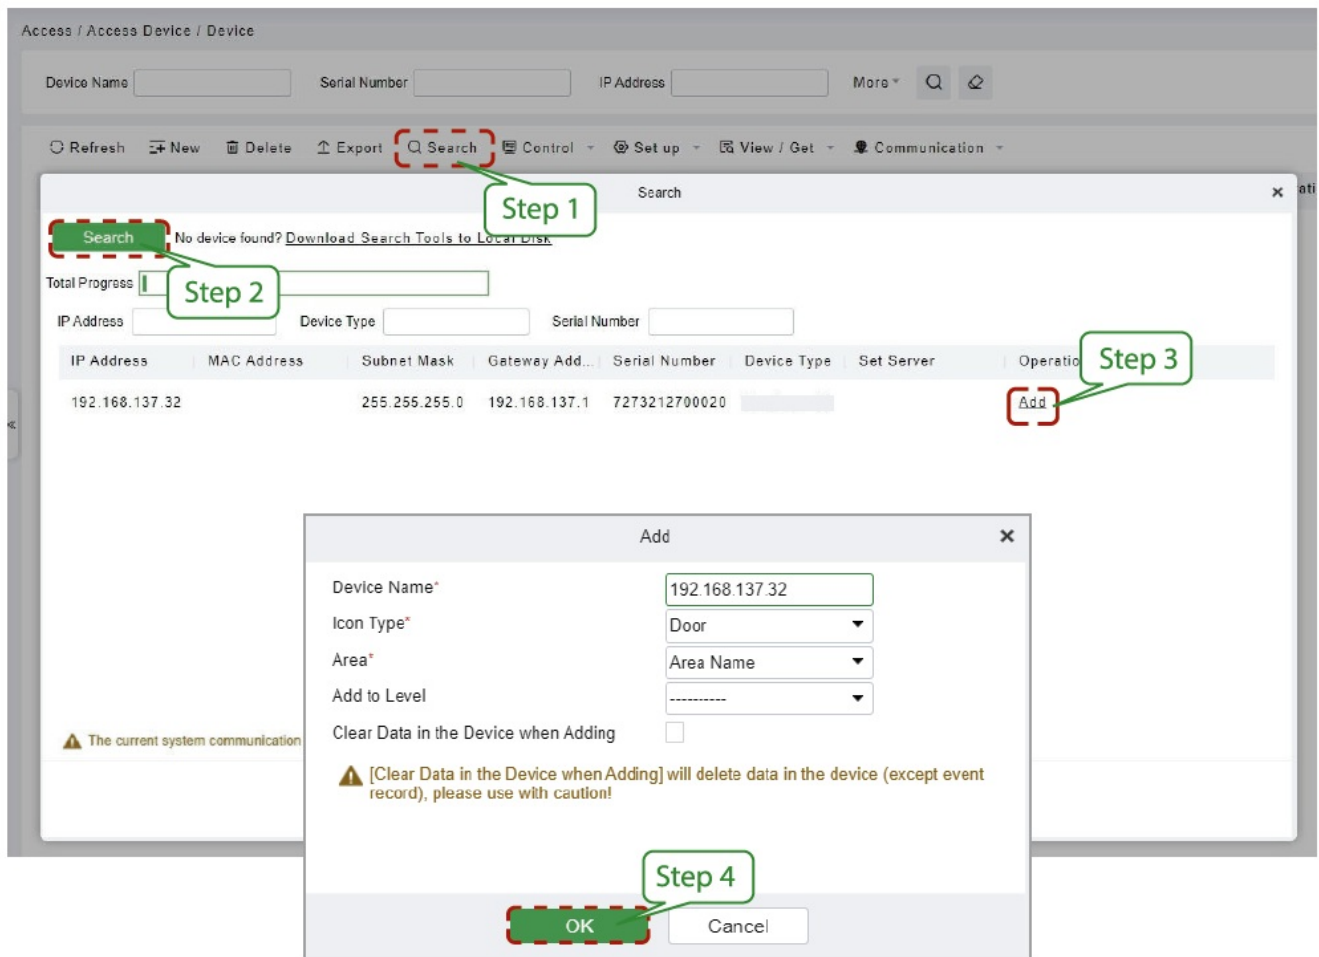


2. Click [Add] in operation column, a new window will pop-up. Select Icon type, Area, and Add to Level from each dropdowns and click [OK] to add the device. Click [Personnel] > [Person] > [New] and fill in all the required fields to register a new users in the software.
3. Click [Access] > [Device] > [Control] > [Synchronize All Data to Devices] to synchronize all the data to the device including the new users.
4. For more details, please refer to the ZKBio CVAccess User Manual.


Method 3: Register on the phone

Once the ZKBio CVAccess software is installed, the users could enroll their face via a browser application on their own mobile phone.



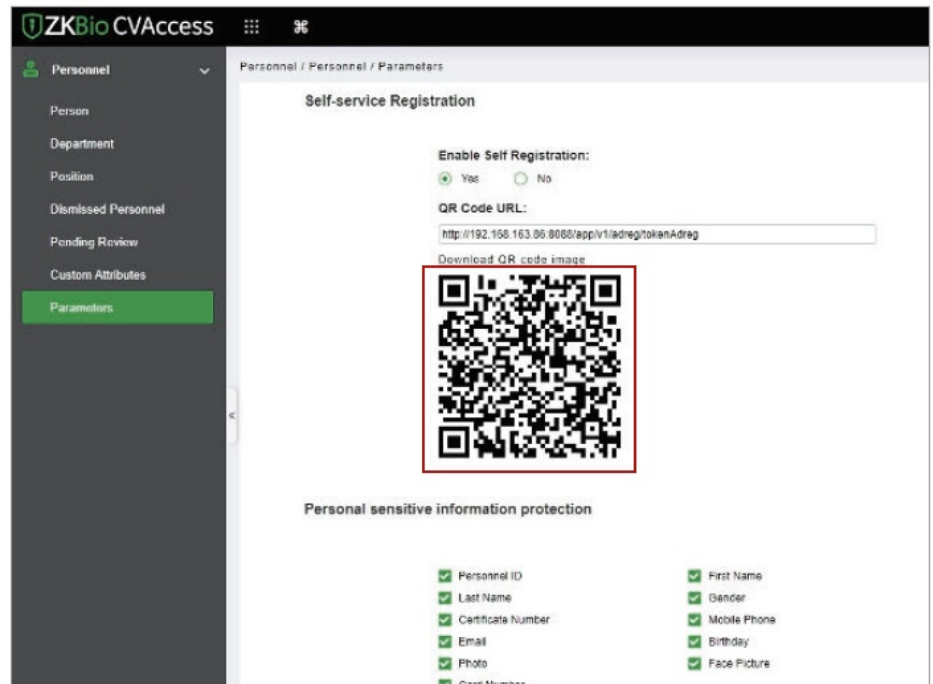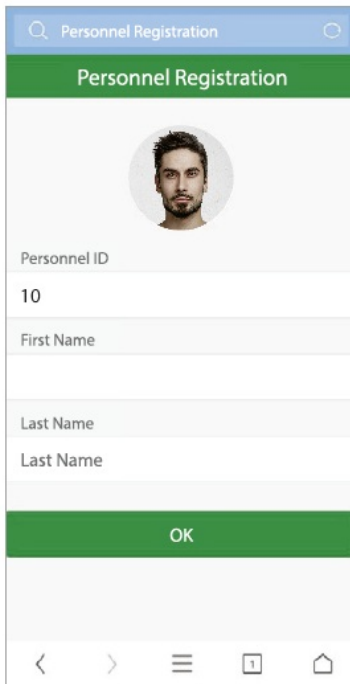

1. Click [Personnel] > [Parameters], input "http://Server address: Port" in the QR Code URL bar. The software will automatically generate a QR code. Scan the QR code or login onto "http://Server address: Port/app/v1/adreg" by the mobile phone to register users.

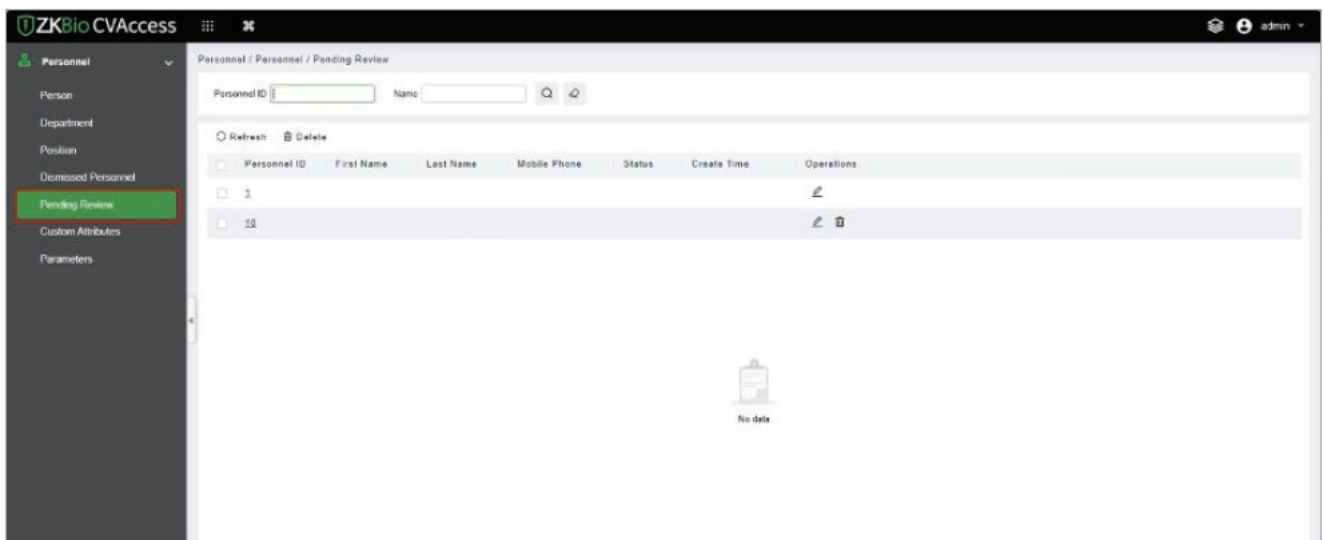


2. The users will be displayed in [Personnel] > [Pending Review].





Ethernet and Cloud Server Settings

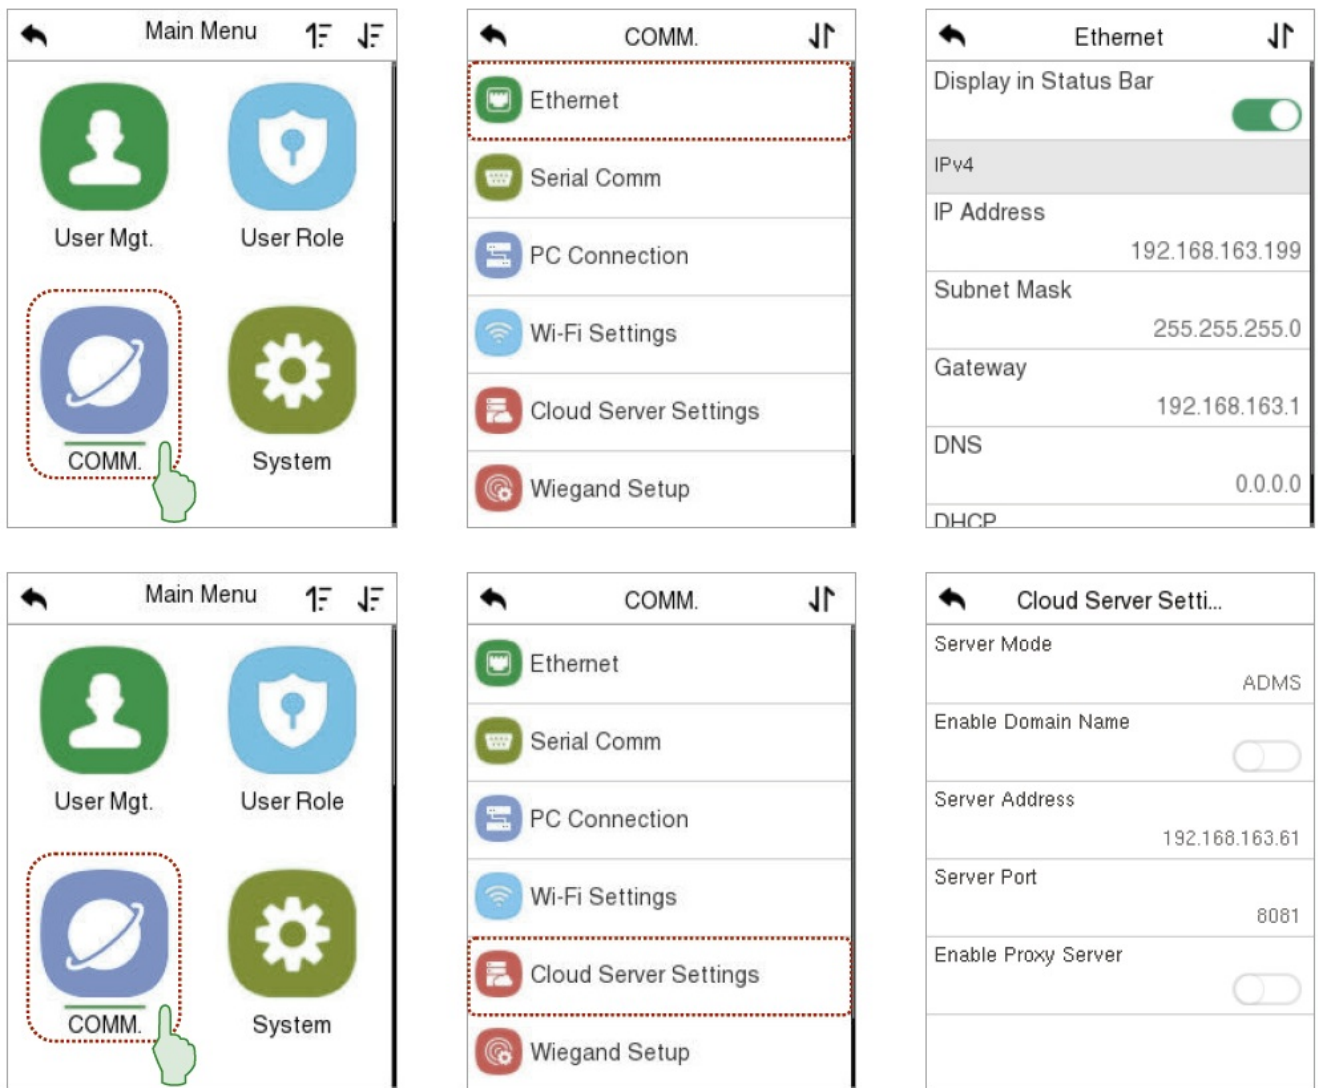
- Click  > [COMM.] > [Ethernet] to set the network parameters. If the TCP/IP communication of the device is successful, the  icon will be displayed in the upper right corner of the standby interface.
- Click  > [COMM.] > [Cloud Server Setting] to set the server address and server port, that is, the IP address and port number of the server after the software is installed. If the device communicates with the server successfully, the  icon will be displayed in the upper right corner of the standby interface.





Note: While pairing the device with ZKBio CVAccess software. Make sure that the option Enable Domain Name is disabled and the correct server address and port are entered.



Configuring Wi-Fi★

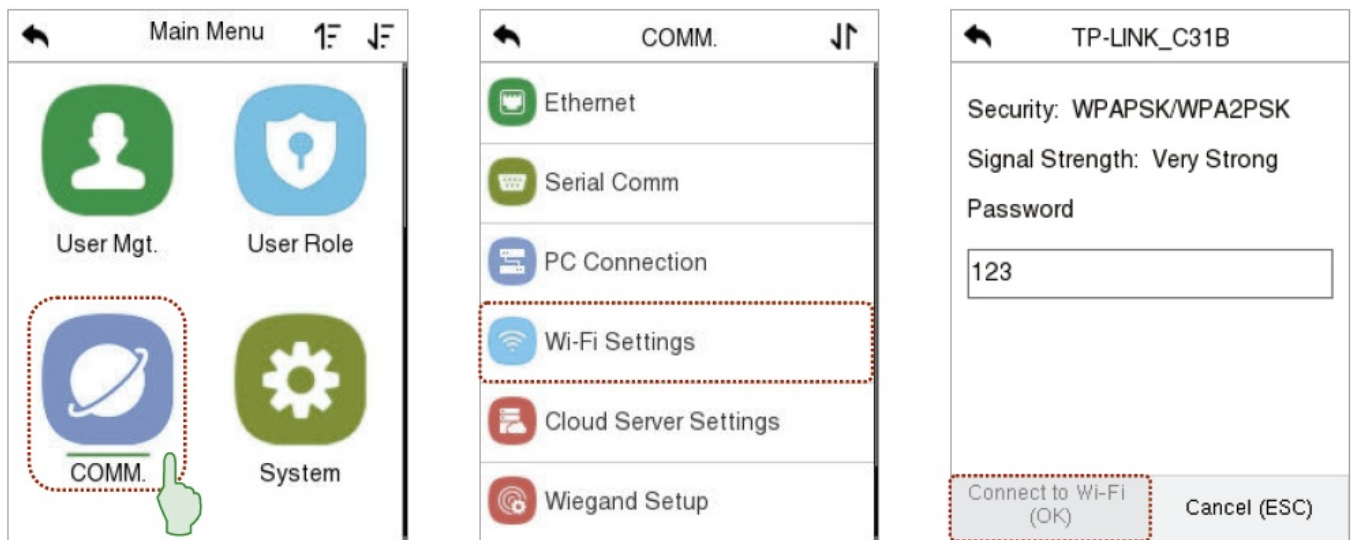
Tap on  to view the menu. Click [COMM.] > [Wi-Fi Settings] to configuring Wi-Fi. When Wi-Fi is enabled, select the searched network. Enter the password, and click Connect to Wi-Fi (OK). The connection succeeds, with icon  displayed on the status bar. You can also select Add Wi-Fi Network to add Wi-Fi manually.



Connect the Wireless Doorbell★

This function needs to be used with the wireless doorbell. First, power on the wireless doorbell. Then, press and hold the music button  for 1.5 seconds until the indicator flashes to indicate it's in pairing mode. After that, click on the device icon . If the wireless doorbell rings and the indicator flashes, it means the connection is successful.

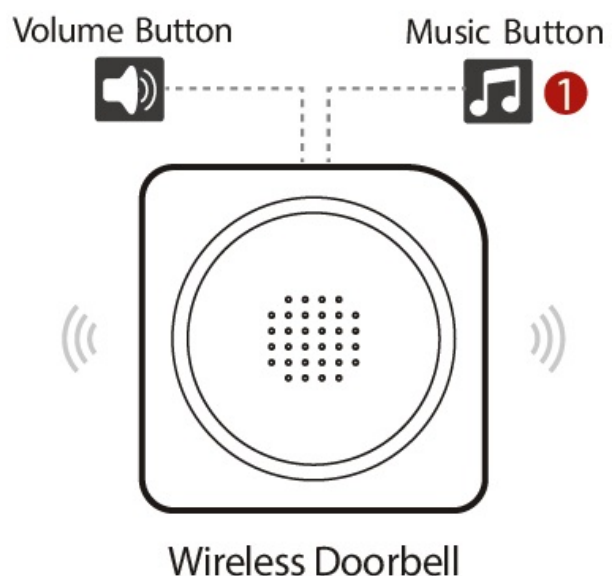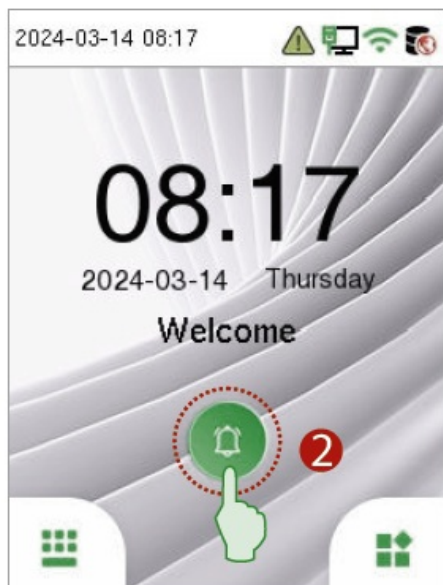


After a successful pairing, clicking the icon  of the device will ring the wireless doorbell.

Note: Generally, each device connects to one wireless doorbell.

SIP Settings

Setting call options on the device

Click  > [Intercom] > [SIP Settings] > [Call Options] to set the SIP common parameters.





Mode 1: Local Area Network




Note: When the SIP Server function is enabled, the Contact List menu are not displayed. To use Contact List, turn off the SIP Server.

Calling by IP Address


1. Set the IP address on the indoor station, Tap [Menu] > [Advanced] > [Network] > [1. Network] > [1. IPv4].
 - **Note:** Indoor station IP address and the device IP address must be in the same network segment.



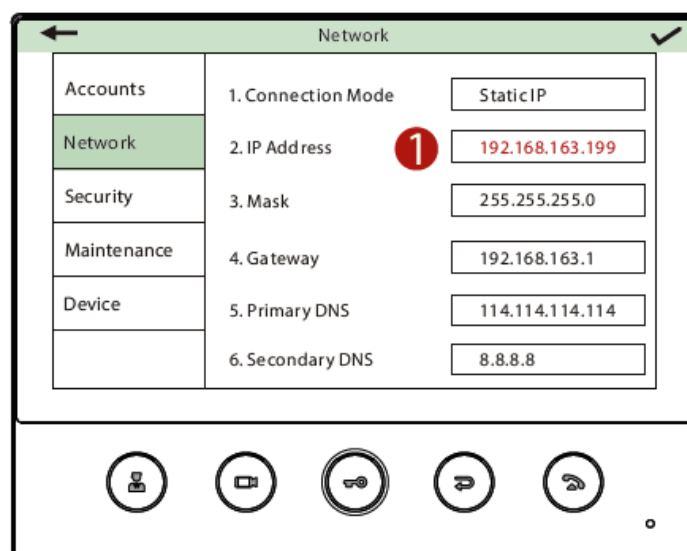


2. Click  icon on the standby page to enter the call page, users can call the IP address of the indoor station.

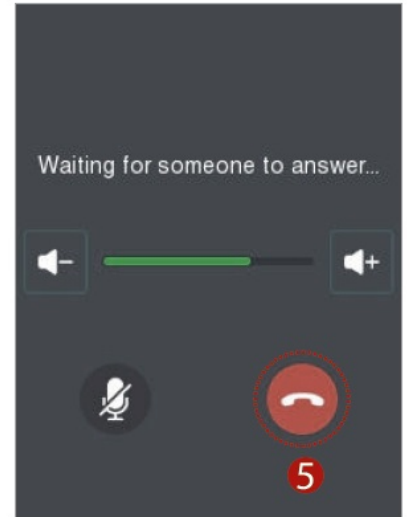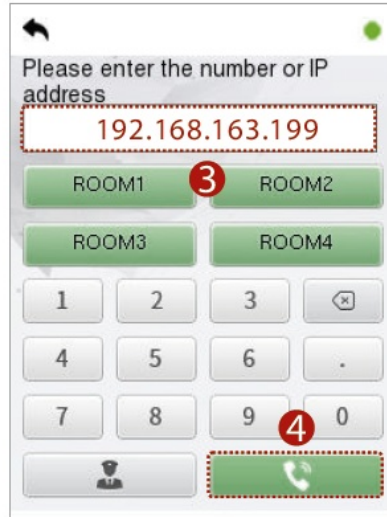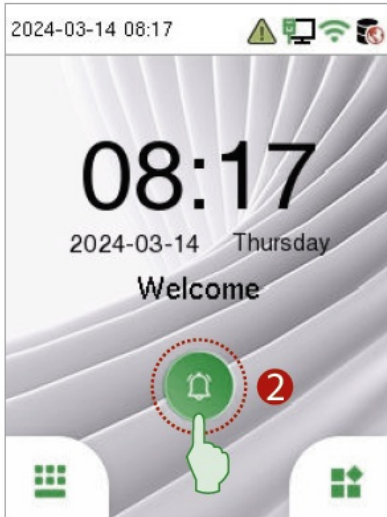



Calling by Shortcut

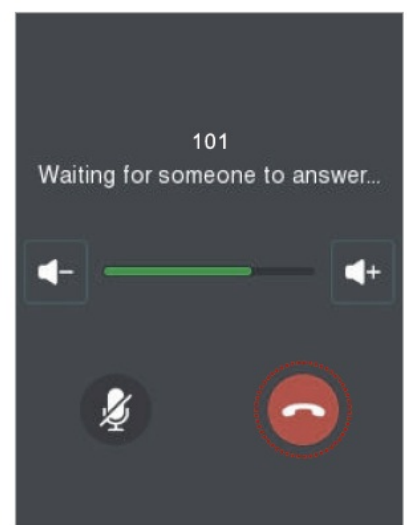
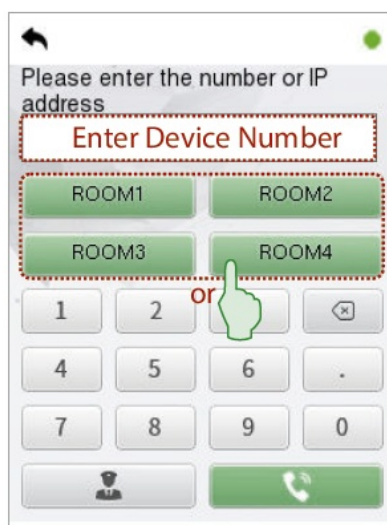
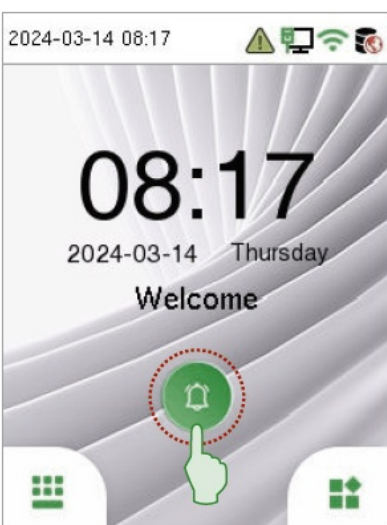
1. Click  > [Intercom] > [SIP Settings] > [Contact List].
2. Click [Add], input device number and call address to add a new contact member.
Note: Call address and the device must be in the same network segment.
3. Click [SIP Settings] > [Calling Shortcut Settings], select any item except admin, and enter the form information you just uploaded.
4. Then you can enter the device number or click shortcut key in the call screen to directly implement the video intercom.





Direct Calling Mode







1. Click  > [Intercom] > [SIP Settings] > [Contact List].

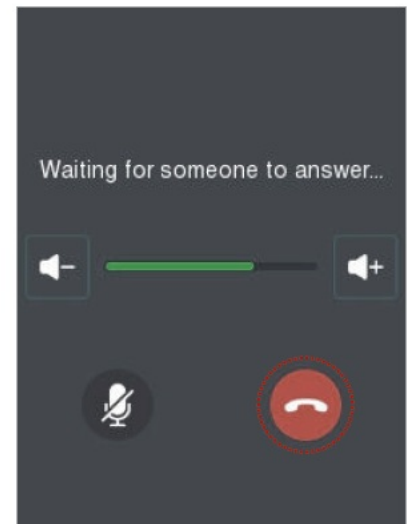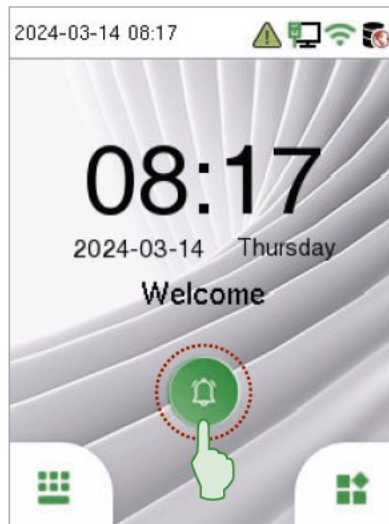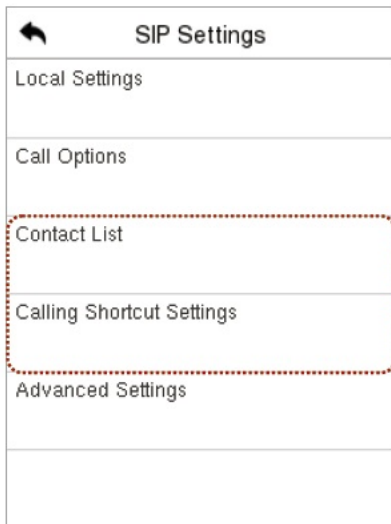2. Click [Add], input device number and call address to add a new contact member.
Note: Call address and the device must be in the same network segment.
3. Click [SIP Settings] > [Calling Shortcut Settings] > [Call Mode] > [Direct Calling Mode] > [Add]. Select the IP addresses of the indoor stations that you want to call, then the indoor stations will be displayed in the list.
4. Then you can tap the  icon on the device to call the indoor stations at the same time.



Mode 2: SIP Server

1. Click  > [Intercom] > [SIP Settings] > [Local Settings] to enable the SIP server.
2. Click [Master Account Setting] / [Backup Account Setting] to set the SIP server parameters.
3. Click  icon on the standby page to enter the call page, once the SIP is set up correctly, a green dot will appear in the upper right corner of the call page to indicate that the device is connected to the server. You can call the account name of the indoor station.

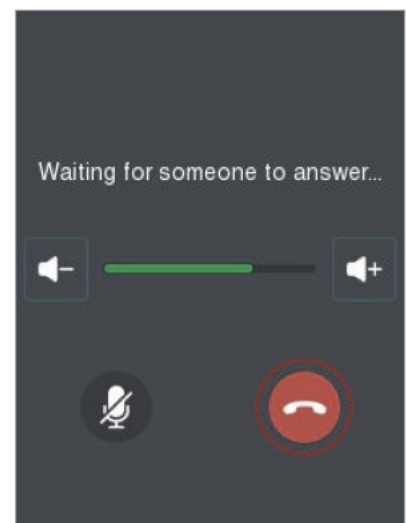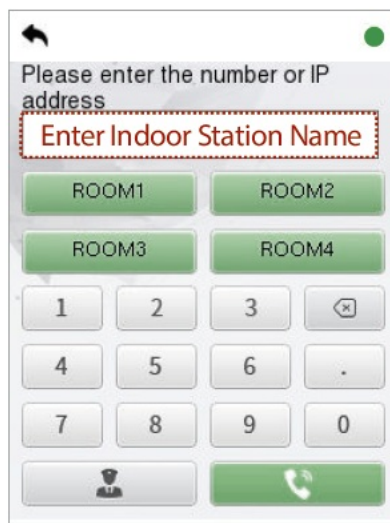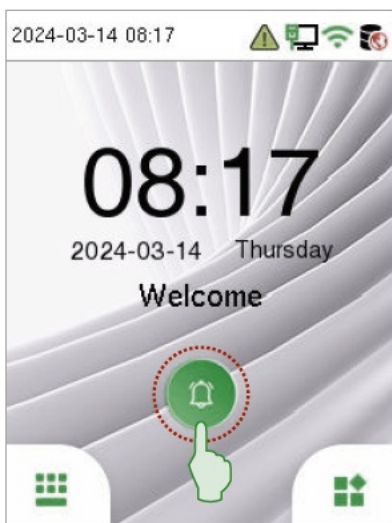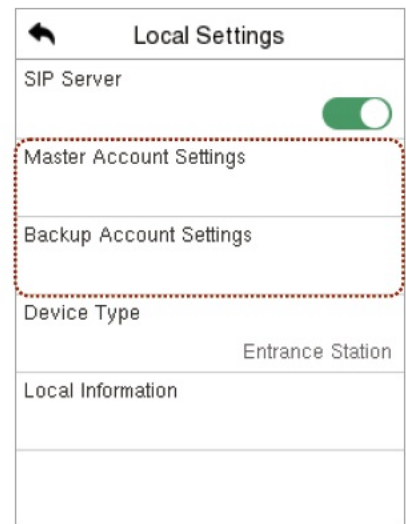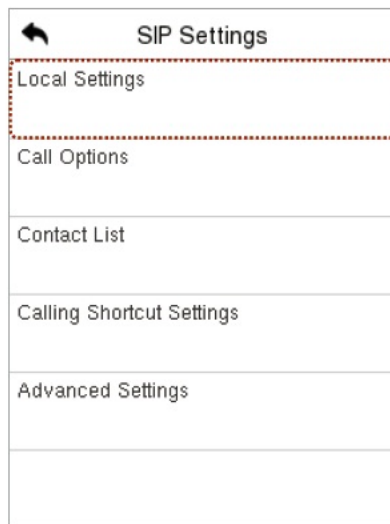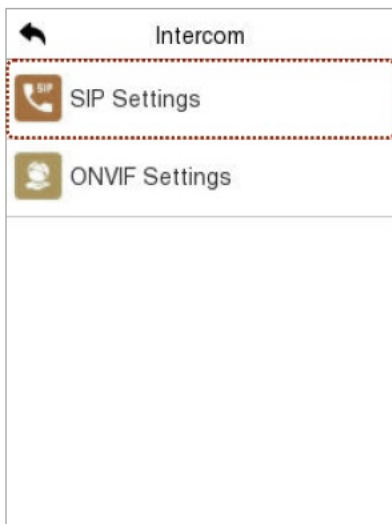

Note: When users need to enable SIP server, they need to purchase the server address and password from the distributor, or build the server confidently.


ONVIF Settings

This function needs to be used with the Network Video Recorder (NVR).


1. Set the device to the same network segment as the NVR.
2. Click > [Intercom] > [ONVIF Settings] to set the User Name and Password.
 - **Note:** If the Authentication function is disabled, then there is no need to input the User Name and Password when adding the device to the NVR.



3. On the NVR system, click [Start] > [Menu] > [Channel Manage] > [Add Channel] > [Refresh] to search for the device.

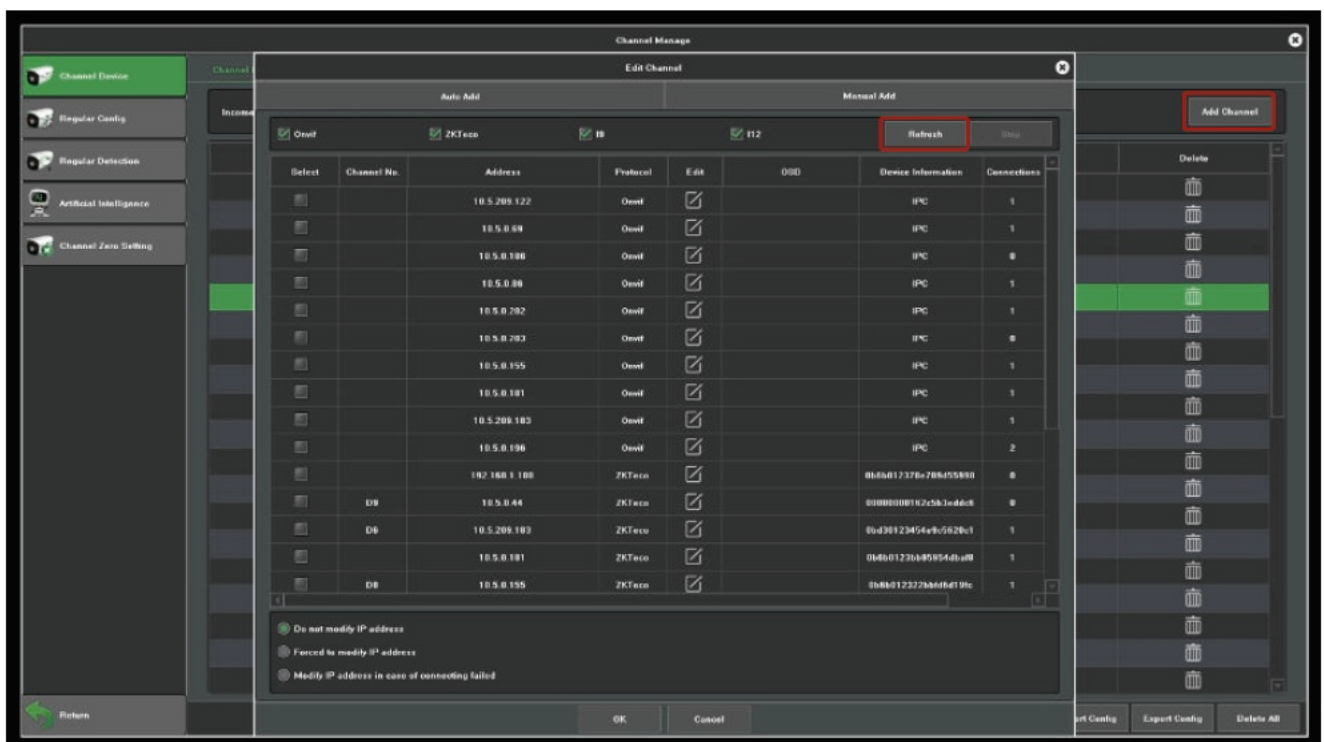

4. Select the checkbox for the device you want to add and edit the parameters in the corresponding text field, then click on [OK] to add it to the connection list.

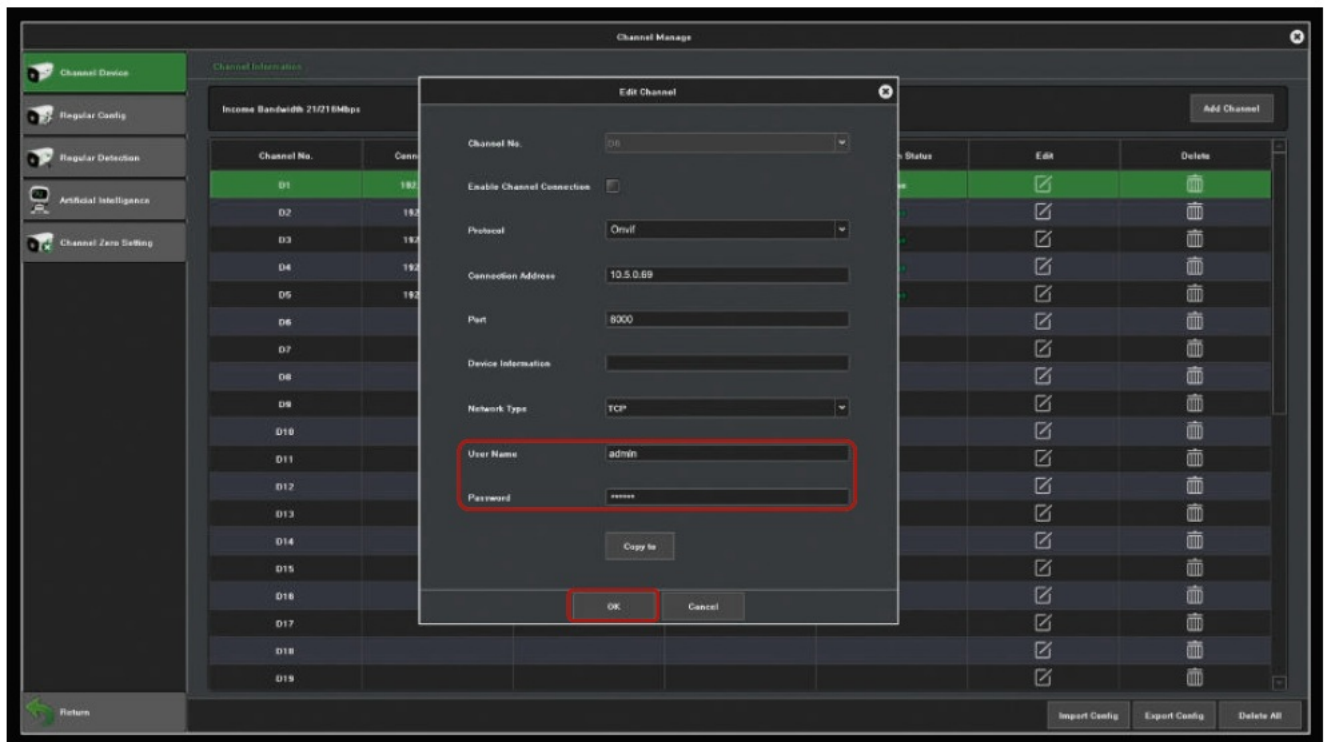

5. After successfully adding, the video image obtaining from the device can be viewed in real-time.

For more details, please refer to the NVR User Manual.

MORE INFORMATION




- ZKTeco Industrial Park, No. 32, Industrial Road,
- Tangxia Town, Dongguan, China.
- Phone: +86 769 – 82109991
- Fax: +86 755 – 89602394
- www.zkteco.com

FAQs

- Q: What should I do if the product is not functioning correctly?

- A: If you encounter any issues with the product's operation, refer to the troubleshooting section in the user manual or contact our customer support for assistance.
- **Q: Can the product be used in outdoor environments?**
 - A: It is recommended to use the product in indoor environments to prevent exposure to extreme conditions that may affect its performance.

Documents / Resources

	ZKTECO SenseFace 3 Series Multi-Biometric Access Control Terminal [pdf] User Manual 21010, 2AJ9T-21010, 2AJ9T21010, SenseFace 3 Series Multi-Biometric Access Control Terminal, SenseFace 3 Series, Multi-Biometric Access Control Terminal, Access Control Terminal, Control Terminal, Terminal
---	---

References

- [ZKTeco | Biometrics and Computer Vision](#)
- [User Manual](#)

■ ZKTECO

◆ 21010, 2AJ9T-21010, 2AJ9T21010, Access Control Terminal, Control Terminal, Multi Biometric Access Control Terminal, SenseFace 3 Series, SenseFace 3 Series Multi-Biometric Access Control Terminal, Terminal, ZKTECO

—Previous Post

[ZKTECO NM8900PG Smart Fingerprint Identification Padlock User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.