



ZKTeco SpeedFace-V3L Face Access Control Stand Alone Terminal User Guide

[Home](#) » [ZKTECO](#) » ZKTeco SpeedFace-V3L Face Access Control Stand Alone Terminal User Guide 


ZKTeco SpeedFace-V3L Face Access Control Stand Alone Terminal User Guide






Contents

- 1 Overview
- 2 Terminal Block
- 3 Installation Environment
- 4 Device Installation
- 5 Standalone Installation
- 6 Power Connection
- 7 Ethernet Connection
- 8 Wiegand Reader Connection
- 9 RS485 Connection
- 10 Door Sensor, Exit Button, Alarm & Auxiliary Connection
- 11 Lock Relay Connection
- 12 USB Connection
- 13 User Registration
- 14 Ethernet and Cloud Server Settings
- 15 Access Control Setting
- 16 Attendance Record
- 17 System Setting
- 18 Documents / Resources
- 19 Related Posts

Overview

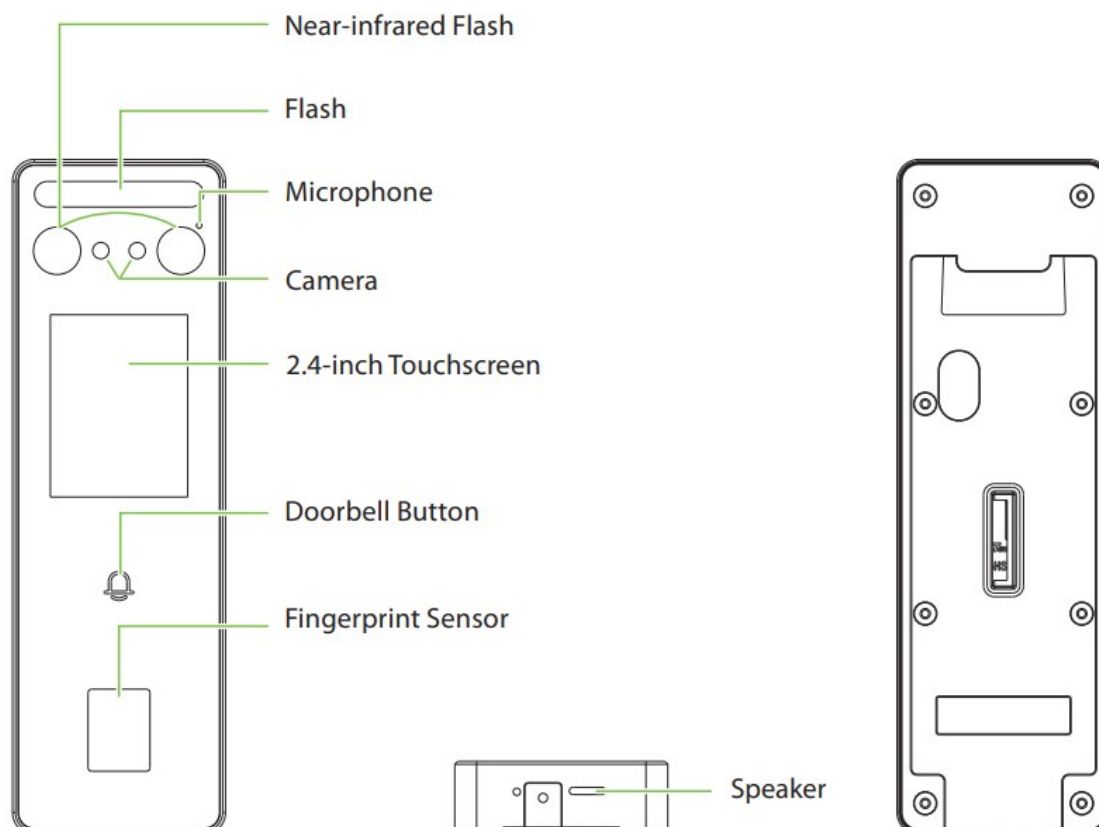

Terminal Block

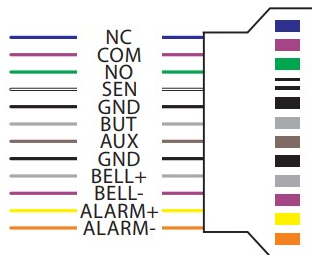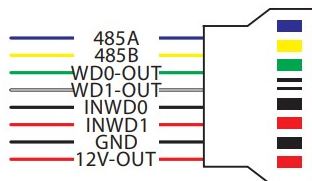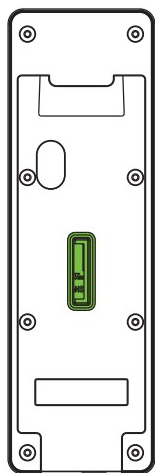

Installation Environment

Please refer to the following recommendations for installation.



INSTALL INDOORS ONLY



AVOID GLASS REFRACTION



AVOID DIRECT SUNLIGHT AND EXPOSURE




KEEP EFFECTIVE DISTANCE 0.3-1.2m

Device Installation


1. Attach the mounting template sticker to the wall, and drill holes according to the mounting paper.

1

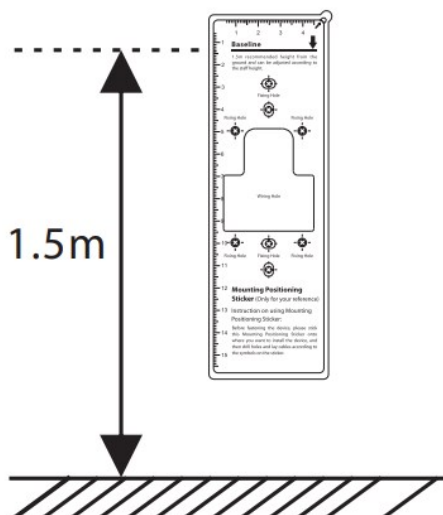


2. Fix the backplate on the wall using wall mounting screws

2

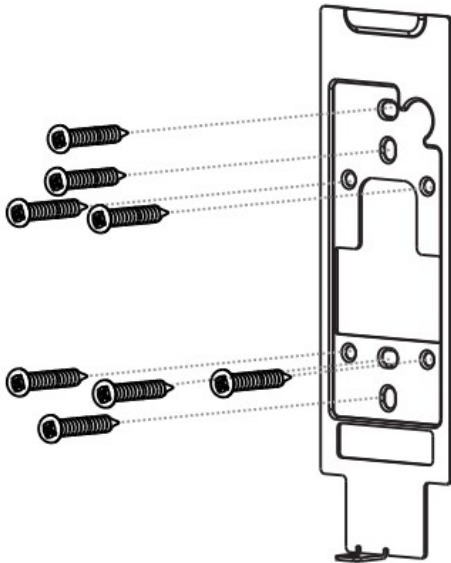


3. Attach the device to the backplate

3

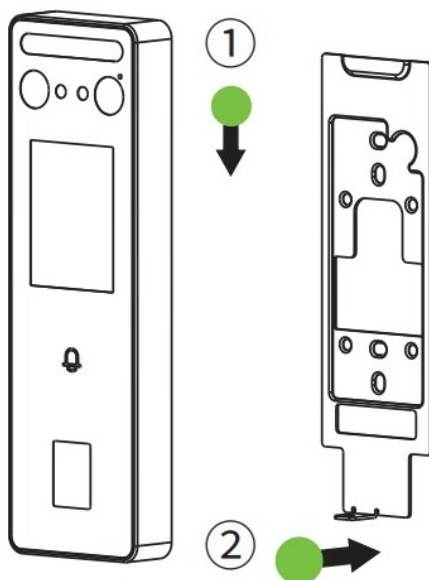


4. Fasten the device to the backplate with a security screw


4

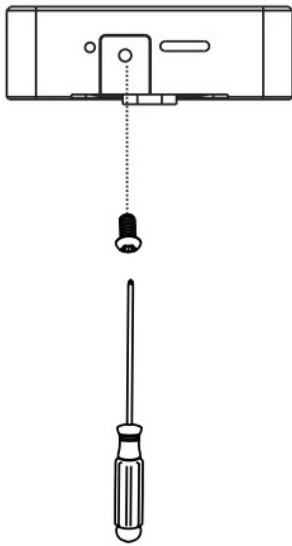

Standalone Installation

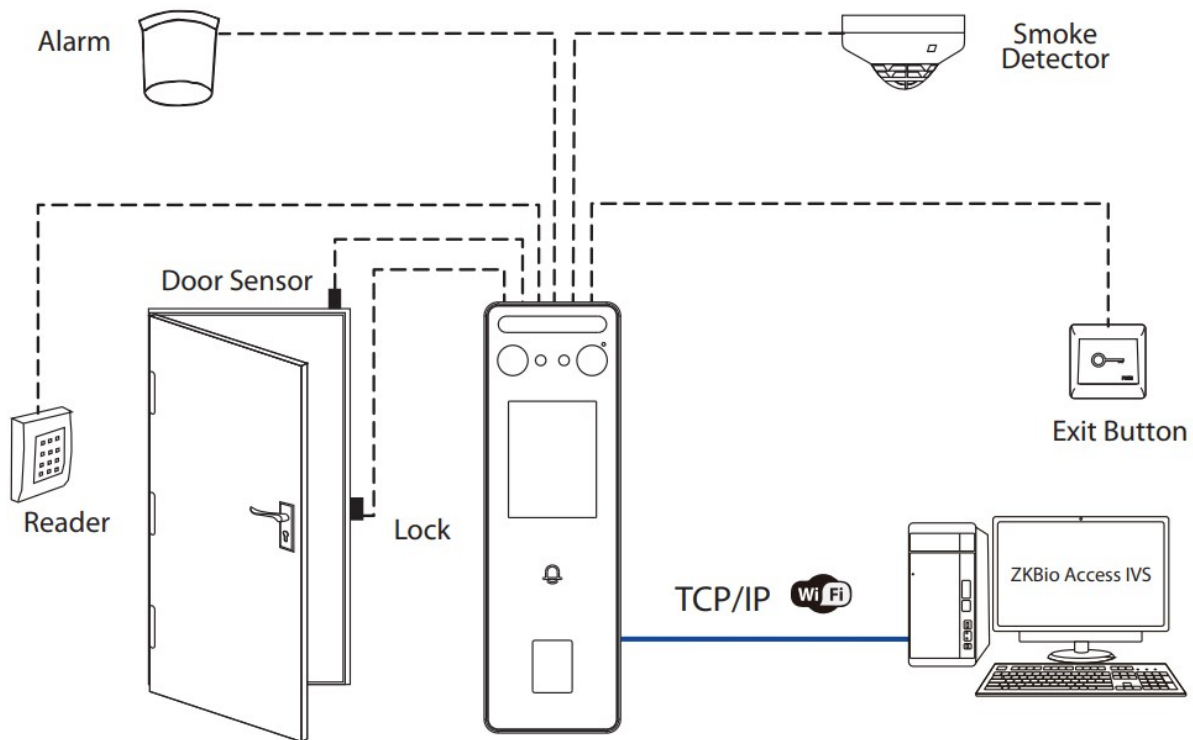

Power Connection

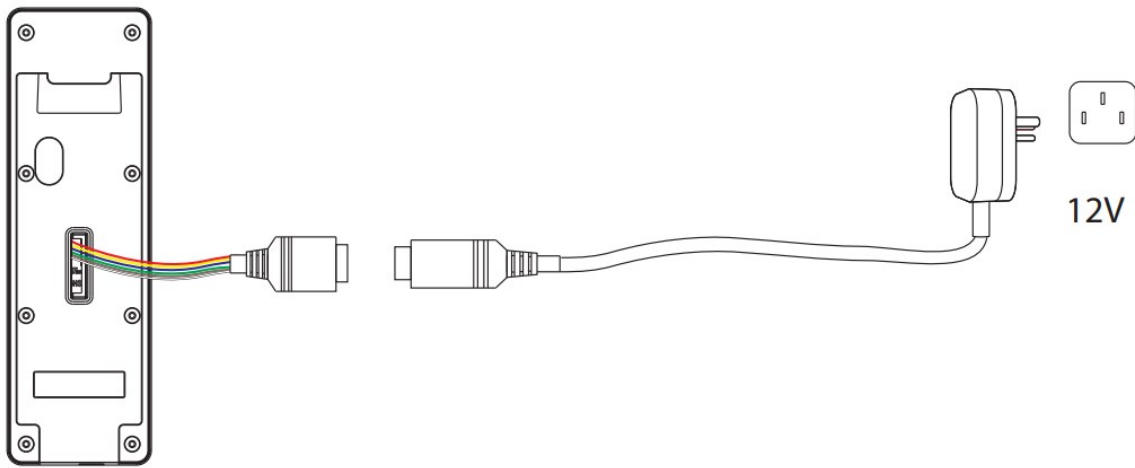


Recommended AC Adapter

1. 12V \pm 10%, at least 1500mA.
2. To share the power with other devices, use an AC Adapter with higher current ratings.

Ethernet Connection

Connect the device and computer software over an Ethernet cable. As shown in the example below:

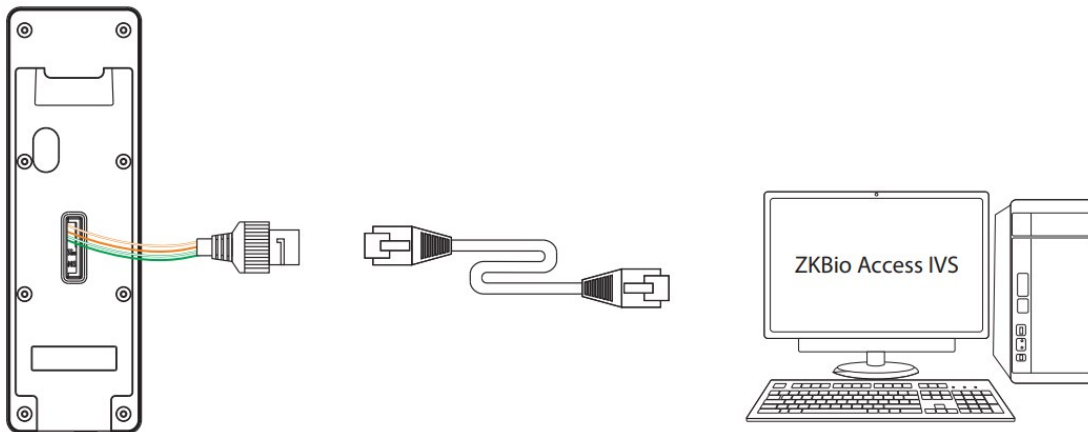



Default IP address: 192.168.1.201
Subnet mask: 255.255.255.0

IP address: 192.168.1.130
Subnet mask: 255.255.255.0

Click on [COMM.] > [Ethernet] > [IP Address] , input the IP address and click on [OK].



Note: In LAN, the IP addresses of the server (PC) and the device must be in the same network segment when connecting to the ZKBio Access IVS software.

Wiegand Reader Connection

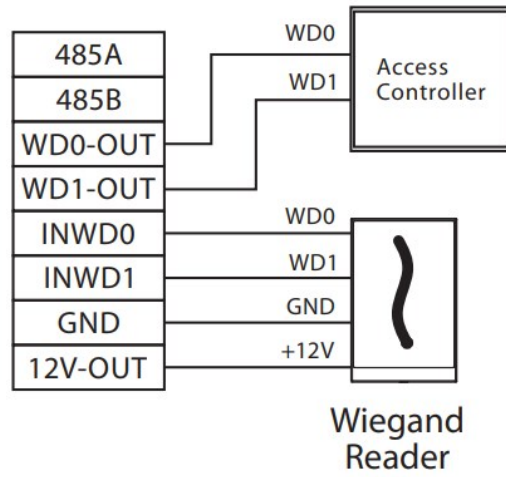
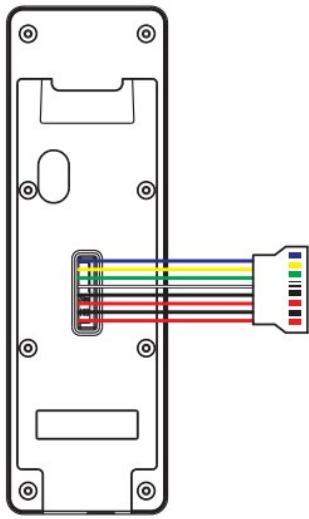


Note: 485A and 485B can be connected to the Barrier gate or the 485 Reader, separately, but cannot be connected to the gate and reader at the same time.

RS485 Connection

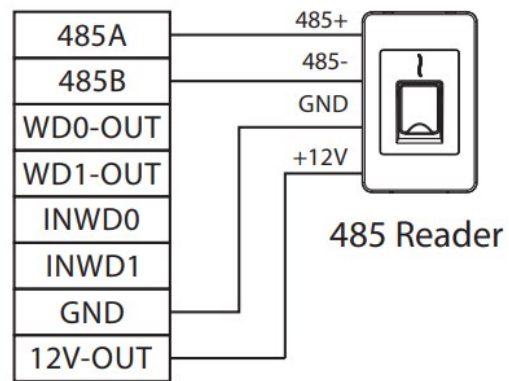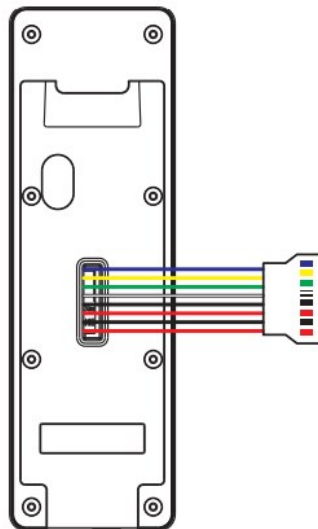


Door Sensor, Exit Button, Alarm & Auxiliary Connection

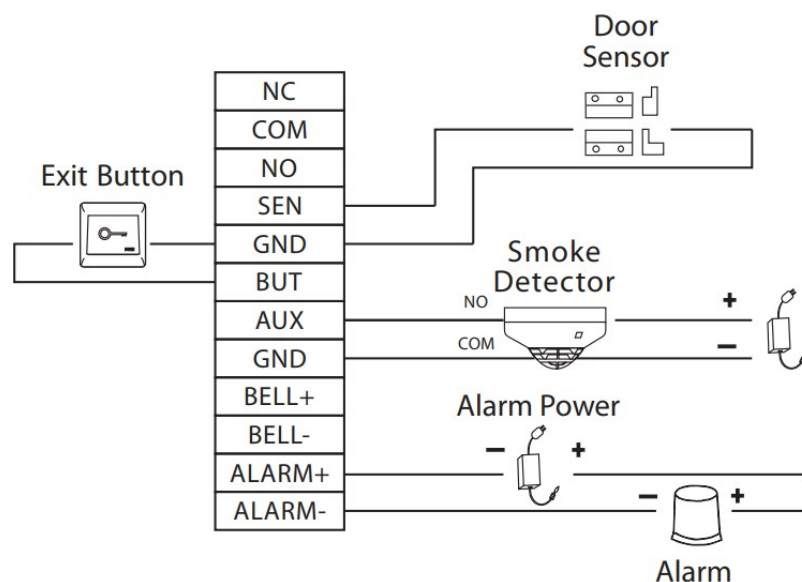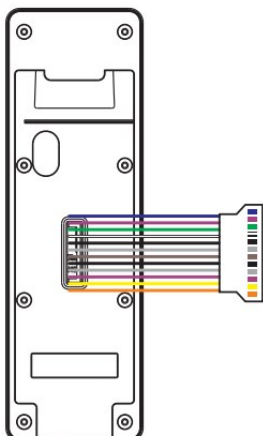

Lock Relay Connection


The system supports Normally Opened Lock and Normally Closed Lock. The NO LOCK (normally unlocked when power-on) is connected with 'NO' and 'COM' terminals, and the NC LOCK (normally locked when power-on) is connected with 'NC' and 'COM' terminals. Take NC Lock as an example below:

1. Device not sharing power with the lock

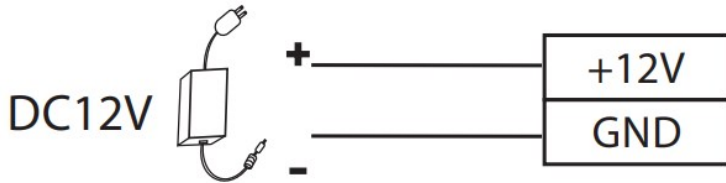

Do not reverse the polarity


Normally Closed Lock

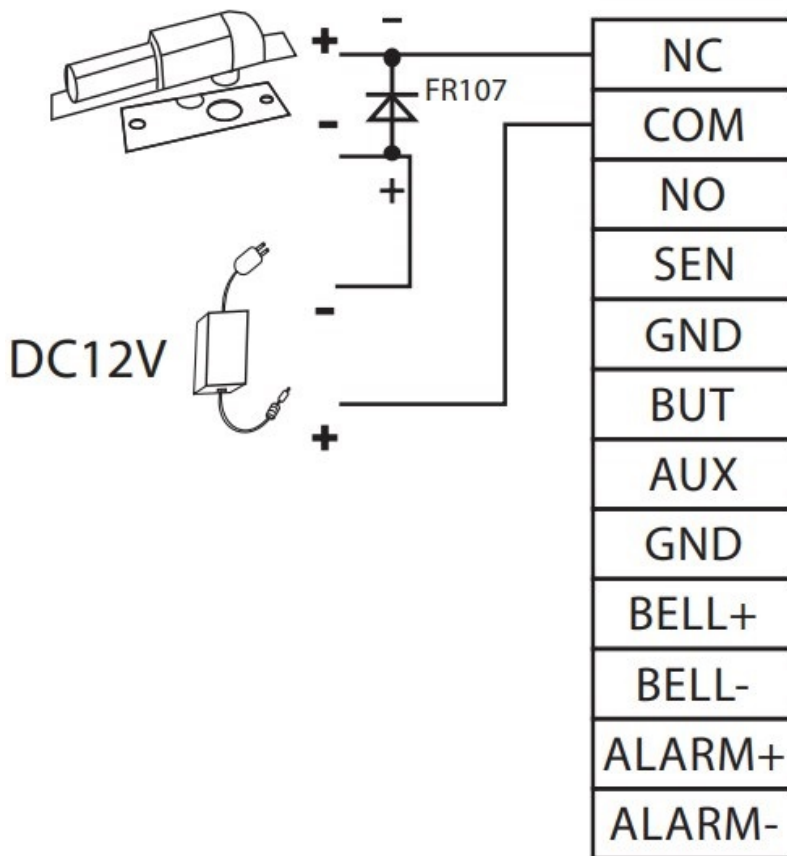

Maximum 30V 3A input.

2. Device sharing power with the lock


Normally Closed Lock

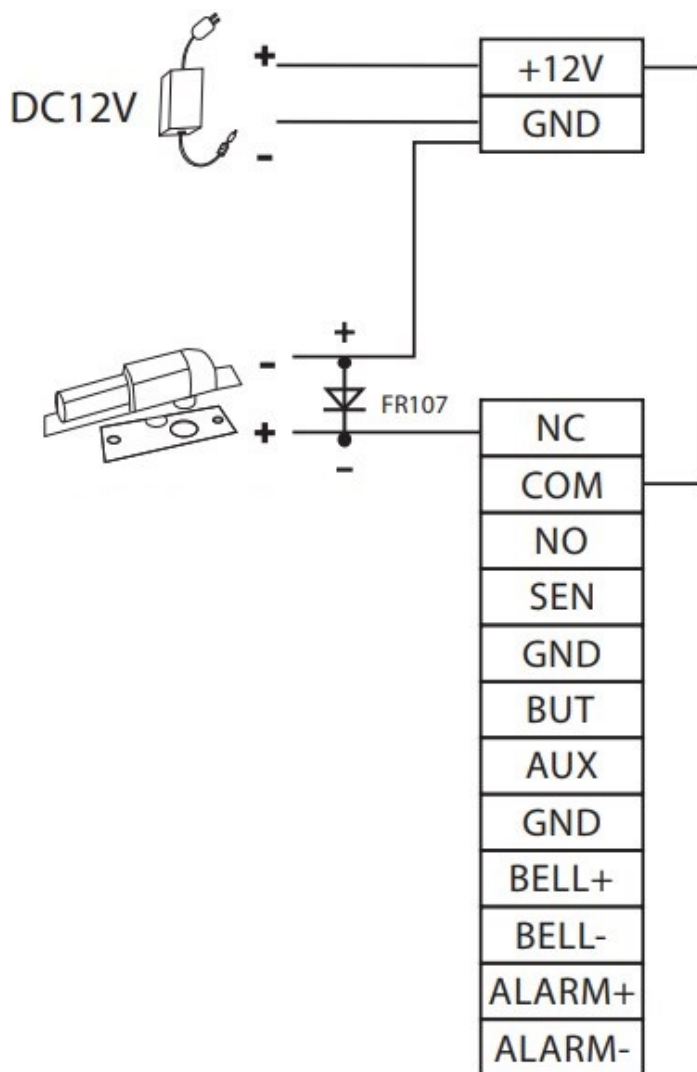

USB Connection


The device supports the connection of KF1000-U reader and USB disk.

KF1000-U Reader

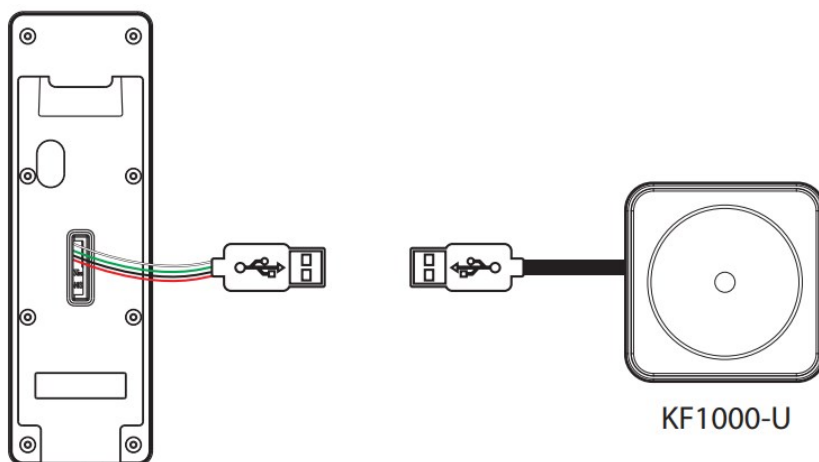

For more details, please refer to the KF1000-U User Manual.

USB Disk

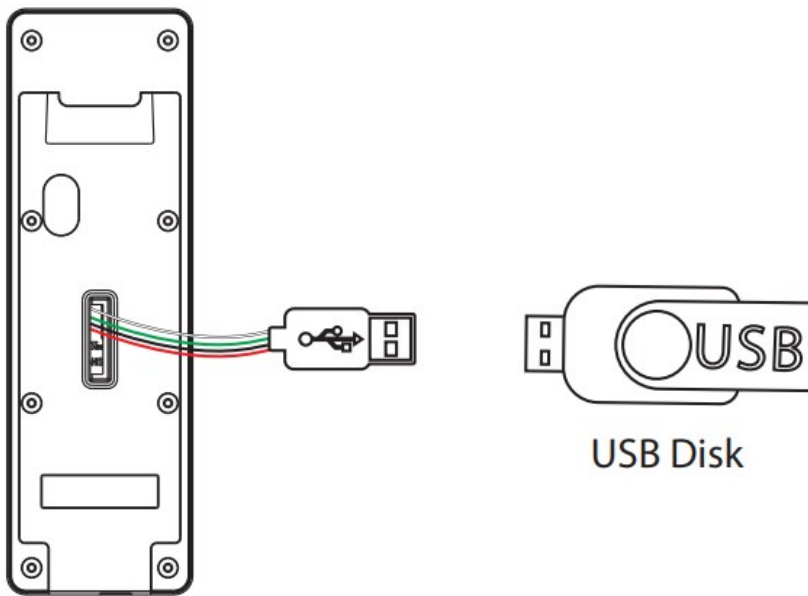


For more details, please refer to the SpeedFace-V3L User Manual.

User Registration

When there is no super administrator set in the device, click on to enter the menu. Add a new user and set User Role to Super Admin, then the system requests for the administrator's verification before entering the menu. It is recommended to register a super administrator initially for security purposes.

Method 1: Registering on the Device


Click on > [User Mgt.] > [New User] to register a new user. The options include entering the user ID and Name, setting User Role and Access Control Role, registering Fingerprint, Face, Card Number and Password.

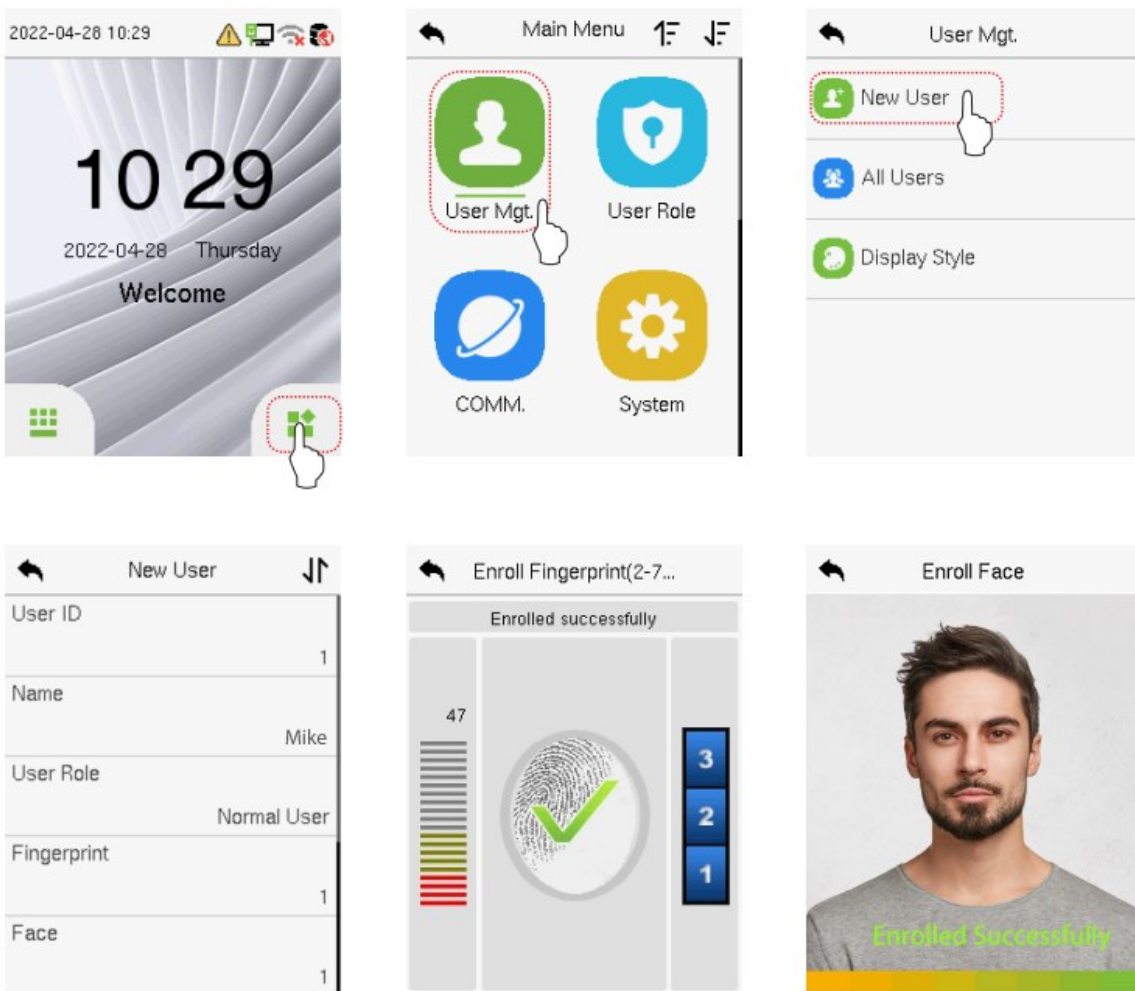

Method 2: Register on ZKBio Access IVS Software

Please set the IP address and cloud service server address in the Comm. Menu option on the device.

1. Click [Attendance] > [Attendance Device] > [Authorized Device] to search the device on the software. When an appropriate server address and port is set on the device, the searched devices are displayed automatically

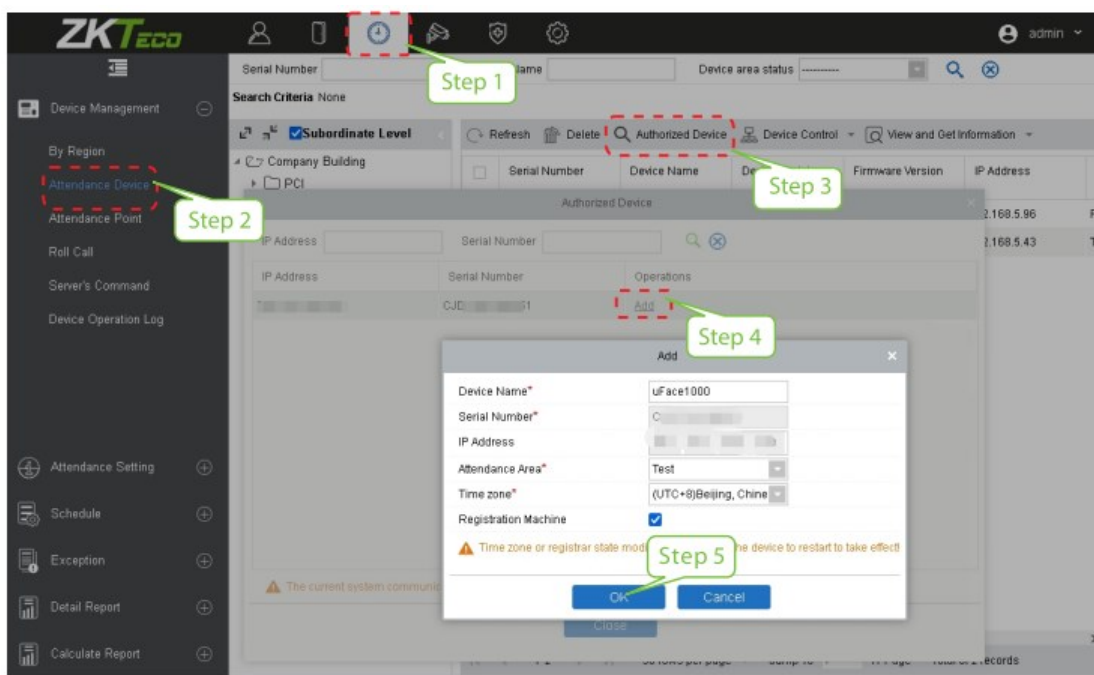

2. Click [Add] in operation column, a new window will pop-up. Select Icon type, Area, and Add to Level from each

dropdowns and click [OK] to add the device.


3. Click [Personnel] > [Person] > [New] and fill in all the required fields to register a new users in the software.
4. Click [Attendance] > [Attendance Device] > [Device Control] > [Synchronize Software Data to the Device] to synchronize all the data to the device including the new users.

For more details, please refer to the ZKBio Access IVS User Manual.


Method 3: Register on the Phone

Once the ZKBio Access IVS software is installed, the users could enroll their face via a browser application on their own mobile phone.

1. Click [Personnel] > [Parameters], input "http://Server address: Port" in the QR Code UGL bar. The software will automatically generate a QR code. Scan the QR code or login onto "http://Server address: Port/app/v1/adreg" by the mobile phone to register users.

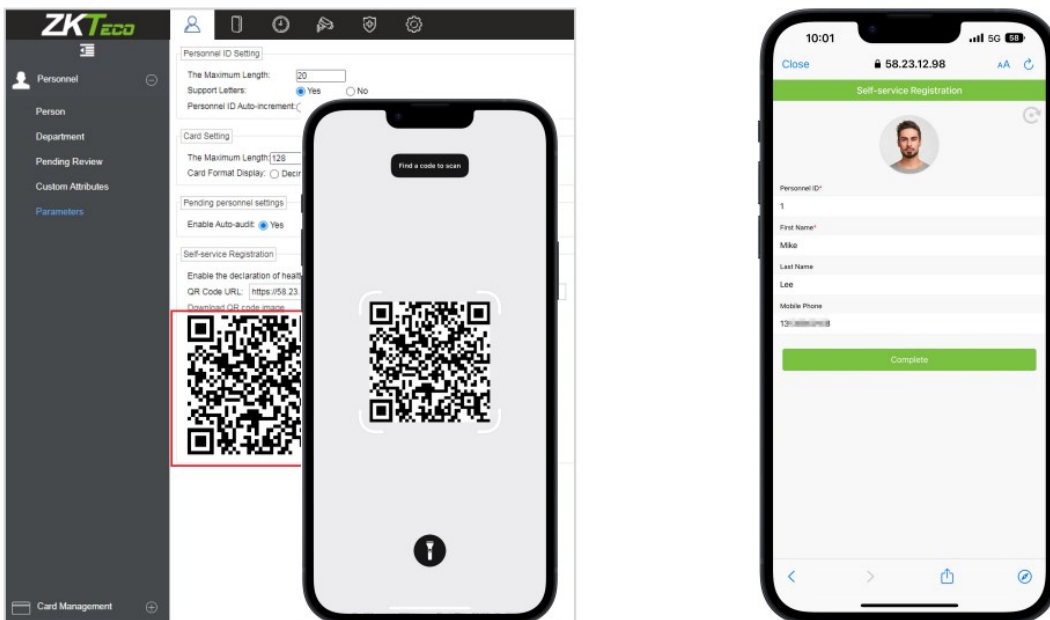


2. The users will be displayed in [Personnel] > [Pending Review], click [View].

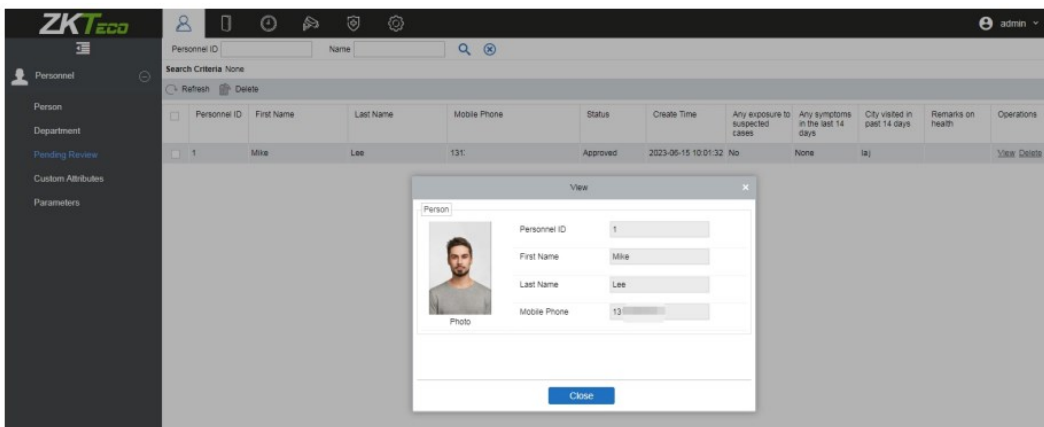

Ethernet and Cloud Server Settings

Click on > [COMM.] > [Ethernet] to set the network parameters. If the TCP/IP communication of the device is successful, the icon will be displayed in the upper right corner of the standby interface.

Click on > [COMM.] > [Cloud Server Setting] to set the server address and server port, that is, the IP address and port number of the server after the software is installed. If the device communicates with the server successfully, the icon will be displayed in the upper right corner of the standby interface.

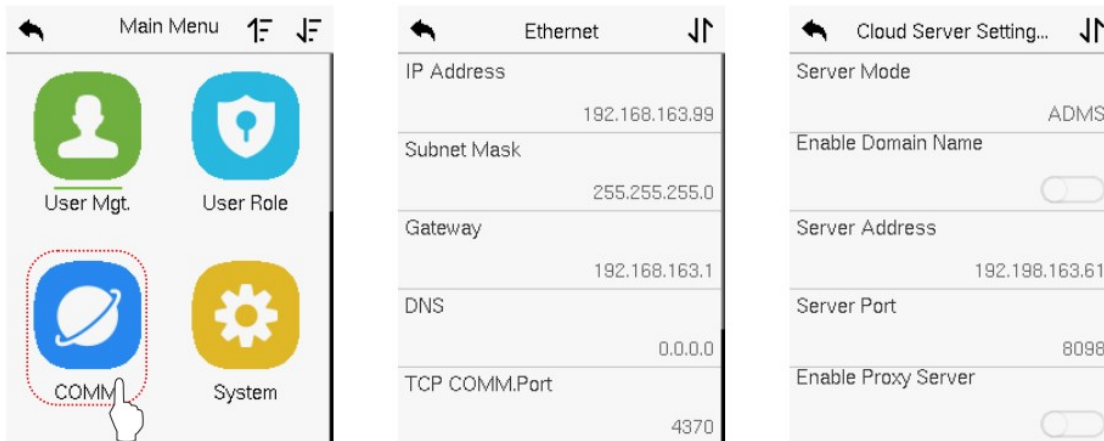

Note:


While pairing the device with ZKBio Access IVS software. Make sure that the option Enable Domain Name is disabled and the correct server address and port are entered.

Server Address: Set as the IP address of the ZKBio Access IVS server.

Server Port: Set as the service port of ZKBio Access IVS



Access Control Setting

Click on > [Access Control] to enter the access control management interface and set relevant parameters of access control.

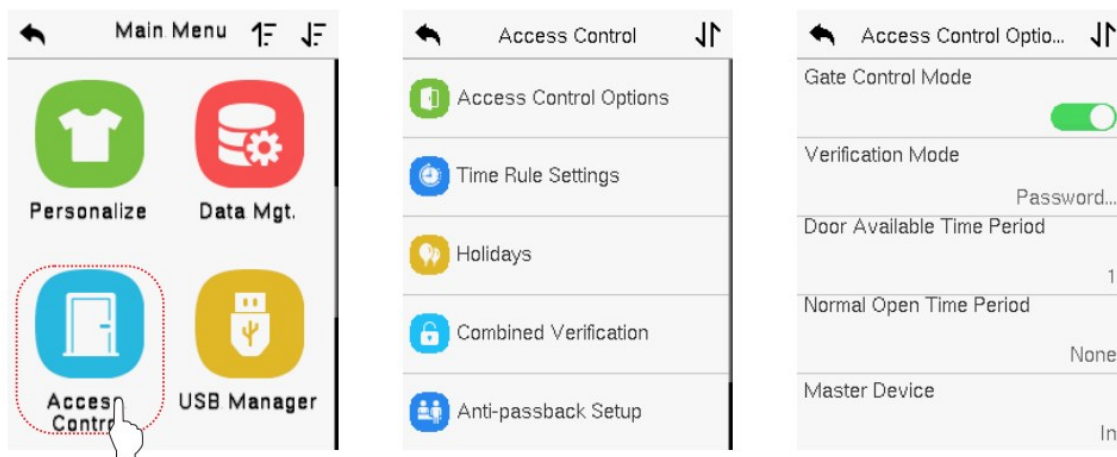

Attendance Record

Click on > [Attendance Record] to enter the record query interface, input the user ID and select the time range, the corresponding attendance record will be displayed.




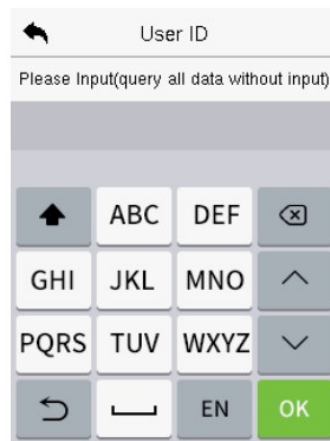
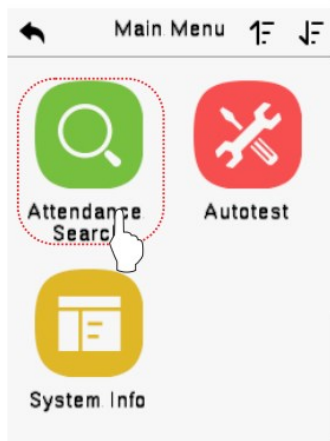


Personal Record Sea...

Date	User ID	Time
05-09	04	
0		09:10 09:10 09:10
		09:10
05-07	08	
0		11:58 11:58 11:52
		11:52 11:52 11:52
		11:52 11:52
05-06	04	
0		09:03 09:03 09:03
		09:03
05-05	131	
0		18:02 18:02 16:32
		16:32 16:30 16:30

System Setting

Click on > [System] to enter the system interface to set the related system parameters for optimizing the accessibility of the device.

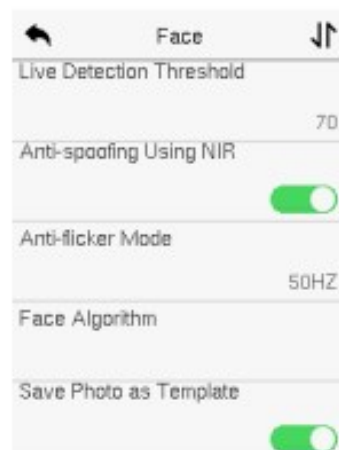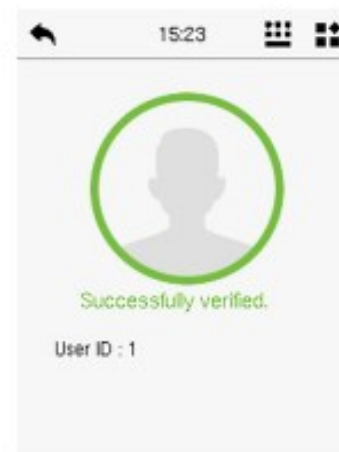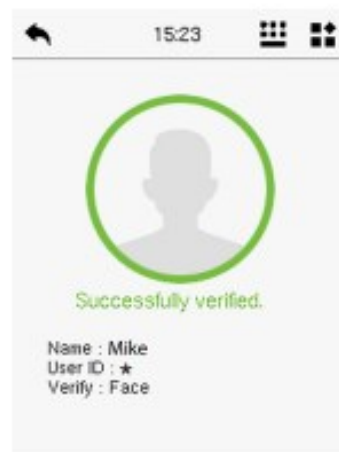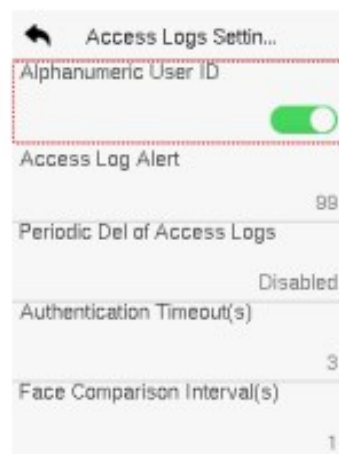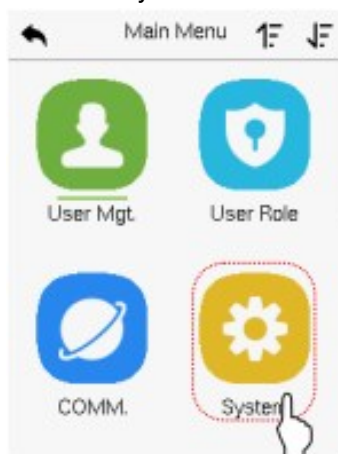


ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.
Phone : +86 769 – 82109991
Fax : +86 755 – 89602394
www.zkteco.com

Copyright © 2023 ZKTECO CO., LTD. All Rights Reserved.



Documents / Resources

 The image shows the cover of a 'Quick Start Guide' for the 'SpeedFace-V3L' device. The cover is white with a grey and green design. The ZKTeco logo is at the top right. The title 'Quick Start Guide' is in the center, with 'SpeedFace-V3L' and 'Version 1.2' below it.	<p>ZKTeco SpeedFace-V3L Face Access Control Stand Alone Terminal [pdf] User Guide SpeedFace-V3L Face Access Control Stand Alone Terminal, SpeedFace-V3L, Face Access Control Stand Alone Terminal, Face Access Control Terminal, Stand Alone Terminal, Alone Terminal, Terminal</p>
---	---

[Manuals+](#).