

## Contents [ [hide](#) ]

- 1 [ZOOM F8n Multi Track Field Recorder](#)
- 2 [Functions revised and added in Version 2.5](#)
- 3 [Naming of audio files when long recordings are split](#)
- 4 [SPECIFICATION](#)
- 5 [Showing a menu to format SD cards at startup](#)
- 6 [INSTRUCTION](#)
- 7 [FAQ](#)
- 8 [Documents / Resources](#)
  - 8.1 [References](#)

# ZOOM F8n Multi Track Field Recorder



## Functions revised and added in Version 2.5

- **Changed naming of audio files when long recordings are split**

When the maximum file size (File Max Size) is exceeded, a new audio file will be created with a sequential number (long recording file number) added to its name rather than with the take number increased by one.

- **Resumption of audio interface mode when restarting enabled**

If the unit was shut down during audio interface mode, this mode will automatically be reactivated when next started up.

- **Function added to show an SD card formatting menu at startup**

An SD card formatting menu can be shown by pressing a specific button during startup.

## Naming of audio files when long recordings are split

When the maximum file size (File Max Size) is exceeded during recording, the file will be split. Now, however, a sequential number (long recording file number) will be added to the audio file name.

See the operation manual for information about setting the maximum file size (File Max Size).

## SPECIFICATION

Version	Audio file name example (for stereo file)	Explanation
Previous version	Scene001_ <u>T002</u> _Tr1_2.wav ①	① Take number The take number is advanced by one each time the file is split. (For example: T001, T002, T003...)
Version 2.5	Scene001_T001_ <u>0002</u> _Tr1_2.wav ①	① Sequential number (long recording file number) The long recording file number is advanced by one each time the file is split. (For example: 0001, 0002, 0003...)

## Showing a menu to format SD cards at startup

### NOTE

 
Be aware that all data on the SD card will be deleted when it is formatted.



SD cards can be formatted by pressing a specific button during startup.

 
## INSTRUCTION

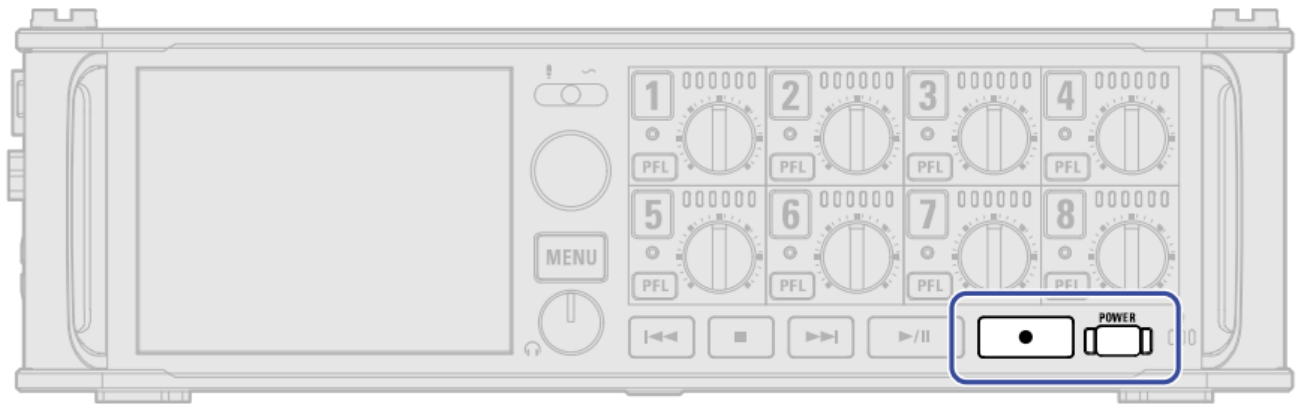

1. Insert an SD card.

 
2. Turn on the power while pressing the  (REC) button.

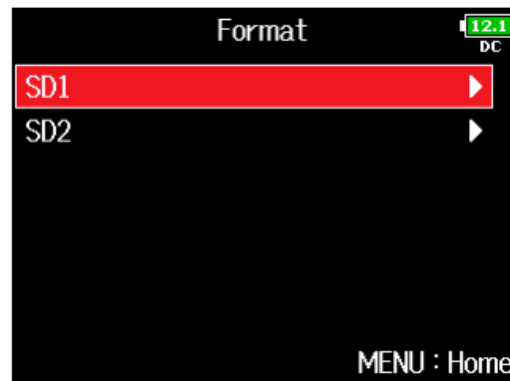

3. Use the  (selection encoder) to select the slot with the SD card to format. Then, press the  (selection encoder).



4. Use the  (selection encoder) to select "Yes". Then, press the  (selection encoder).

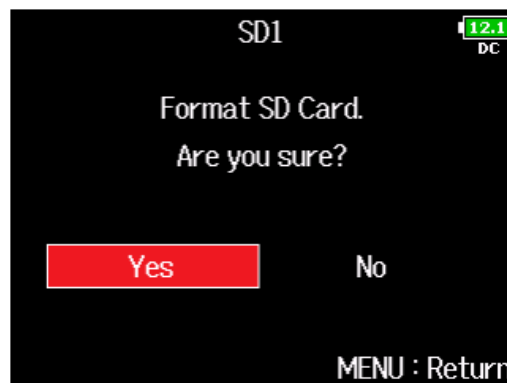

SD Card formatting will start.

## HINT

SD cards can also be formatted from the Menu Screen.

# ZOOM CORPORATION

4-4-3 Kanda-surugadai, Chiyoda-ku, Tokyo 101-0062 Japan

[zoomcorp.com](http://zoomcorp.com)

## Version 2.5 Supplementary Manual

You must read the Usage and Safety Precautions before use.

### © 2025 ZOOM CORPORATION

Copying or reprinting this manual in part or in whole without permission is prohibited.


Product names, registered trademarks and company names in this document are the property of their respective companies. All trademarks and registered trademarks in this document are for identification purposes only and are not intended to infringe on the copyrights of their respective owners. Proper display is not possible on grayscale devices.

## FAQ

**Q: Can I format the SD card without pressing a specific button during startup?**

**A:** Yes, you can also format SD cards from the Menu Screen by following the on-screen instructions.

## Documents / Resources

	<a href="#">ZOOM F8n Multi Track Field Recorder [pdf]</a> Instruction Manual v2.5, F8n Multi Track Field Recorder, Multi Track Field Recorder, Track Fi eld Recorder, Field Recorder, Recorder
---	--

## References

- [User Manual](#)

---

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.