



## ZTE MF920U MiFi Router WiFi Device User Guide

[Home](#) » [ZTE](#) » ZTE MF920U MiFi Router WiFi Device User Guide 

### Contents

- [1 ZTE MF920U MiFi Router WiFi Device](#)
- [2 Getting to Know Your Device](#)
- [3 Installing Your Device](#)
- [4 Connecting to Your Device](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



 
**ZTE MF920U MiFi Router WiFi Device**



## Getting to Know Your Device

### Appearance

The following figure is for your reference only.

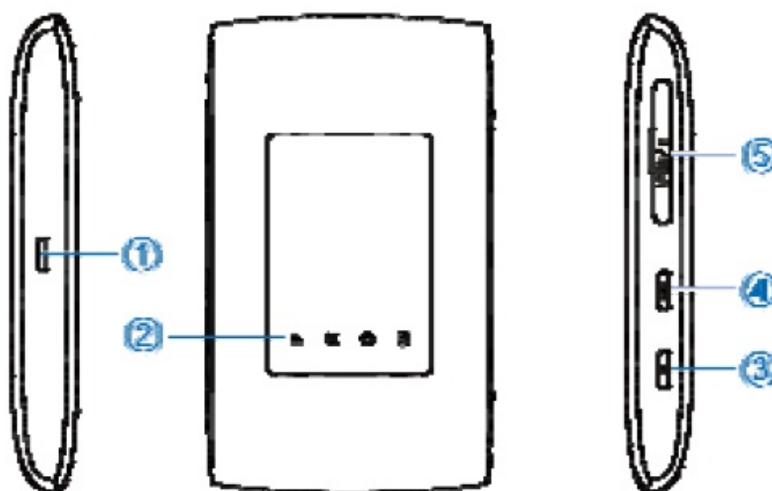

1. Charging/micro-USB jack

2. Indicator light

3. Power key

1. Press and hold for about 2 seconds to power on/off your device.

2. Press and hold for about 10 seconds to power off your device, if it is in abnormal status. And then press and hold for about 2 seconds to power on your device again.





4. WPS key

Press and hold for about 2 seconds to activate the WPS function.


5. micro-SIM card slot and reset hole

**Reset hole:** Press and hold for about 2 seconds to restore your device to the factory settings.

### Indicator lights

 Indicator	Status	Description
Battery 	Red solid / blinking	The battery is low. Please charge the battery.
	Green blinking	The battery is being charged.
	Green solid	The battery level is middle or high.
	Light off	Your device is powered off and not being charged.
Wi-Fi 	Blue solid	Wi-Fi is active.
	Blue blinking	WPS is active.
	Light off	Wi-Fi is off.
SMS 	Blue blinking	You have new messages or the message storage is full.
	Light off	There is neither an unread message nor a new message.
Network 	Red	The device is in error status   The device is not registered to the mobile network.   There is no micro-SIM card inserted.   There is no network service available.
	Green solid	The device is registered to the 2G/3G mobile network.
	Green blinking	The device is connected to the 2G/3G mobile network and data is being transferred.
	Blue solid	The device is registered to the 4G LTE network.
	Blue blinking	The device is connected to the 4G LTE network and data is being transferred.

**MIFI device is able to connect up to 6 WIFI enable devices.**

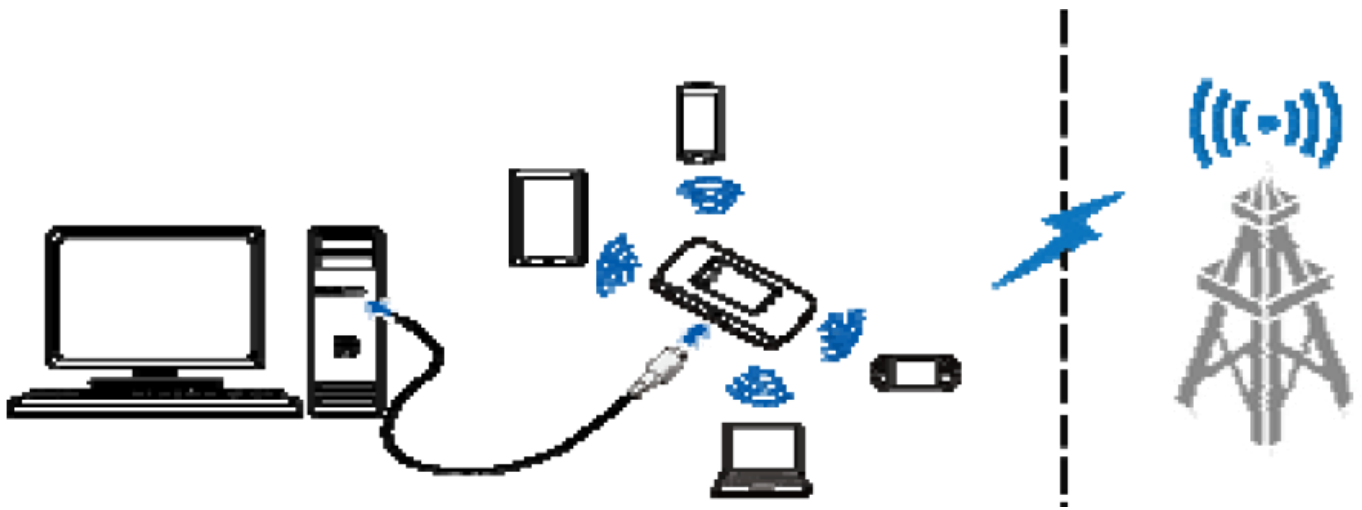

## Installing Your Device

 
1. Open the micro-SIM card slot cover.



2. Install a micro-SIM card to the micro-SIM card slot.

### **WARNING!**

Your device does not support SIM cards, nano-SIM cards or any other non-standard micro-SIM cards. To avoid damage to the device, do not use those cards or any card holders.

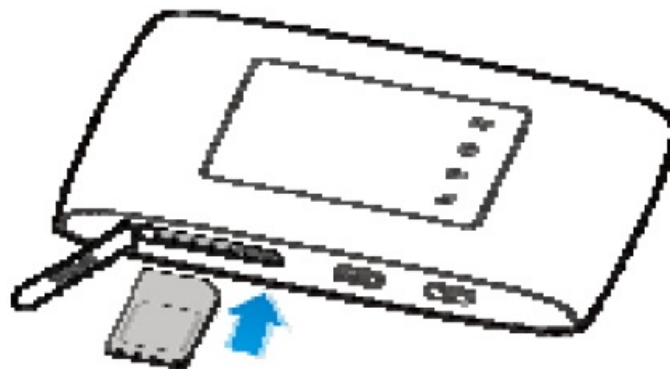

3. Close the micro-SIM card slot cover.

## Connecting to Your Device

### Using Wi-Fi

1. Power on your device.
2. Ensure that your computer or other client devices have enabled Wi-Fi, and search for available wireless networks.
3. Select the Wi-Fi name (SSID) of your device, and click Connect.

- 4. Enter the Wi-Fi password if necessary, and click OK.
- 5. Wait until the client device is connected to your device successfully

**Logging in to the 4G Mobile Hotspot Configuration Page**

- 1. Ensure that the connection between your device and the client device is correct.
- 2. Launch the Internet browser and enter <http://192.168.0.1> or <http://ufi.ztedevice.com> in the address bar.
- 3. Enter the password to log in to the 4G Mobile Hotspot configuration page.

**NOTE:**

You can view the label on the device to get the default password.

**Documents / Resources**



[ZTE MF920U MiFi Router WiFi Device](#) [pdf] User Guide

MF920U, MiFi Router WiFi Device, MF920U MiFi Router WiFi Device, Router WiFi Device, WiFi Device