



2315a802 Popcorn Maker



ZULAY 2315a802 Popcorn Maker Instructions

[Home](#) » [Zulay](#) » ZULAY 2315a802 Popcorn Maker Instructions 

Contents

- [1 ZULAY 2315a802 Popcorn Maker](#)
- [2 INSTRUCTIONS](#)
- [3 WARRANTY](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)



ZULAY 2315a802 Popcorn Maker



INSTRUCTIONS

1. Pop out the bottom of the popcorn maker to put it in its upright position.
2. Pour popcorn kernels into the popper. Fill to the bottom measurement line (approximately $\frac{1}{4}$ cup) for a half bowl of popcorn or to the upper line (approximately $\frac{1}{3}$ cup) for a full bowl of popcorn. Be sure to not fill the kernels above the upper line!
3. As desired, add 1-2 tsp. of oil to the kernels before cooking, and shake to evenly distribute over the kernels. Adding more than 1-2 tsp. before cooking may scorch your popper. For best-popping results, cook the popcorn without any oil or seasonings.
4. Put the lid inside the bowl, making sure to not push it down and create a vacuum. A vacuum will prevent your popcorn from cooking properly and could cause it to burn.
5. Cook in your microwave on high heat for 2-4 minutes, depending on the wattage of your microwave. You can also use the popcorn button on your microwave. Cook until the popping slows to approximately 2-3 seconds apart.
6. Remove the popper from the microwave using the safety handles. Please note that the handles will be hot and if needed, use oven mitts to remove the popper from the microwave.
7. The lid and popcorn will be hot! Use caution to remove the lid from the popper and add seasonings and oil as desired. Hold the handles to toss the popcorn to spread your seasonings.

TIPS

1. We have found the best way to season popcorn is with an oil spray. Butter-flavored cooking sprays work well.

2. Only cook popcorn kernels in your popper. Other grains or items may cause burning.
3. If you burn your popcorn and have a scorch mark on your popper, clean it with a solution of equal parts vinegar and water to remove the scorch.
4. If some of the kernels do not pop, you can remove the popped kernels and cook the remaining kernels to pop them.
5. High altitudes may cause changes in cooking times.
6. Your popper is dishwasher safe.

Our Story

Zulay Kitchen is named after my extraordinary mother, Zulay. She was raised in poverty-stricken Venezuela and, against all odds, brought my brother and me to live in the US. As a single mother, she worked extra-long hours but still found time to cook healthy meals for us. At the time, I thought nothing of it. But now that I'm married with children of my own, I see how much of a superhero mom she was.

My wife and I created Zulay Kitchen to make shopping easier than ever in today's busy world. We believe that cooking should be fast and easy, so you have more time to enjoy with your loved ones.

Aaron Aaron Cordovez, Co-Founder of Zulay Kitchen

WARRANTY

Lifetime Warranty and Satisfaction Guarantee

- We believe in our product so much that if for any reason you are not fully satisfied, we will make it right. To register and for full details: www.zulaykitchen.com/warranty
- We Are Here For You
- If you have a question or need support, let us know.
- Zulay Kitchen: Clearwater, Florida, USA
- C [727-386-9117](tel:727-386-9117)
- Mon-Fri 9:00 AM – 5:00 PM (EST) Message us at www.zulaykitchen.com/contact-us Follow us on Social Media
- @zulay_kitchen
- @zulaykitchen Zulay Kitchen


LIFETIME WARRANTY REGISTRATION

- JUST A FEW STEPS AWAY:
- Open the Camera App on your phone
- Point to the code and focus your camera on the code
- Click the notification that pops up*
- If you're having trouble downloading a QR Code App

OR GO TO THIS LINK: ZULAYKITCHEN.COM/WARRANTY



Documents / Resources

	<p>ZULAY 2315a802 Popcorn Maker [pdf] Instructions</p> <p>2015, 2315a802, 2315a802 Popcorn Maker, 2315a802, Popcorn Maker, Maker</p>
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.