



ZYCOO SC15 Network Ceiling Speaker Installation Guide

[Home](#) » [ZYCOO](#) » ZYCOO SC15 Network Ceiling Speaker Installation Guide 

ZYCOO SC15 Network Ceiling Speaker



Contents

- [1 Package List](#)
- [2 Installation Method](#)
- [3 Web Login](#)
- [4 System Reset](#)
- [5 Interfaces and Instructions](#)
- [6 Customers Support](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Package List

- SC15 Network Ceiling Speaker (1 pcs)




- Warranty Card (1 pcs)



- Quick Installation Guide (1 pcs)



- Mounting Bracket (optional)

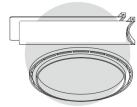


- Power Adaptor (optional)



Installation Method


Installation Method 1

1. Cut a hole in the ceiling with 206 ± 1 mm diameter.
2. Connect network cable and power supply (if PoE is not enabled on the network cable), and other cabling if required.
3. Detach the metal mesh (adsorbed by magnets).
4. Adjust the clips and place the back end of the ceiling speaker into the mounting hole, adjust the clips again for being able to clamp the ceiling.
5. Tighten the screws in order to tighten the clamping of the clips with the ceiling, and then cover the metal mesh.

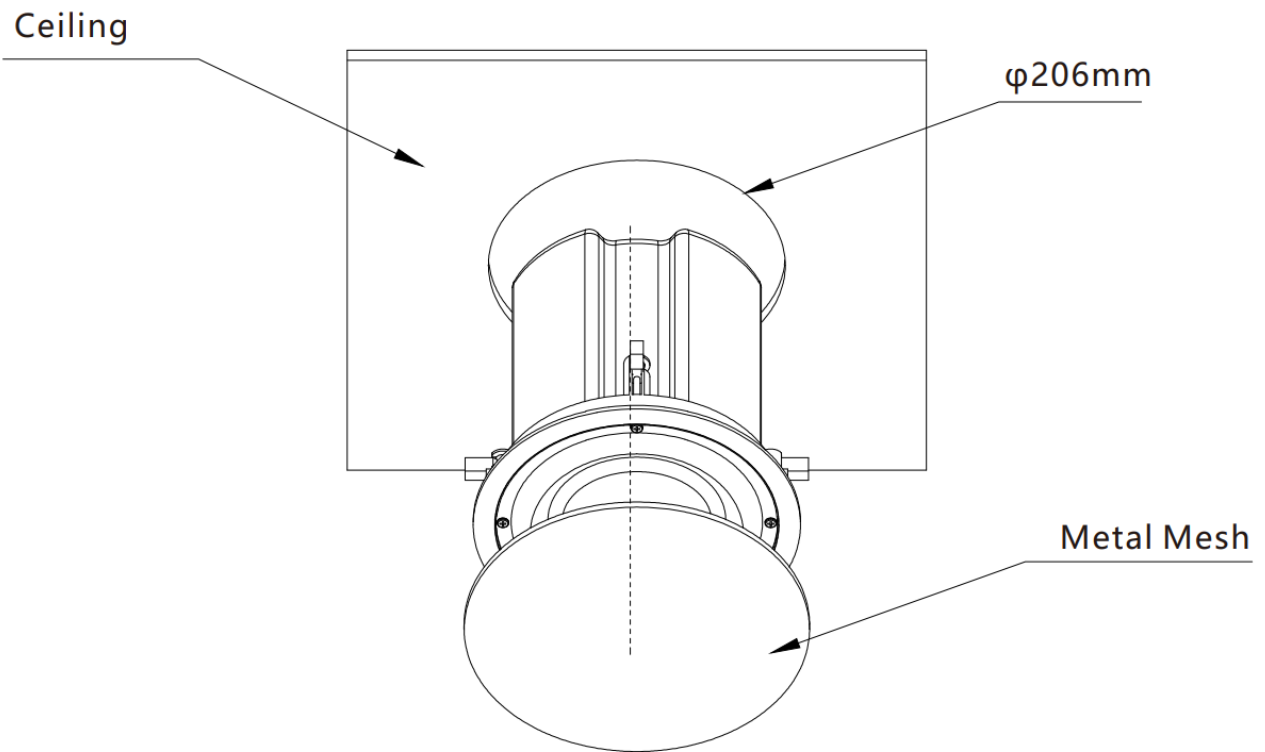


Installation Method 2

1. To install the ceiling speaker with mounting brackets, please first fix the two plates to the plastic ring.

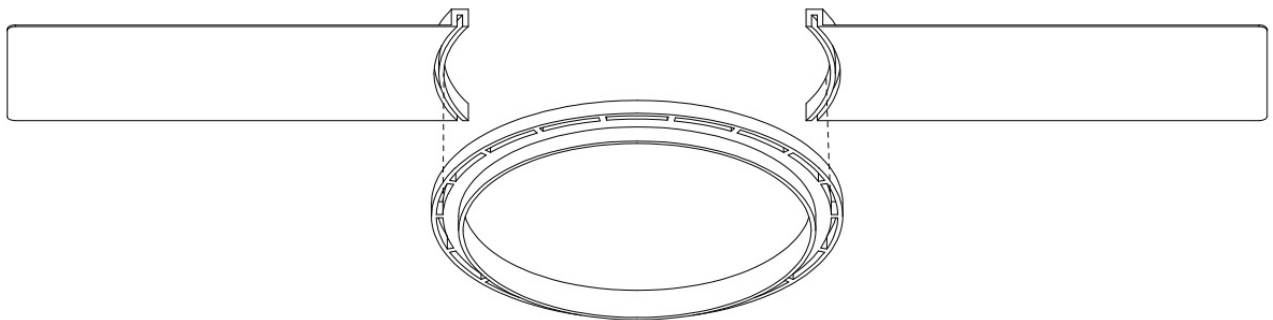

2. Cut a hole in the ceiling with 206 ± 1 mm diameter.
3. Connect network cable and power supply (if PoE is not enabled on the network cable), and other cabling if required.
4. Detach the metal mesh (adsorbed by magnets).
5. Place the mounting bracket on top of ceiling, push the speaker back end into the ceiling through the mounting bracket ring and ensure the mounting bracket is tightly attached to the ceiling.
6. Adjust the clips for being able to clamp with the mounting bracket.
7. Tighten the screws of the 4 clips in order to tighten the clamping of the clips with the mounting bracket and the ceiling, and then cover the metal mesh.

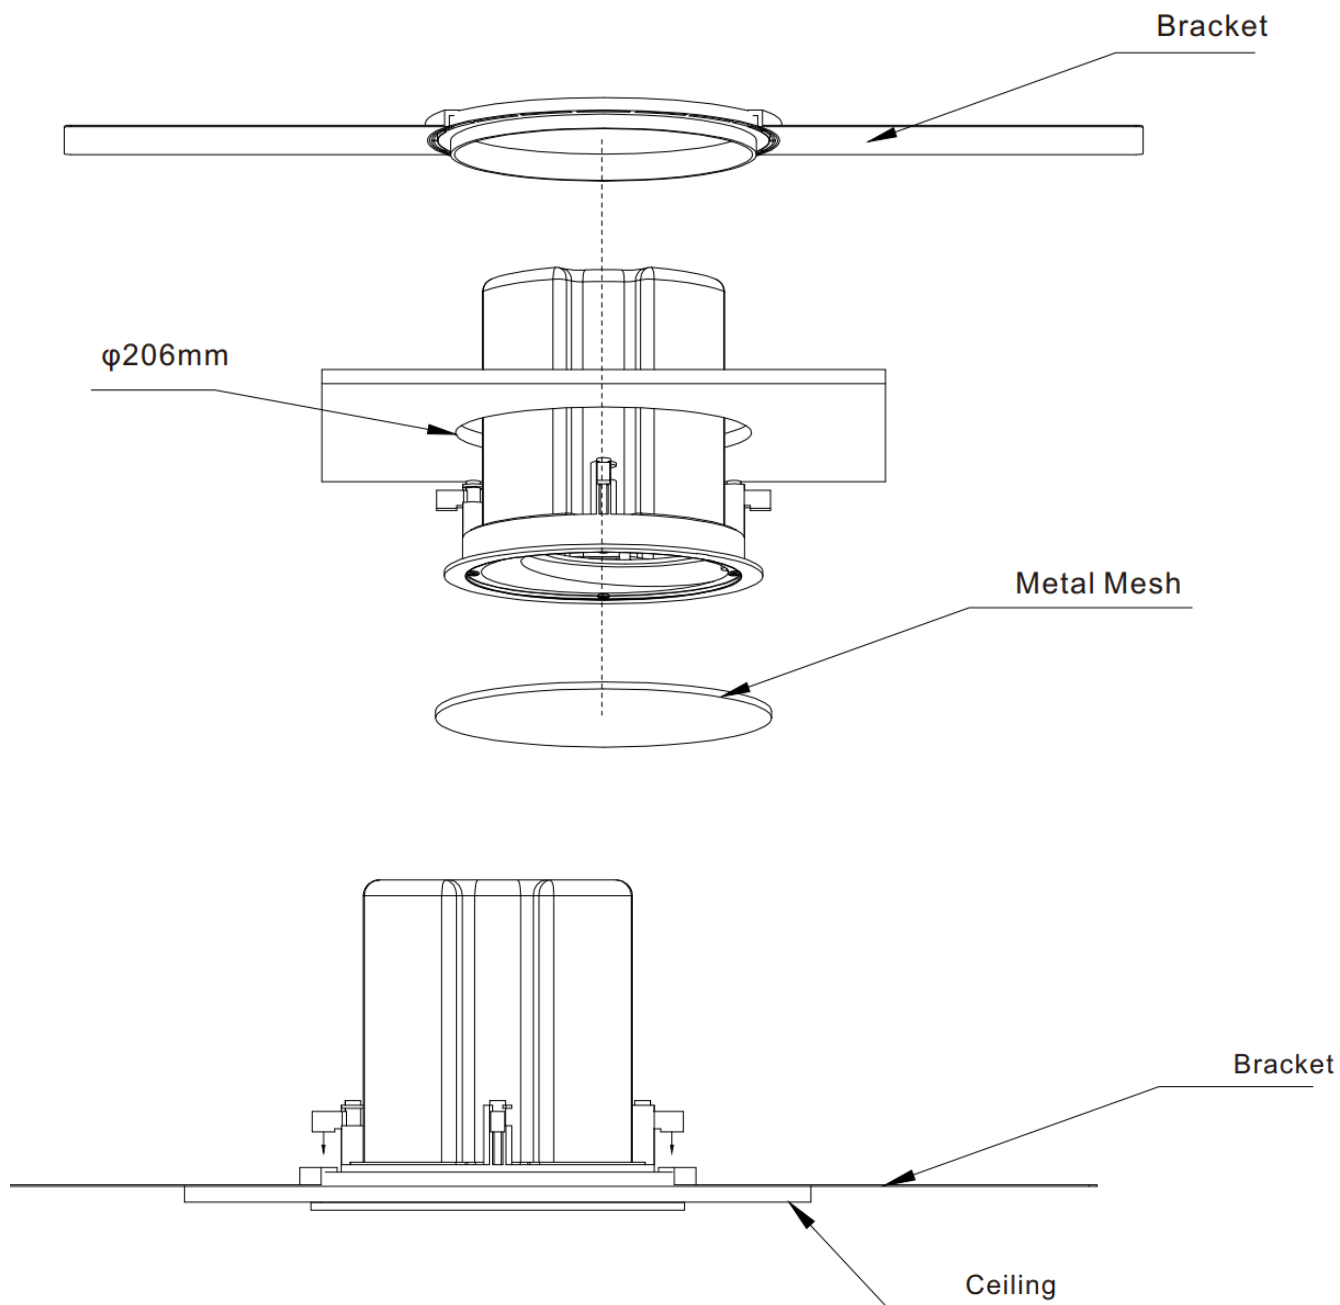

Web Login


6 Connect network cable and power supply (if PoE is not enabled on the network cable).

7 Wait for 30 seconds then press and hold the RST button for 5 seconds and release, it will announce the IP address obtained from the DHCP server. If there's no DHCP server or DHCP fails, it will use default IP 192.168.1.101. In the browser address bar input the IP address you hear to open its web management interface. Default username and password admin/admin.

System Reset

To reset factory defaults, press and hold the RST button for 10 seconds (5 seconds for IP address announcements) and release, now you should hear voice prompts "Resetting factory defaults, rebooting...", it means the speaker will now reset.

Interfaces and Instructions

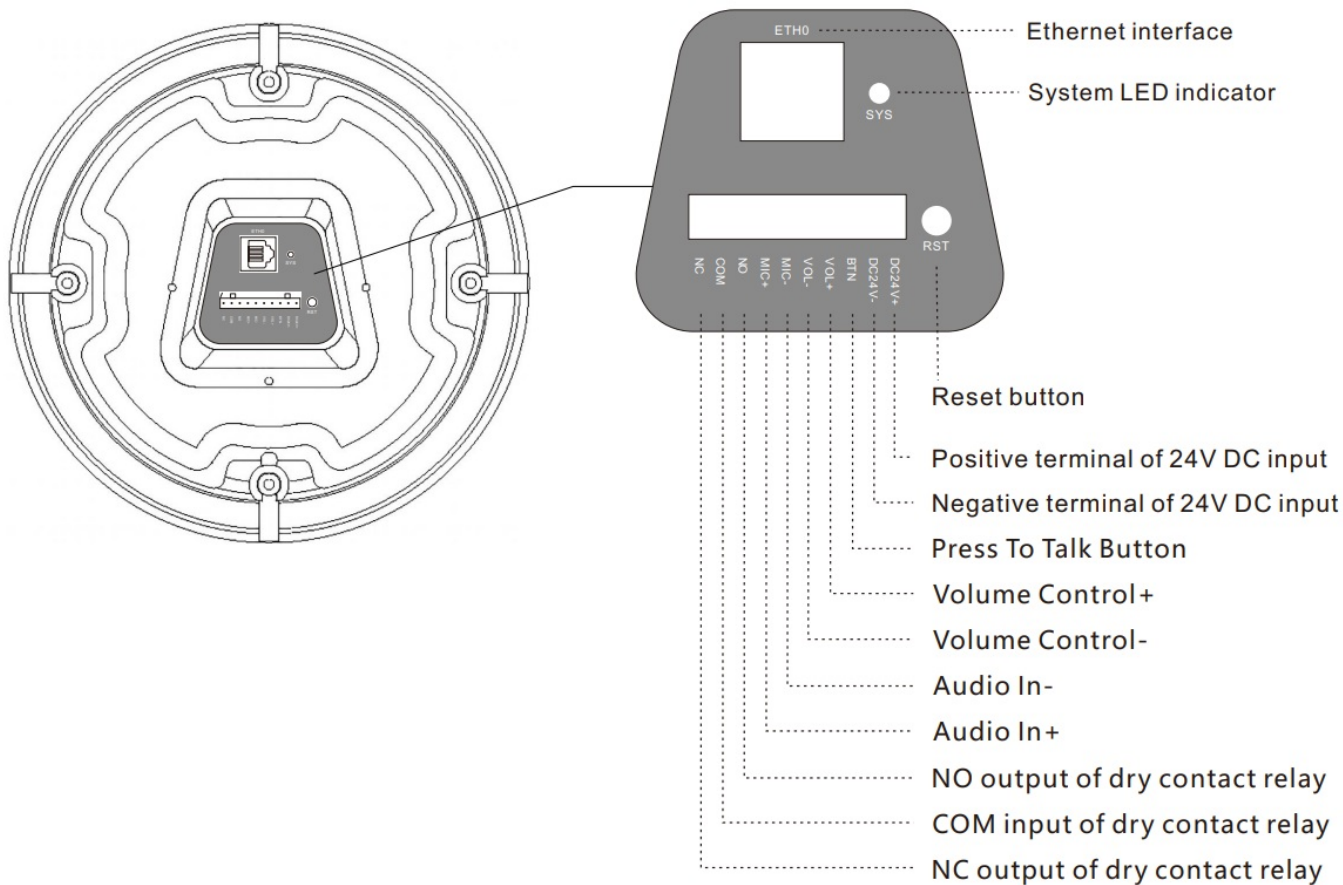

Customers Support


Zycoo Communications LLC

www.zycoo.com

© 2023 Zycoo Communications LLC All rights reserved



Documents / Resources

	<p>ZYCOO SC15 Network Ceiling Speaker [pdf] Installation Guide SC15, SC15 Network Ceiling Speaker, Network Ceiling Speaker, Ceiling Speaker, Speaker</p>
---	---

References

- [ZYCOO | Leading Edge IP Communication Solutions](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.