



ZYXEL FLEX-ATP Power Socket Unified Security Gateway User Guide

[Home](#) » [ZYXEL](#) » ZYXEL FLEX-ATP Power Socket Unified Security Gateway User Guide 

Contents

- [1 ZYXEL FLEX-ATP Power Socket Unified Security Gateway](#)
- [2 Hardware Installation](#)
- [3 Support Information](#)
- [4 Documents / Resources](#)



ZYXEL FLEX-ATP Power Socket Unified Security Gateway



See the User's Guide at www.zyxel.com for more information, including customer support and safety warnings.

EU Importer

- Zyxel Communications A/S
- Gladsaxevej 378, 2. th. 2860 Seborg, Denmark
- <https://www.zyxel.com/dk/da/>.

UK Importer


- Zyxel Communications UK Ltd.

- 2 Old Row Court, Rose Street, Wokingham, RG40 1XZ, United Kingdom (UK)
- <https://www.zyxel.com/uk/en/>.

US Importer

- Zyxel Communications, Inc
- 1130 North Miller Street Anaheim, CA 92806-2001
- <https://www.zyxel.com/us/en/>.

Hardware Installation

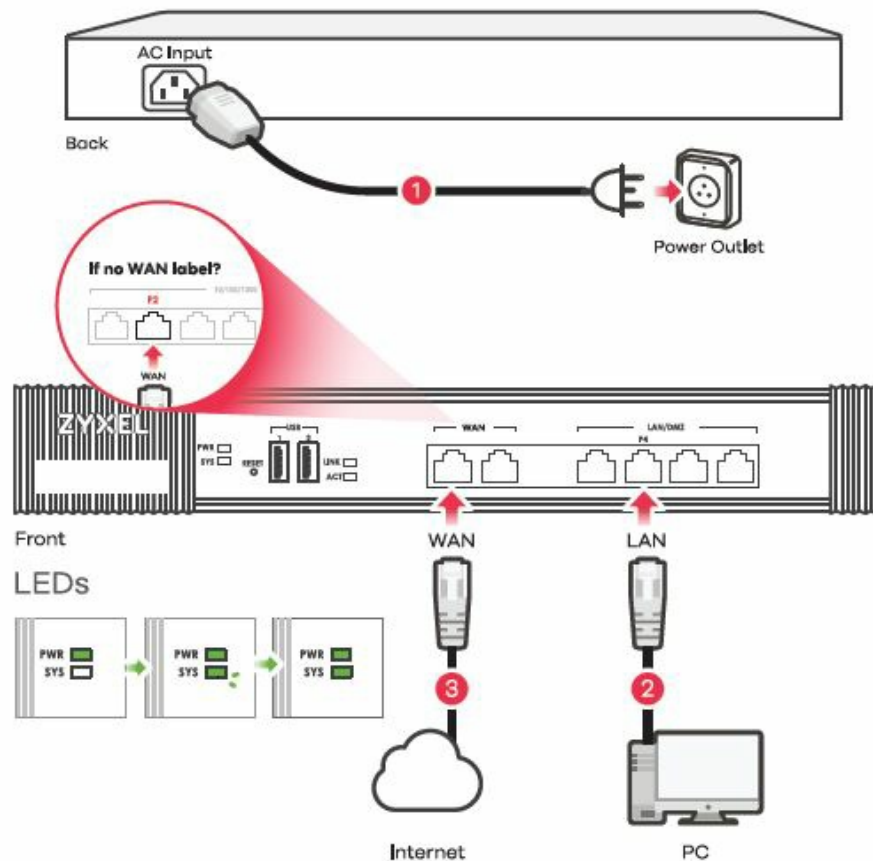

Management

To download the complete version of the Quick Start Guide, please scan the QR code.

Download QR Code and Link:

- <https://www.zyxel.com/firewall/QSG>.



Use the included power adaptor or power cord to connect the power socket (on the rear panel) to a power outlet.
2. Look at the front panel. The PWR light turns on. The SYS light blinks during system testing and initialization and then stays on when the system is ready.

Support Information

USA

- +1800 255 4101
- support@zyxel.com.

EU, Turkey, Russia

- <https://support.zyxel.eu>.

Thailand

- + 66 2831 5315
- support@zyxel.co.th.

Taiwan

- + 886 2 2739 9889
- service@zyxel.com.tw.

Documents / Resources

	ZYXEL FLEX-ATP Power Socket Unified Security Gateway [pdf] User Guide FLEX-ATP Power Socket Unified Security Gateway, FLEX-ATP, Power Socket Unified Security Gateway, Unified Security Gateway, Security Gateway, Gateway
---	--