




# FS AP-W6T6817C Enterprise WiFi 6 Access Point User Guide

[Home](#) » [FS](#) » FS AP-W6T6817C Enterprise WiFi 6 Access Point User Guide 

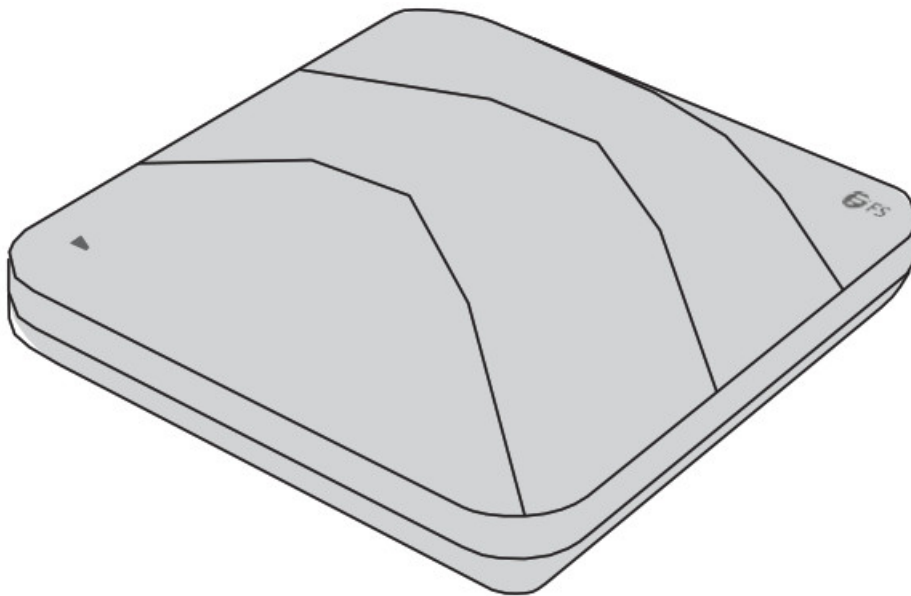

V1.0  
AP-W6D2400C/AP-W6T6817C  
ENTERPRISE WI-FI 6 ACCESS POINT  
Quick Start Guide

## Contents


- [1 Introduction](#)
- [2 Accessories](#)
- [3 Optional \(Not Included\)](#)
- [4 Hardware Overview](#)
- [5 Installation Requirements](#)
- [6 Mounting the Access Point](#)
- [7 Configuring the AccessPoint](#)
- [8 Troubleshooting](#)
- [9 Support and other resources](#)
- [10 Product Warranty](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

## Introduction

Thank you for choosing the enterprise Wi-Fi 6 access point. This guide is designed to familiarize you with the layout of the access point and describes how to deploy the access point in your network.



AP-W6D2400C

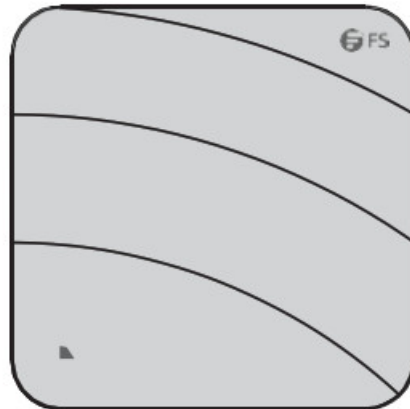

AP-W6T6817C

## Accessories

### AP-W6D2400C

AP-W6D2400C



Power Cord x1




Power Injector x1



Screw x2



Screw Anchor x2

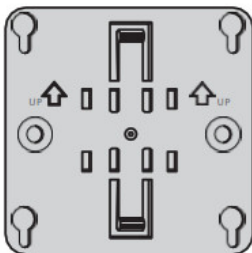

Mounting Bracket x1

AP-W6T6817C

AP-W6T6817C



Power Cord x1




Power Injector x1




Screw x4



Screw Anchor x4

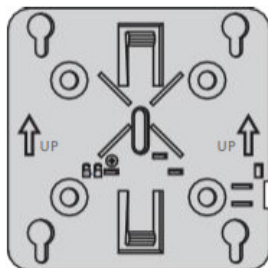


Mounting Bracket x1

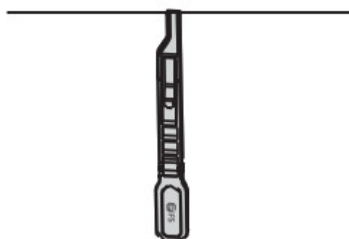


Hidden Lock's Key x1

Optional (Not Included)

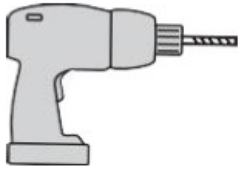

Portable Hammer Drill x1

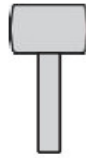

Rubber Hammer x1



Screwdriver x1




Marker x1

## Hardware Overview



### Ports

#### AP-W6D2400C

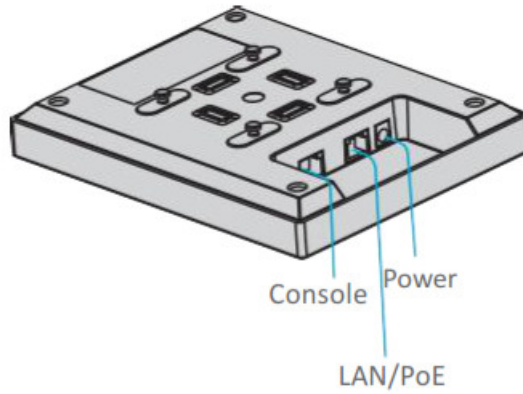


Ports	Description
LAN/PoE	LAN/PoE port
Console	An RJ45 console port for serial management
Power	48V DC power port

#### AP-W6T6817C

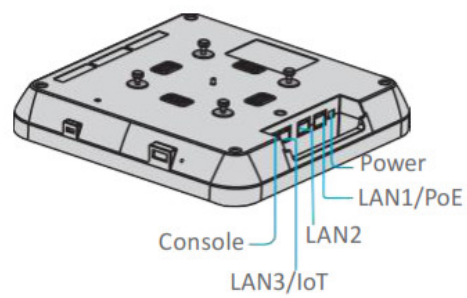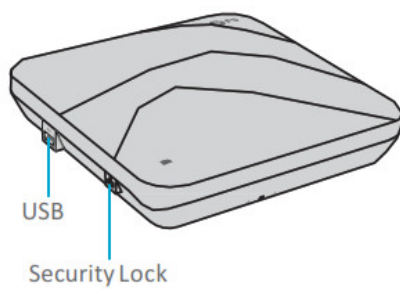


Ports	Description
LAN1/PoE	LAN1/PoE port, PoE+ capable
LAN2	LAN2 port
LAN3/IoT	LAN3/IoT port
Security Lock	Anti-theft lock hole
Console	An RJ45 console port for serial management
USB	A USB management port for software and configuration backup and offline software upgrade
Power	48V DC power port

**Button**  
**AP-W6D2400C/AP-W6T6817C**

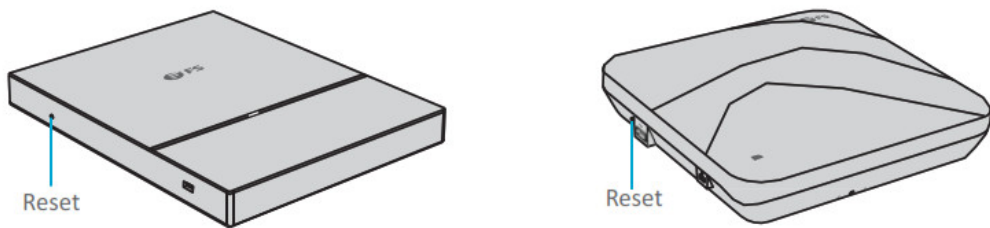

Button	Description
Reset	Restart: Press the Reset button for less than three seconds.
	Restore to Factory Default Settings: Press and hold the Reset button for more than three seconds.

**LED**  
**AP-W6D2400C/AP-W6T6817C**

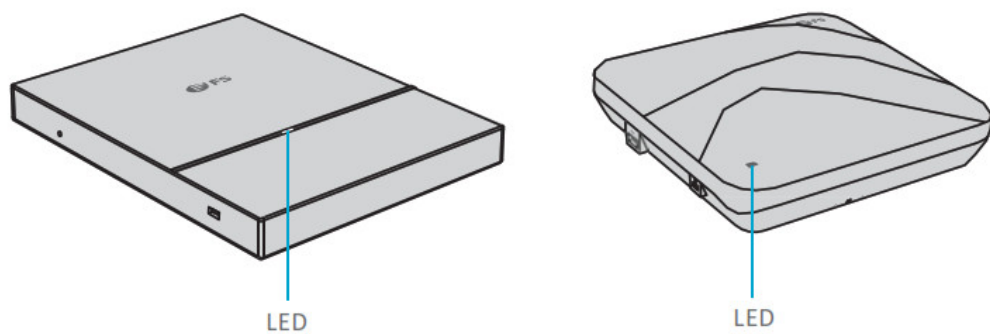

**FIT AP:**

Status	Frequency	Description
Out	N/A	The AP is not receiving power, or the AP is in Do Not Disturb mode, which can be disabled by software.
Blinking Green	3Hz	UBoot program initialization in progress.
Solid Green	N/A	Main program initialization in progress.
Blinking Red	3Hz	Initialization is complete, but the Ethernet link is down.
	2Hz	Locates the AP-W6D2400C.
Double Blinking Red	3Hz (on and off for 2 cycles alternately)	Locates the AP-W6T6817C.
Solid Orange	N/A	Initialization is complete, and the AP is establishing a CAPWAP connection with a wireless LAN controller.
Blinking Orange	3Hz	Firmware upgrade in progress. Do not power off.
Solid Blue	N/A	Normal operation, but no wireless clients are associated with the AP.
Blinking Blue	3Hz	Normal operation, at least one wireless client is associated with the AP.

#### FAT AP:

Status	Frequency	Description
Out	N/A	The AP is not receiving power, or the AP is in Do Not Disturb mode, which can be disabled by software.
Blinking Green	3Hz	UBoot program initialization in progress.
Solid Green	N/A	Main program initialization in progress.
Blinking Red	3Hz	Initialization is complete, but the Ethernet link is down.
Solid Blue	N/A	Normal operation, but no wireless clients are associated with the AP.
Blinking Blue	3Hz	Normal operation, at least one wireless client is associated with the AP.



**NOTE:** Hz indicates the number of times a flashing light blinks per second.

## Installation Requirements


- Install the AP indoors.
- Make sure the floor of the installation site is dry and flat.
- Place the AP in a dry area and avoid liquid intrusion.
- Keep the AP and installation tools away from walkways.
- Do not power the AP during installation.

- Install the AP in a well-ventilated location.
- Keep away from high voltage cables.
- Keep the AP clean and dust-free.

## Mounting the Access Point


### Ceiling Mount AP-W6D2400C

1.

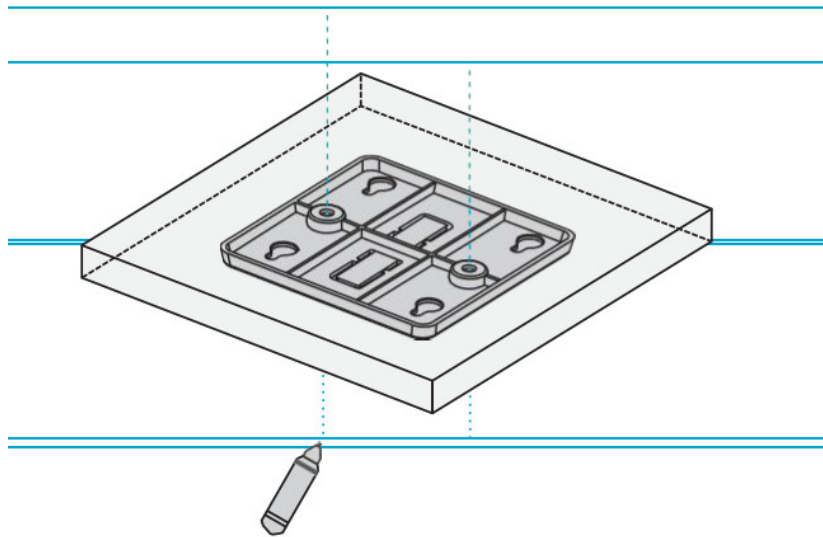


Position the mounting bracket at the desired location on the ceiling. Use a marker to mark the two mounting holes.


2. Drill holes with a diameter of 6 mm (0.24 in) in the marked locations.

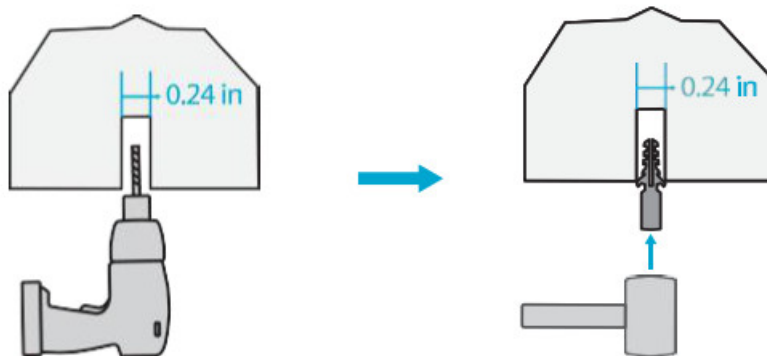

3. Insert a screw anchor into each hole, and tap the screw anchor with a rubber hammer.

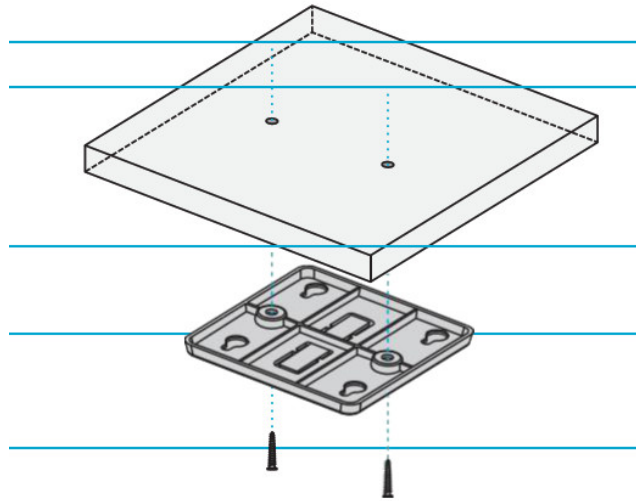

4. Secure the mounting bracket to the ceiling by inserting the screws into the anchors.

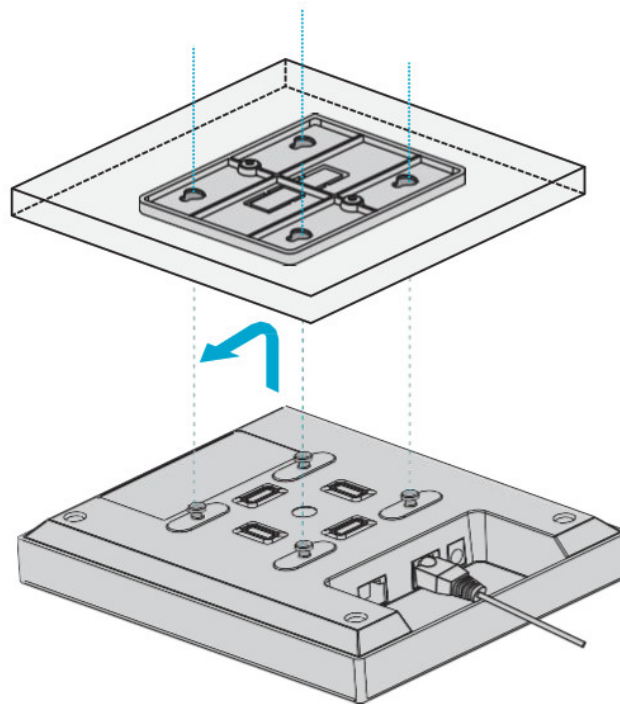


5. Align the tabs on the AP bracket into the notches on the ceiling bracket, and then slide the AP until it snaps into place.




**NOTE:**

1. Before mounting the AP on the bracket, you must first install the Ethernet cables.
2. The tabs should fit easily into the mounting slots. Do not forcibly push the AP into the slots.
3. After installation, verify that the AP is securely fastened.
4. The wall mount installation is the same as the ceiling mount.

**(Optional) Securing the  
AP AP-W6T6817C**

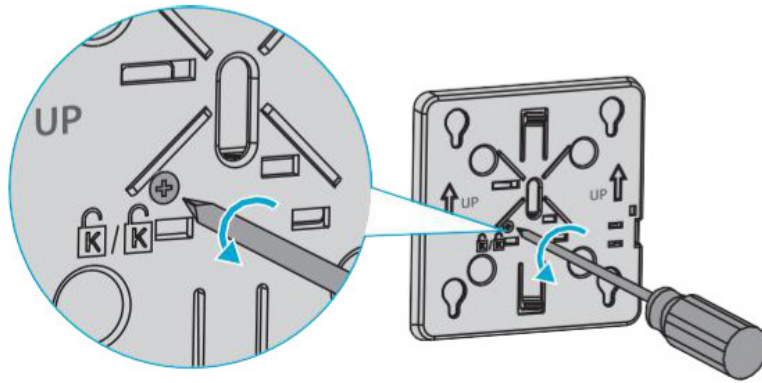


1. Remove the screw on the mounting bracket and engage the hidden lock.

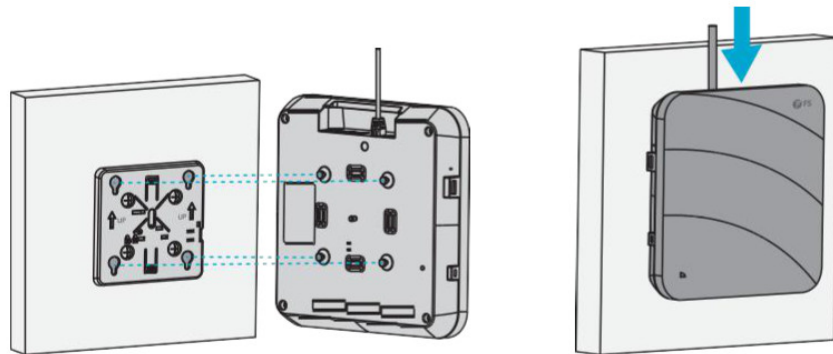

2. Align the tabs on the AP bracket into the notches on the bracket, and then slide the AP until it snaps into place.


#### Removing the AP AP-W6D2400C

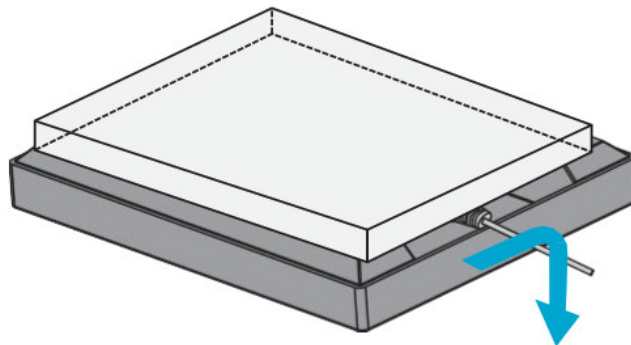


Hold the AP in your hands and push it sideward to release the tab from the notch.

#### AP-W6T6817C

1. If the hidden lock is enabled, attach the front part of the key to the edge of the mounting bracket.

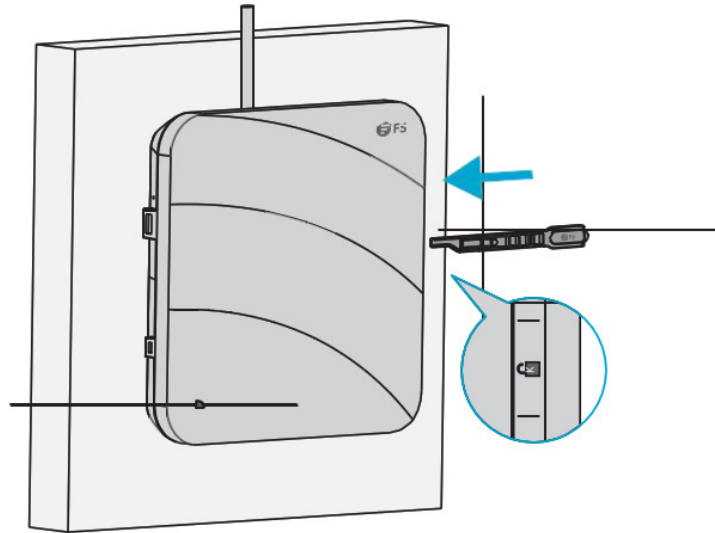


2. Attempt to insert the key into the keyhole along the keyhole mark.

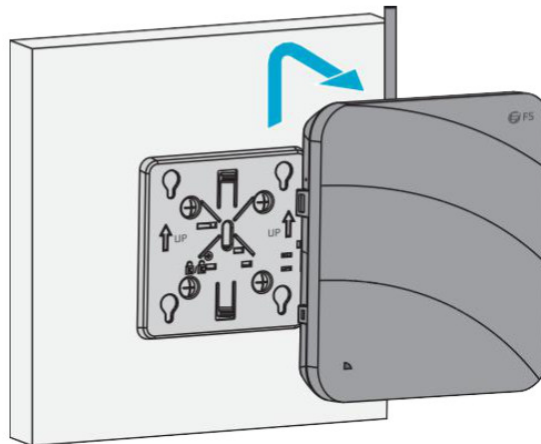

3. Hold the AP in your hands and push it sideward to release the tab from the notch.


## Connecting the PoE Power Supply

### PoE Switch

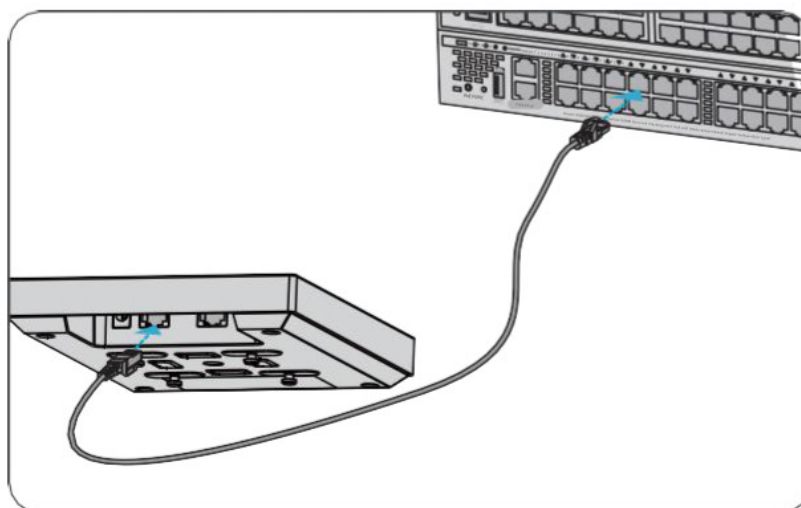

Use an Ethernet cable to connect the Ethernet port on the AP to a port on a switch that provides 802.3af PoE power.

### PoE Injector

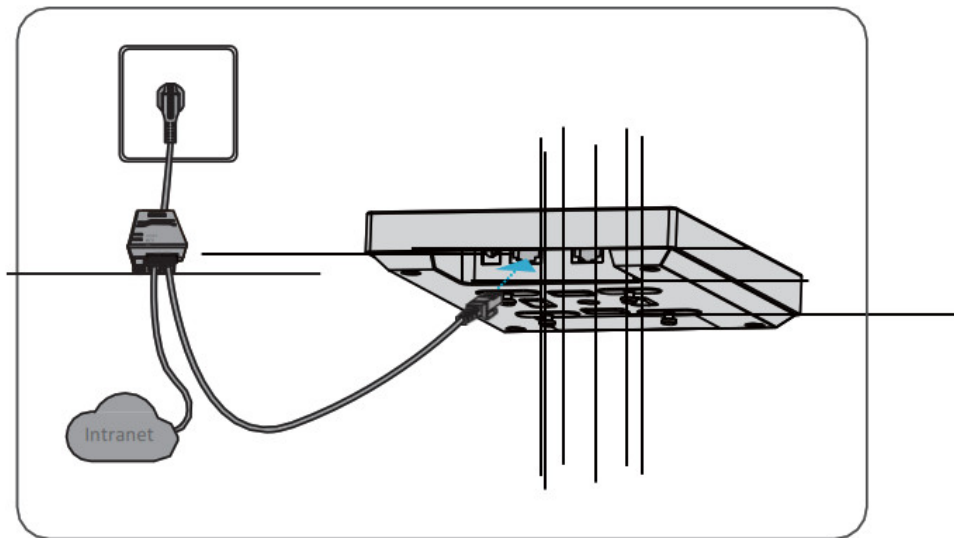


Use the power cord, power injector and Ethernet cable to connect the PoE port of the AP to the local power source.

## Configuring the AccessPoint


### Configuring the AP Using the Web-based Interface

**Step 1:** Connect the computer to the business port of the AP using the network cable.

**Step 2:** Set the IP address of the computer to 192.168.1.x. ("x" is any number from 2 to 254.)

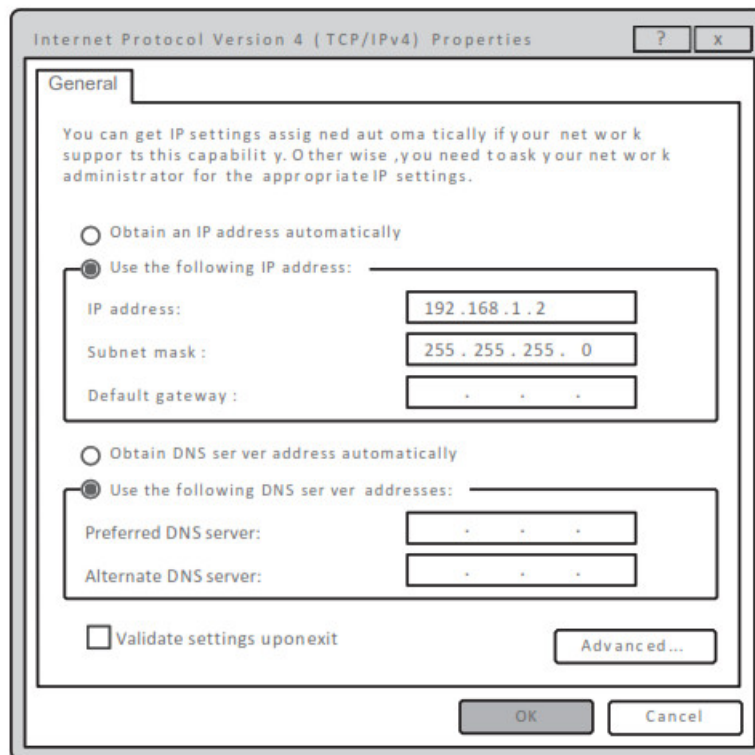

**Step 3:** Open a browser, type <http://192.168.1.1>, and enter the default username and password, admin/admin.

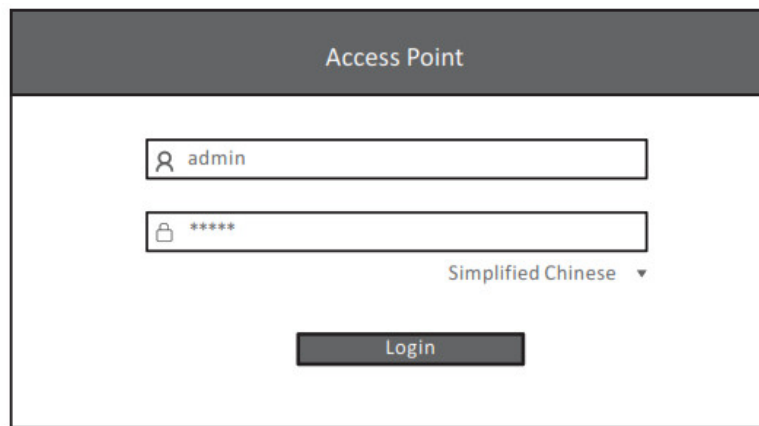

The image shows a web-based login page for an Access Point. At the top, there is a dark grey header with the text "Access Point". Below the header, there is a white area containing a login form. The form has two input fields: the first is for the username, with "admin" entered, and the second is for the password, with "\*\*\*\*\*" entered. Below the password field, there is a language selection dropdown menu currently set to "Simplified Chinese". At the bottom of the form, there is a dark grey "Login" button.


**Step 4:** Click Login to display the web-based configuration page.

### Configuring the AP Using the Console Port (FAT AP Mode)

**Step 1:** Connect a computer to the AP's console port using the console cable.

**Step 2:** Start the terminal simulation software such as HyperTerminal on the computer.

**Step 3:** Set the parameters of the HyperTerminal: 9600 bits per second, 8 data bits, no parity, 1 stop bit and no flow control.

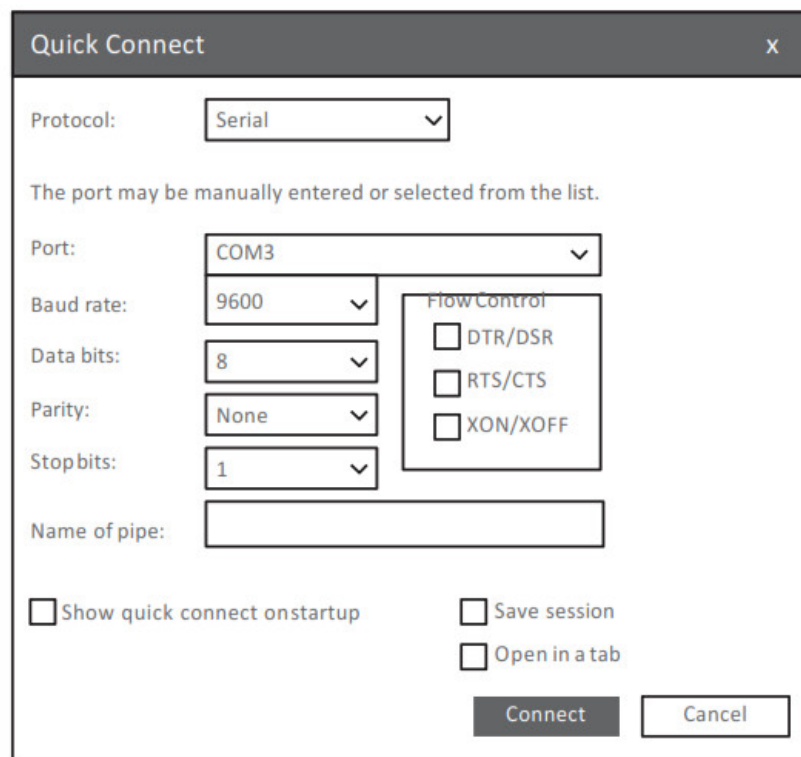

The image shows a "Quick Connect" dialog box from HyperTerminal. The "Protocol" is set to "Serial". Below this, a message states: "The port may be manually entered or selected from the list." The "Port" is set to "COM3". The "Baud rate" is set to "9600", "Data bits" to "8", "Parity" to "None", and "Stopbits" to "1". There is a "Flow Control" section with three unchecked checkboxes: "DTR/DSR", "RTS/CTS", and "XON/XOFF". At the bottom, there is a "Name of pipe:" field. Below the field, there are four checkboxes: "Show quick connect onstartup", "Save session", "Open in a tab", and "Connect". The "Connect" button is highlighted in dark grey, and the "Cancel" button is in white.

**Step 4:** After setting the parameters, click Connect to enter. And then enter the default password, admin.

## Troubleshooting

### The screen displays request timed out

1. Check if the network cable is intact.
2. Check if the hardware connection is correct.
3. The system status indicator on the device panel and the NIC indicator on the computer must be lit.
4. The computer's IP address setting is correct.

### LED does not light up after the AP is powered on

1. If you use PoE power supply, verify that the power source is IEEE 802.11af compliant; then verify that the

cable is properly connected.

2. If you use a power adapter, verify that the power adapter is connected to an active power outlet; then verify that the power adapter works properly.

### Ethernet port is not working after the Ethernet port is connected

Verify that the device at the other end of the Ethernet cable is working properly. And then verify that the Ethernet cable is capable of providing the required data rate and is properly connected.

### Wireless client cannot find the AP

1. Verify that the power supply works properly.
2. Verify that the Ethernet port is properly connected.
3. Verify that the AP is correctly configured.
4. Move the client device to adjust the distance between the client and the AP.

### Support and other resources

Download <https://www.fs.com/download.html>

Help Center [https://www.fs.com/service/help\\_center.html](https://www.fs.com/service/help_center.html)

Contact Us [https://www.fs.com/contact\\_us.html](https://www.fs.com/contact_us.html)

### Product Warranty

FS ensures our customers that any damage or faulty items due to our workmanship, we will offer a free return within 30 Days from the day you receive your goods. This excludes any custom made items or tailored solutions.



**Warranty:** The Wi-Fi 6 wireless access points enjoy 3 years limited warranty against defect in materials or workmanship. For more details about warranty, please check at <https://www.fs.com/policies/warranty.html>




**Return:** If you want to return item(s), information on how to return can be found at [https://www.fs.com/policies/day\\_return\\_policy.html](https://www.fs.com/policies/day_return_policy.html)

**Q.C. PASSED**

Copyright ©2021 FS.COM All Rights Reserved.

### Documents / Resources

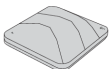 <p>AP-W6D2400C/6T6817C ENTERPRISE WiFi 6 ACCESS POINT</p>	<p><a href="#">FS AP-W6T6817C Enterprise WiFi 6 Access Point</a> [pdf] User Guide AP-W6D2400C, AP-W6T6817C, Enterprise WiFi 6 Access Point</p>
---	--

