


Contents [[hide](#)]

- [1 X-STM32MP-RBT01 Board](#)
- [2 Product Information](#)
- [3 Introduction](#)
- [4 Software features](#)
- [5 X-LINUX-RBT1 architecture](#)
- [6 Hardware setup](#)
- [7 Using the application](#)
- [8 Related information and documentation](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

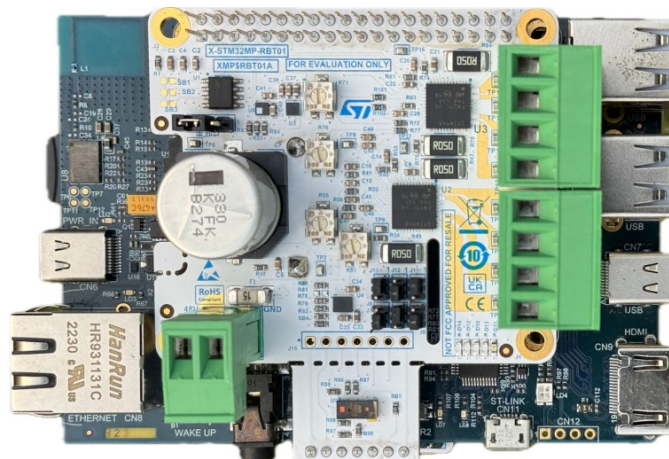

X-STM32MP-RBT01 Board



Product Information

Specifications


- Product Name: X-LINUX-RBT1 MPU Software Package
- Designed for: Robotics application development on STM32MP and other microprocessor platforms
- Features: Drivers, APIs, applications tailored for X-STM32MP-RBT01 board

Getting started with X-LINUX-RBT1 MPU Software Package for X-STM32MP-RBT01 board

Introduction

The X-LINUX-RBT1 is a Linux-based expansion software package designed for robotics application development on STM32MP and other microprocessor platforms. It provides drivers, APIs, and applications tailored for the X-STM32MP-RBT01 board, which features the STSPIN948 motor driver. This package serves as a foundational tool for engineers to build complex robotics solutions.

Figure 1. X-LINUX-RBT1 package

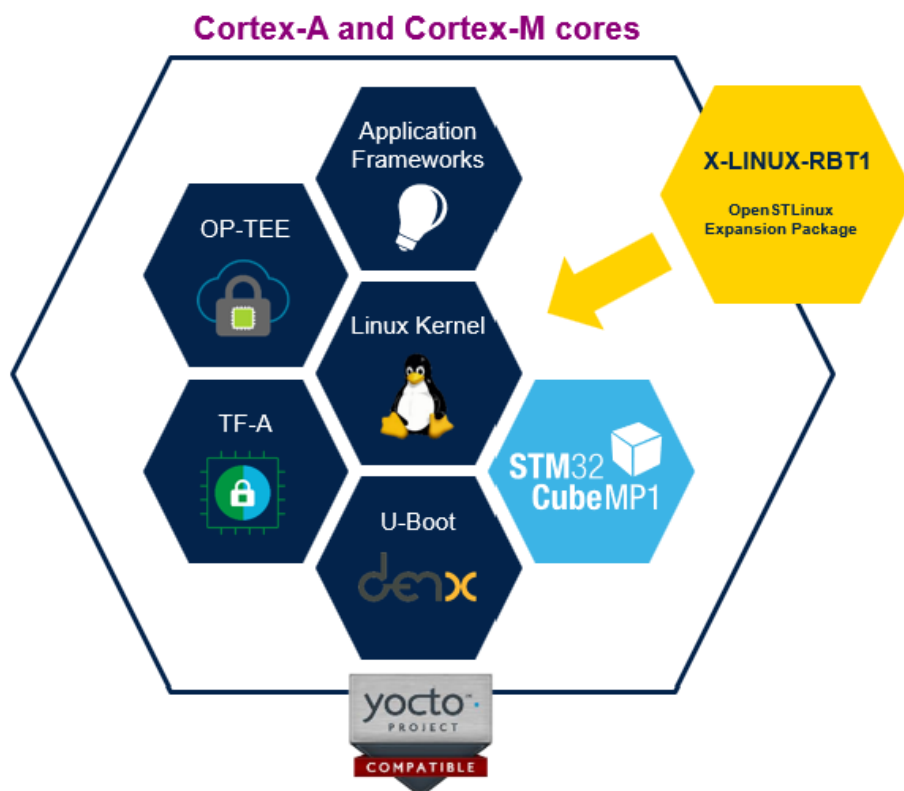

Software features

The X-LINUX-RBT1 package includes a range of features for robotics application development:

1. Embedded web server with a web client for network based remote control.
2. Intuitive remote control web app with joystick interface.
3. Sensor fusion middleware for precise heading and orientation.
4. ToF-based (Time-of-Flight) obstacle detection.
5. Emergency stop functionality triggered by motor faults, user input, collisions, or topples.
6. Data logging capabilities for debugging and AI training.

X-LINUX-RBT1 architecture

The package is composed of multiple layers and modules.

Hardware drivers and APIs

- Kernel and device tree patches included in the package expose components like the ISM330DHCX (IMU), LPS22HH (pressure sensor), and IIS2MDC (magnetometer) via the Linux IIO subsystem.
- User-space Python drivers are provided for components like the STSPIN948 (motor driver) and VL53L5CX (ToF sensor), with low-level I2C, PWM, and GPIO configurations are handled via device tree patches.

Sensor algorithms

- Compute useful metrics from raw sensor data, such as altitude from pressure readings, distances from ToF sensor data, and orientation using sensor fusion.


Robotics algorithms

- High-level algorithms tailored to robotics, including kinematics, obstacle detection, and path correction.

Applications

- Includes sample applications demonstrating practical use-cases, such as remote rover control, integrating all modules into cohesive robotics solutions.

Figure 2. System components

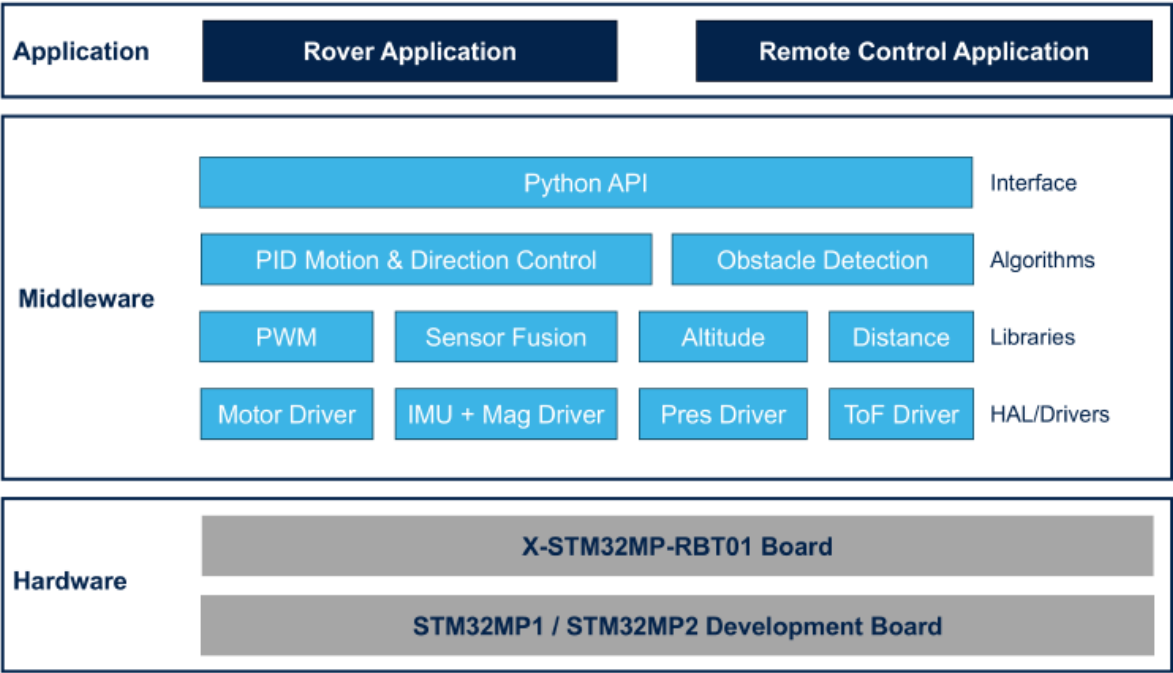


Engineers can develop custom applications leveraging the APIs and drivers provided in this package.

Hardware setup

The current package provides software support for the X-STM32MP-RBT01 expansion board.

Figure 3. X-STM32-RBT01 board

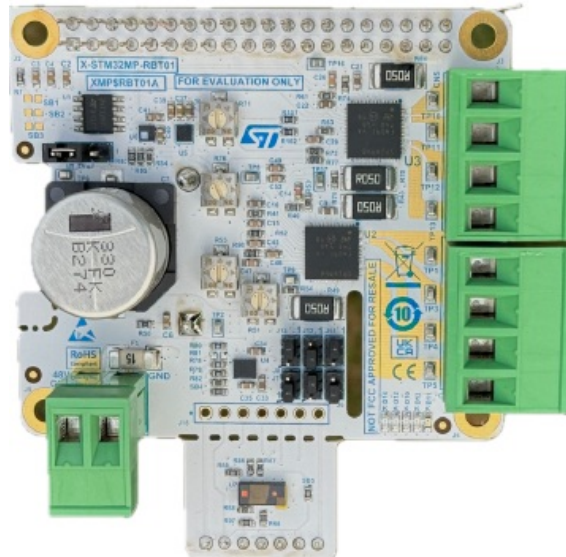

The key STMicroelectronics components available on this board are described below:

- STSPIN948: a 4.5 A dual full-bridge driver for brushed DC motors or bipolar stepper motors. Amplifiers for current sensing and adjustable slew-rate for EMI performance tweaking are other notable features.
- VL53L5CX: a state-of-the-art, Time-of-Flight (ToF) multizone ranging sensor.
- ISM330DHCX: The ISM330DHCX is a high-performance 3D digital accelerometer and gyroscope system-in-package designed for Industry 4.0 applications, offering superior stability, accuracy, and low noise. It includes embedded features such as a machine learning core, programmable FSM, FIFO, sensor hub, event decoding, and interrupt.
- LPS22HH: an ultra-compact piezoresistive absolute pressure sensor.
- IIS2MDC: a high-accuracy, ultra-low-power 3-axis digital magnetic sensor.

The X-STM32MP-RBT01 board can be plugged into the 40-pin connectors available on STM32MP discovery boards or Raspberry Pi, as shown below.

Figure 4. X-STM32MP-RBT01 with STM32MP157F-DK2

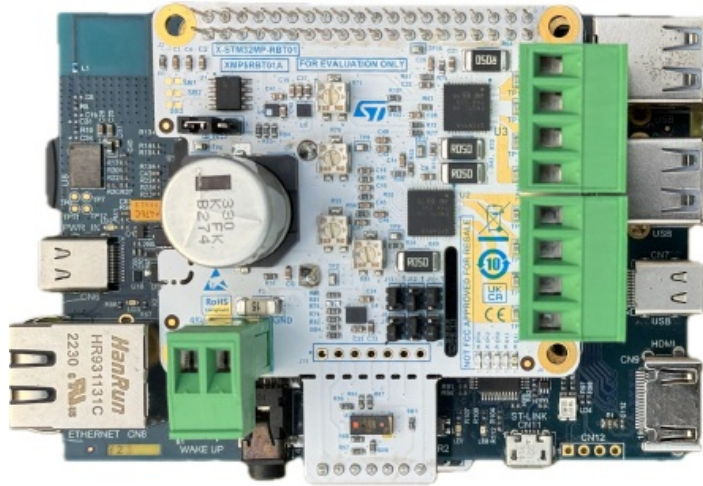


Figure 5. X-STM32MP-RBT01 with STM32MP257F-DK



Important setup notes

- Ensure correct board orientation when mounting on platforms like STM32MP Discovery kits or Raspberry Pi. For example, the board mounts “inward” on the STM32MP157F-DK2 and Raspberry Pi but “outward” on the STM32MP257F-DK board.
- Verify jumper settings for the STSPIN948 to operate in “Dual Independent Full Bridge Mode” as configured in the provided software. For other configurations, modify the motor driver code.
- Some GPIOs connected to the 40-pin headers are shared with other peripherals on

STM32MP boards and may require the connection/disconnection of solder bridges. For example, in the STM32MP157F-DK2 board SB13, SB14, SB15, SB16 should be closed and SB01, SB02, SB03, and SB04 should be opened by desoldering the 0 Ω resistor. Refer to the specific board user manual for details.

Software setup

This section describes the software setup required for building, flashing, deploying, and running the application.

Recommended PC prerequisites

A Linux® PC running Ubuntu® 20.04 or higher is recommended. Developers can follow the link below for details: PC prerequisites. Follow the instructions on the ST wiki page Image flashing to prepare a bootable SD card with the starter package.

Alternatively, a Windows or Mac computer can also be used; in that case, the following tools would be useful:

- STM32CubeProgrammer for flashing images.
- TeraTerm or PuTTY for console interface access.
- WinSCP for file transfer.

STM32MPU software prerequisites

The following Python packages are required for the X-LINUX-RBT1 software:

```
# Install required packages apt-get install python3-gpiod pip install smbus2 fastapi  
uvicorn web sockets netifaces qrcode
```

Deploying the files to the MPU board

Transfer the binaries, Python scripts, and application resources to the STM32MP board from the development PC. Files can be transferred via a serial link, network connection, or external USB drive. To connect to a WLAN, refer to How to Setup a WLAN Connection.

- For details on how to transfer the files over a network connection refer to How to Transfer a File Over a Network.
- For details on transfers using the serial link, for Linux hosts, refer to How to transfer a

file over a serial console. For Windows hosts, refer to How to transfer files to Discovery kit using Tera Term.

- Alternatively, the user could transfer the files using an external USB drive.

To quickly evaluate the X-LINUX-RBT1 package, developers may copy the contents of the “application” folder contained in the package to the /usr/local/x-linux-rbt1 folder on the STM32MP board using any of the above methods. To ease this action, the deployment script present inside the “scripts” folder of the X-LINUX-RBT1 package can be used (if using a network connection to transfer the files).


- # Go to the scripts folder `cd scripts`
- # Add execute permission to the deployment script `chmod +x deploy.sh`
- # Run the deployment script `deploy.sh <MPU board IP>`

Using the application

Launching the application

Once the files are deployed and the board is rebooted, the user can explore X-LINUX-RBT1, by accessing the terminal through ssh and running the application using the following command: ``python3 /usr/local/x-linux-rbt1/main.py`` This opens the command-line interface (CLI) of the application, where various network configuration options are displayed.

Figure 6. Application interface

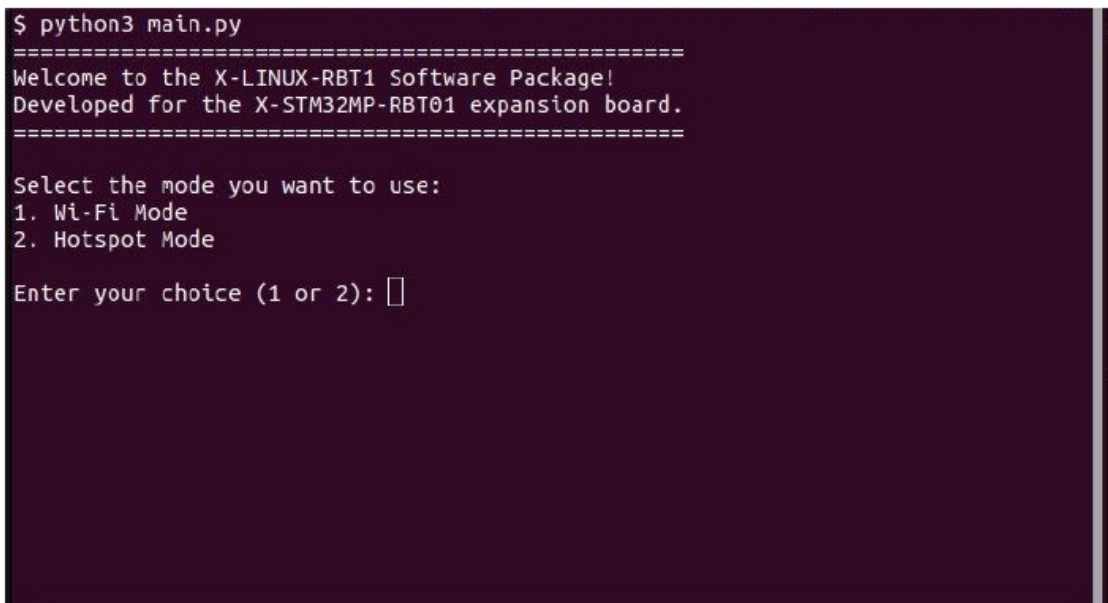

```
$ python3 main.py
=====
Welcome to the X-LINUX-RBT1 Software Package!
Developed for the X-STM32MP-RBT01 expansion board.
=====

Select the mode you want to use:
1. Wi-Fi Mode
2. Hotspot Mode

Enter your choice (1 or 2): 
```


After initial configuration, a QR code is displayed which can be scanned on a mobile device to open the web-app to control the rover.

Figure 7. X-LINUX-RBT1 connection info screen




After scanning the QR code on the mobile device, the Remote Control Interface opens (provided the device is connected to the same network as the board).

Remote control web app

To control the rover remotely, the remote control web app is hosted through the embedded web server module of the X-LINUX-RBT1 software. Once the application is running, a URL is provided for accessing the web app. The URL is also presented as a QR code to open the URL on a mobile device for user convenience.

Figure 8. Remote interface

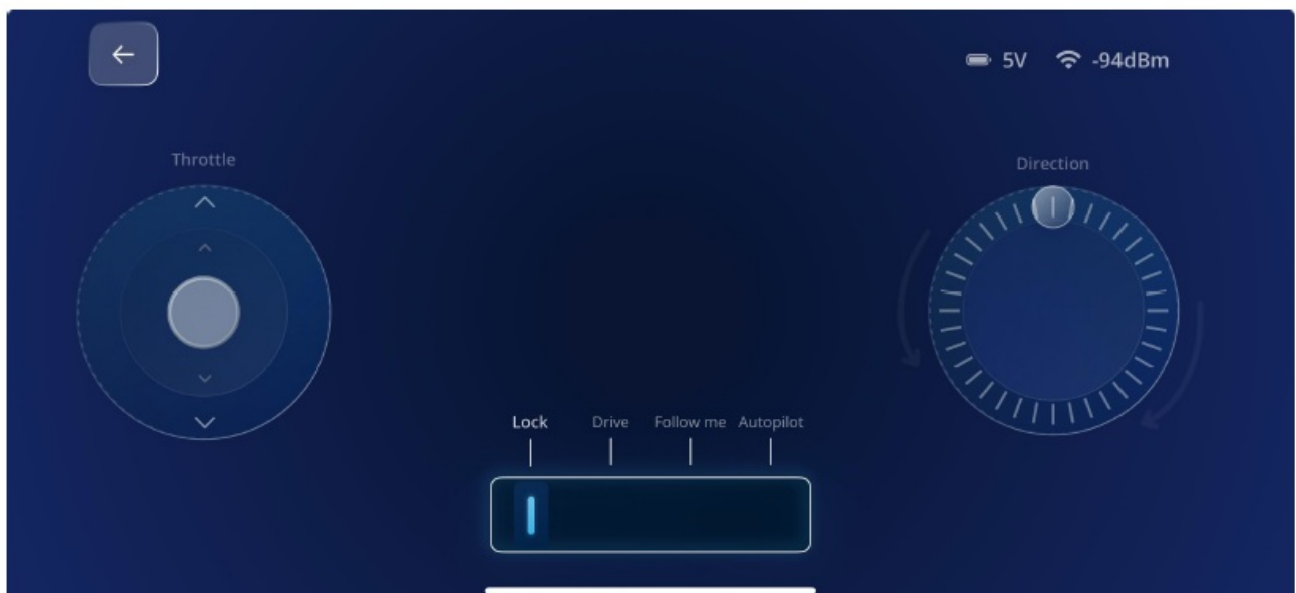

Features of the remote control interface

- Joystick-based control:
- Left joystick: Controls throttle for rover speed.
- Right joystick:
 - The middle stick controls omni-directional movement when using mecanum wheels.
 - The outer dial adjusts rover heading or rotation.
- Mode selection:
 - Remote control mode: Manually control the rover.
 - Autopilot mode: Enables autonomous operations based on pre-configured algorithms.

Notes on compatibility

- Prebuilt binaries such as device tree blobs (DTBs) and kernel modules are platform-dependent and are provided for specific MPU boards. Customization may be necessary for other platforms.
- If kernel customization is needed, refer to How to Customize the Linux Kernel.
- On STM32MP boards, some GPIOs available on the 40-pin header are shared with other peripherals. To ensure exclusive access to the 40-pin header, certain solder bridges may need to be opened or closed. Refer to the user manual of the specific MPU board. Also, take a look at the `board_pin_mapping.md` file of the package for more information.

Compatibility information

The X-LINUX-RBT1 software package is validated for OpenSTLinux version 6.0. Running it on other ecosystem versions may require additional configuration. The software is tested on the following boards:

1. STM32MP257F-DK
2. STM32MP157F-DK2

Related information and documentation

Here are additional resources related to the X-LINUX-RBT1 package and its supported hardware:

- X-STM32MP-RBT01 Expansion Board
- STM32MP257F-DK Board
- STM32MP157F-DK2 Board
- STSPIN948 Motor Driver
- ISM330DHCX IMU
- LPS22HH Pressure Sensor
- VL53L5CX ToF Sensor
- IIS2MDC Magnetometer

Revision history

Table 1. Document revision history

Date	Revision	Changes
07-Apr-2025	1	Initial release.

IMPORTANT NOTICE – READ CAREFULLY

STMicroelectronics NV and its subsidiaries (“ST”) reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST’s terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers’ products. No license, express or implied, to any intellectual property right is granted by ST herein. Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST

trademarks, refer to www.st.com/trademarks. All other product or service names are the property of their respective owners. Information in this document supersedes and replaces information previously supplied in any prior versions of this document. © 2025 STMicroelectronics – All rights reserved

FAQ

- **Q: Can I use this software package on other microprocessor platforms?**

A: The package is primarily designed for STM32MP but can be adapted for other platforms with necessary modifications.

- **Q: How can I access the embedded web server for remote control?**

A: You can access the embedded web server through a web browser on a connected device within the same network.

- **Q: What programming languages are supported for developing custom applications?**

A: User-space Python drivers are provided, but you can develop applications in other languages compatible with Linux.

Documents / Resources

	<p>ST X-STM32MP-RBT01 Board [pdf] User Manual</p> <p>UM3481, X-LINUX-RBT1, X STM32MP RBT01 Board, X STM32MP RBT01, Board</p>
---	--

References

- [📄 deploy.sh](#)
- [📄 Releases · TeraTermProject/osdn-download · GitHub](#)
- [📄 Download PuTTY - a free SSH and telnet client for Windows](#)
- [📄 !\[\]\(0f13e74bece43321be4542883500ac30_img.jpg\) How to setup a WLAN connection - stm32mpu](#)
- [📄 !\[\]\(096ca4c8372bb23497150f03b2c177db_img.jpg\) How to transfer a file over network - stm32mpu](#)
- [📄 !\[\]\(c03b623d46cc76dcf514be21d5657bcb_img.jpg\) How to transfer a file over serial console - stm32mpu](#)
- [📄 !\[\]\(7eb8285be0c195db44b7f5a531934790_img.jpg\) How to transfer files to Discovery kit using Tera Term on Windows PC - stm32mpu](#)
- [📄 !\[\]\(9b582d2186c14f6dce24c5f5c96007ca_img.jpg\) WinSCP :: Official Site :: Free SFTP and FTP client for Windows](#)

- [User Manual](#)

📁 Board, ST, UM3481, X STM32MP RBT01, X STM32MP RBT01 Board, X-LINUX-

📁 ST RBT1

—Previous Post

ST VL53L8CX Low Power High Performance 8×8 Multizone User Guide

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.