


ACV Button Remapping

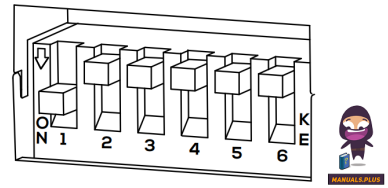

ACV Button Remapping User Guide


[Home](#) » [ACV](#) » ACV Button Remapping User Guide 

Contents

- [1 ACV Button Remapping](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 BUTTON REMAPPING GUIDE](#)
- [5 Example](#)
- [6 SOURCE](#)
- [7 SOFTWARE UPDATE GUIDE](#)
- [8 Frequently Asked Questions](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

ACV

ACV Button Remapping

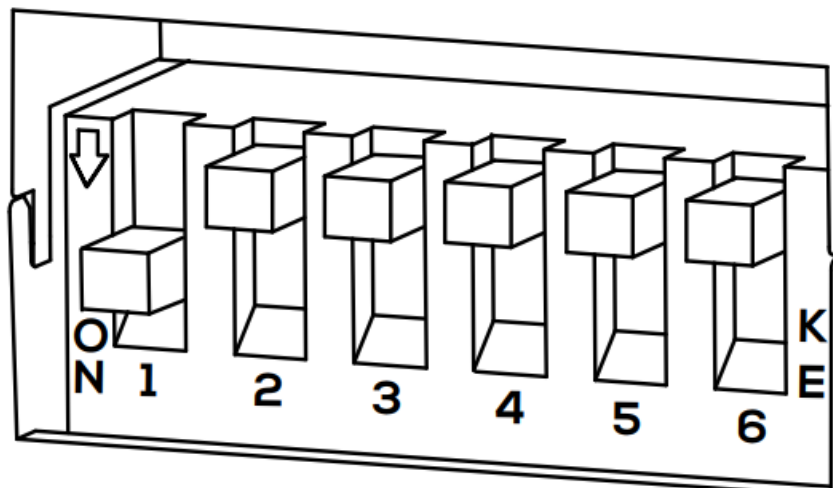

Specifications

- **Interface Compatibility:** PC, Mac, smartphone
- **Interface Name:** INTERFACE
- **Connection:** USB-C cable

Product Usage Instructions

Button Remapping

1. Set any of the six dipswitches to ON (All OFF is reserved for software updates).
2. Connect the USB-C cable to your PC, Mac, or smartphone, then connect it to the interface.
3. The interface will appear as a drive named INTERFACE on your connected device.
4. Double-click on the drive to open it.
5. Locate and open the Interface Configuration .txt file.
6. Edit the file to remap steering wheel control functions following the provided syntax.
7. Save the edited Configuration File back onto the INTERFACE drive.

Adding Dual Functions to Buttons

To assign short and long press commands to steering wheel buttons:

1. Identify the button you want to configure inside square brackets.
2. Configure the short and long press actions using the specified syntax.
3. Repeat this process for each button you want to remap.
4. Save the edited Configuration File back onto the INTERFACE drive.

BUTTON REMAPPING GUIDE

BUTTON REMAPPING FOR STEERING WHEEL CONTROL INTERFACES

- Set any of the six dipswitches to ON. (All OFF is reserved for SW update).
- Connect the USB-C cable to your PC, Mac, or smartphone, then connect it to the interface.
- The interface will show up as a drive on the connected device and will be identified by the name "INTERFACE".
- Double-click the drive to open it.
- You will find a .txt file named "Interface Configuration." Open it.
- By default, this configuration file is blank and does not contain any steering wheel control re-mapping:
- Editing and saving this text file onto the interface allows us to change the functions of the buttons during normal operation.
- Before you begin to edit the Configuration File, take a copy of the blank file so that you can always revert back to the original system.
- The following steering wheel buttons can be re-configured or given two functions. The buttons available to you will depend on which car the interface is being fitted to. The following list shows all possible buttons on all possible cars:

Devices and drives



Local Disk (C:)

844 GB free of 930 GB




(INTERFACE) (E:)

0 bytes free of 8.00 KB
FAT

Name	Date modified	Type	Size
HW-001 V3 - Bios V2 - Chk 1C65A30A.sys		System file	
SW-025 - Mercedes 83.33 FT CAN V1.00	...	Text Document	

Name	Date modified	Type	Size
HW-001 V3 - Bios V2 - Chk 1C65A30A.sys		System file	

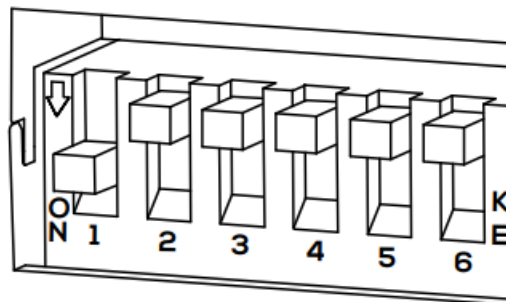

- VOL_UP/PRESET_UP/OFF_HOOK
- VOL_DOWN/PRESET_DOWN/ON_HOOK
- TRACK_UP/SOURCE/PHONE
- TRACK_DOWN/ATTENUATE/VOICE_REC

The aftermarket radio control commands that can be assigned to them are shown below.
Please note, not all functions are supported by all aftermarket radios*

- VOL_UP/PRESET_UP/OFF_HOOK
- VOL_DOWN/PRESET_DOWN/ON_HOOK
- TRACK_UP/SOURCE./VOICE_REC
- TRACK_DOWN/ATTENUATE

In addition to button re-mapping, we can add a dual function to each button on the steering wheel. Each button can have a short press command and a long press command assigned to it.
The length of time in milliseconds that the button needs to be held for is considered a long press can also be configured.

Example

Here is an example of configuring the source button so that a short press performs the source function, while a long press activates voice recognition. In this example, we will set the long press hold time to 1 second (1000 milliseconds).

First, place the steering wheel button you want to configure inside square brackets:


SOURCE

Next, the text that follows will configure the actions for that button. It is crucial to maintain the exact text for button names and actions as shown above, and to follow the syntax precisely as illustrated in the example below:

- [SOURCE]
- SHORT=SOURCE
- LONG=VOICE_REC
- HOLD_TIME=1000

You can repeat this process multiple times for each button you want to remap. Note that it is not necessary to write a remap configuration for any button whose standard function you wish to keep unchanged. Finally, remember that you can only configure the steering wheel buttons that are available on your steering wheel.

- Make sure you save the new edited Configuration File back onto the INTERFACE.

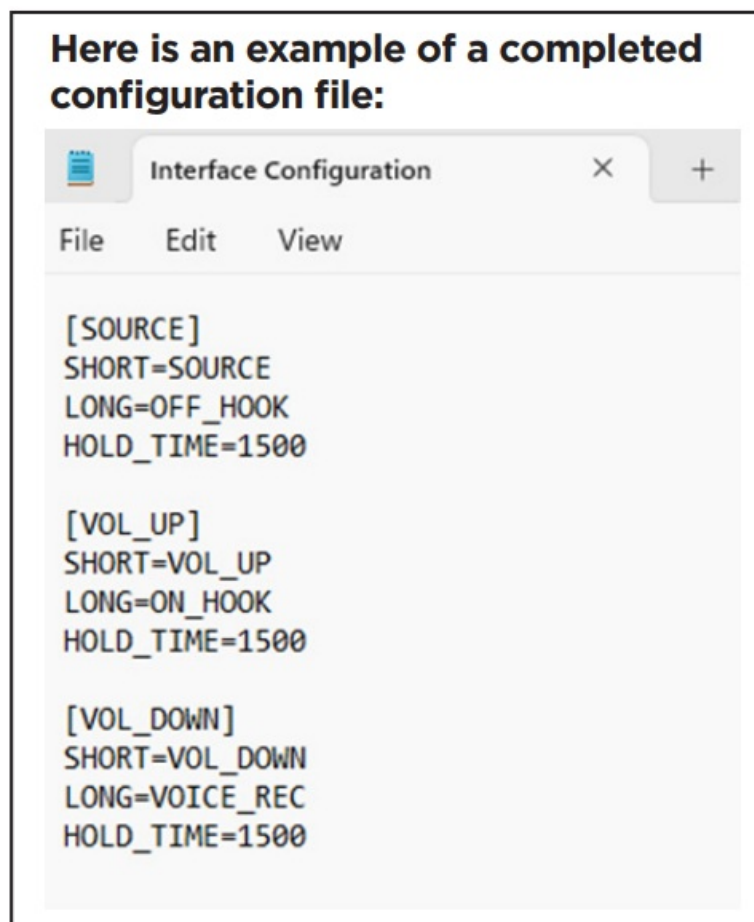


SOFTWARE UPDATE GUIDE

UPDATING THE SOFTWARE ON YOUR STEERING WHEEL CONTROL INTERFACES

1. Set all six dipswitches to OFF.
2. Connect the USB-C cable to your PC, Mac, or smartphone, then connect it to the interface.
3. The interface will show up as a drive on the connected device and will be identified by the name "INTERFACE".
4. Double click the drive to open it.
5. The system file displays the current versions of the hardware (HW) and BIOS. The other file, starting with "SWxxxx," indicates the current software (SW) version installed on the interface.

6. You need to first delete the SWxxxx file.
7. Simply drag and drop, or copy, the new “SWxxx” file onto the interface.
Once the file is copied, unplug the USB cable and then plug it back in.
8. The interface LED will illuminate solid for approximately 7 seconds, then it will begin to flash. Once it starts flashing, the interface will be visible as a drive on the PC again.
9. Open the drive and verify that the “SWxxxx” file has been updated to the new version.

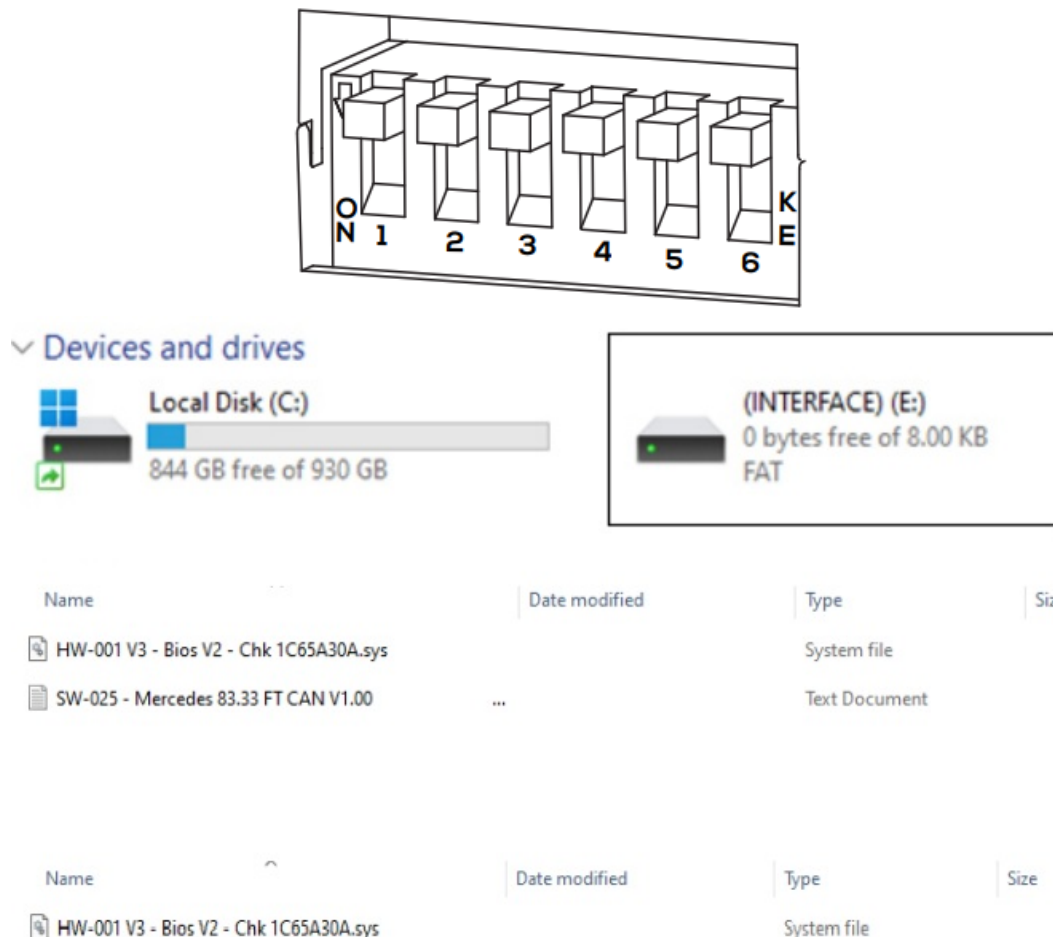


You should now have the latest software on your interface, indicating that the update was successful. At this point, you are ready to install the interface in your vehicle. Ensure that all connections are secure and follow the installation guidelines provided in the user manual. Once installed, the interface should function with the updated software.

Frequently Asked Questions

- **Q: Can I revert back to the original system after editing the Configuration File?**
 - A: Yes, before editing, make a copy of the blank file to ensure you can always revert back.
- **Q: Are all aftermarket radio functions supported for button re-mapping?**
 - A: No, not all functions are supported by all aftermarket radios. Refer to the list provided in the manual.

Documents / Resources



[ACV Button Remapping](#) [pdf] User Guide

Button Remapping, Remapping

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.