




## AEOTEC ZW162 Doorbell 6 with Push-Button User Guide

[Home](#) » [Aeotec](#) » **AEOTEC ZW162 Doorbell 6 with Push-Button User Guide** 

### Doorbell 6 user guide.

Modified on: Wed, 18 Mar 2020 at 5:57 PM


### Aeotec Doorbell 6.

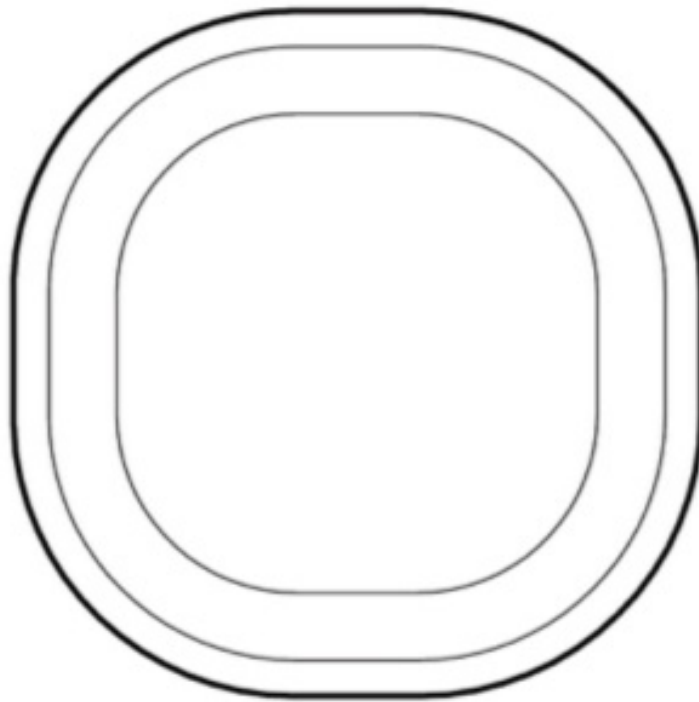

**Aeotec Doorbell 6** (<https://aeotec.com/z-wave-doorbell>) was developed to work as a doorbell or siren via Z-Wave Plus. It is powered by Aeotec's **Gen5** (<http://aeotec.com/z-wave-gen5>) technology and features **Z-Wave S2** (<https://aeotec.com/z-wave-s2>).

To see whether **Doorbell 6** (<https://aeotec.com/z-wave-doorbell>) is known to be compatible with your Z-Wave system or not, please reference our **Z-Wave gateway comparison** (<http://aeotec.com/z-wave-gateways>) listing. The technical specifications of Doorbell 6 (<https://aeotec.freshdesk.com/solution/articles/6000212186-doorbell-6-technicalspecification->) can be viewed at that link.

**Get to Know your Doorbell 6.**

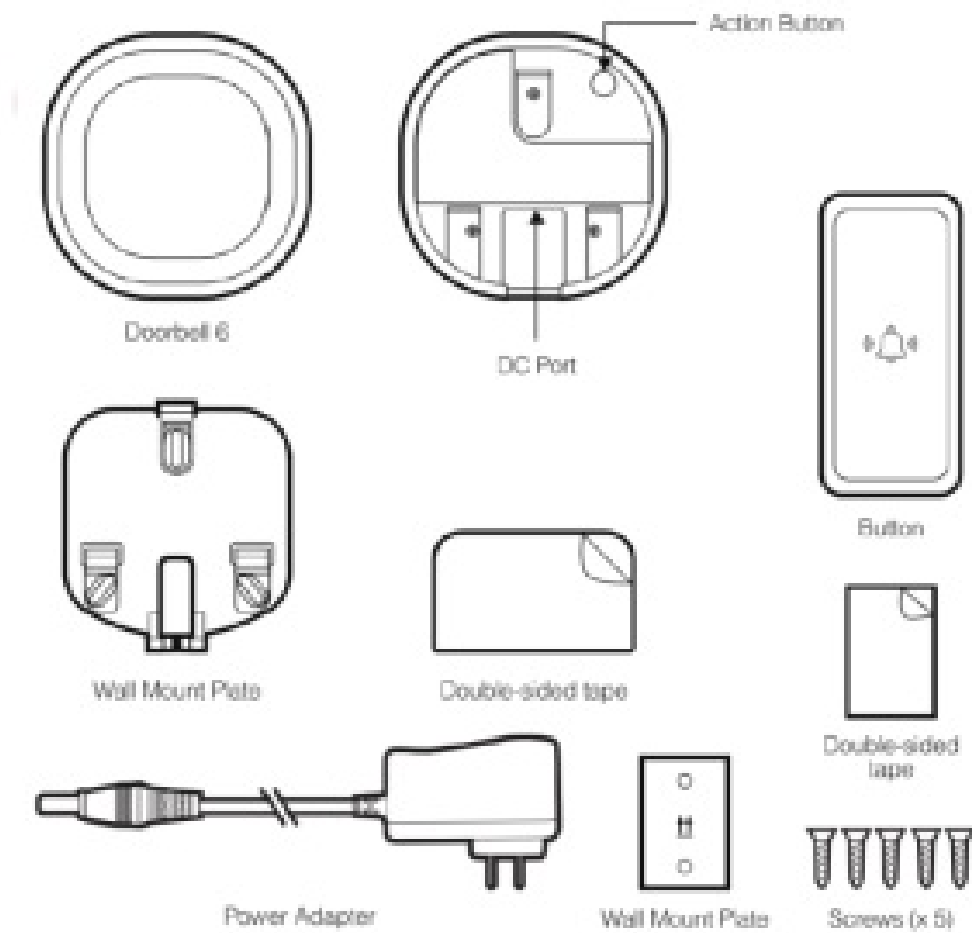

## Pre-loaded Tones.

| <b>Tone #</b> | <b>Name</b>                           |
|---------------|---------------------------------------|
| 1             | Ding Dong                             |
| 2             | Ding Dong Tubular Bell                |
| 3             | Traditional Apartment Buzzer          |
| 4             | Electric Apartment Buzzer             |
| 5             | Westminster Chimes (Hearing Enhanced) |
| 6             | Chimes (Hearing Enhanced)             |
| 7             | Cuckoo (Hearing Enhanced)             |
| 8             | Traditional Bell                      |
| 9             | Smoke Alarm (Low)                     |
| 10            | Smoke Alarm (High)                    |
| 11            | Fire Evacuation Buzzer                |
| 12            | CO Alarm                              |
| 13            | Klaxon                                |
| 14            | Klaxon (Deep)                         |
| 15            | Warning Tone                          |
| 16            | Tornado Siren                         |
| 17            | Alarm                                 |
| 18            | Deep Alarm Tone                       |
| 19            | Alarm (Archangel tone)                |
| 20            | Alarm (Shrill)                        |
| 21            | Digital Siren                         |
| 22            | Alert Series                          |
| 23            | Security                              |
| 24            | Clock Buzzer                          |
| 25            | Christmas Tree                        |
| 26            | Gong                                  |
| 27            | Single Bell Ting                      |
| 28            | Tonal Pulse                           |
| 29            | Upwards Tone                          |
| 30            | Door Open                             |

## Contents

- [1 Important safety information.](#)
- [2 QuickStart.](#)
- [3 Advanced.](#)
- [4 Test Doorbell 6 sound manually.](#)
- [5 Reset your Doorbell.](#)
- [6 More Advanced Configurations.](#)
- [7 Using Doorbell 6 with SmartThings hub.](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

## Important safety information.

Please read this and other device guides carefully. Failure to follow the recommendations set forth by Aeotec Limited may be dangerous or cause a violation of the law. The manufacturer, importer, distributor, and/or reseller will not be held responsible for any loss or damage resulting from not following any instructions in this guide or in other materials.

Doorbell 6 offers IP55 water protection and is suitable for outdoor use without direct exposure to heavy and penetrative rain. Doorbell 6 is constructed with nylon; keep the product away from open flames and extreme heat. Avoid direct sunlight or heat exposure. Chime is intended for indoor use in dry locations only. Do not use in damp, moist, and/or wet locations.

Contains small parts; keep away from children.

## QuickStart.


Getting your Doorbell up and running is as simple as plugging it into a wall socket and linking it to your existing ZWave network.

The following instructions tell you how to link your Doorbell to your Z-Wave network, please refer to the Z-Wave Controllers manual that tells you how to add new devices to your network.

**Install Mounting plate in the location of your choice.**

1. Affix Doorbell 6 Wall Mount Plate in any desired location near an outlet.

- a. Use 3x 20mm screws or double-sided tape.

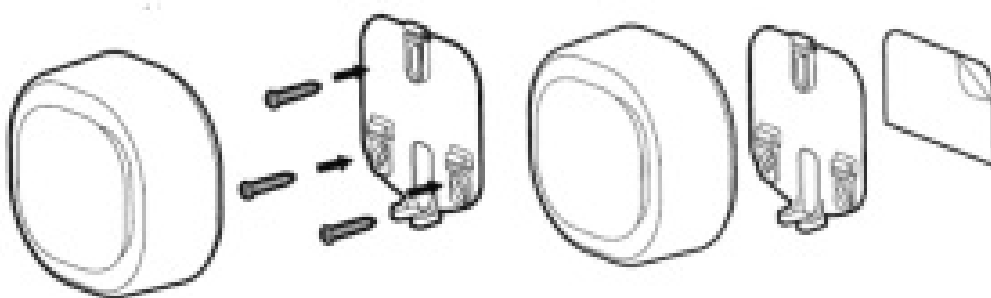


- b. Lock the Doorbell 6 into a place where the mount is installed.

## How to install Button

Avoid exposing the Button to direct sunlight where possible to avoid UV damage and reduced battery performance.

1. Select an installation location for Button. Do not yet install it.
2. Power on Button. a. Remove the 2 screws from Button's rear to open its battery cover and install the provided

- CR2450 battery with the positive (+) on top. b. Replace the battery cover and the 2 screws.
3. Test the wireless connection by pressing the Ring Button to trigger a doorbell alert. Select an alternative installation location for Chime if the connection is poor.
  4. Install Button. a. Affix the mounting plate to the selected surface; affix it using either 2 × 20mm screws or double-sided tape. b. Lock your Button onto the mounting plate.

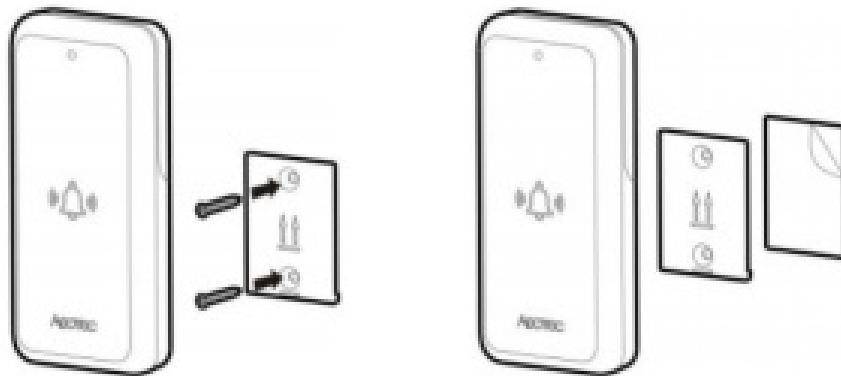

### **Pair your Doorbell 6 into your existing Z-Wave network.**

1. Power Doorbell 6 through the provided power adapter.
2. Ensure that Doorbell 6 LED is blinking slowly.
3. Set your Z-Wave gateway into pair/add device mode. (Refer to your Z-Wave gateway/controller instruction manual on how to set it into pair mode).
4. Tap the Doorbell 6 Action Button once. (If your gateway supports S2 encryption, enter the first 5 digits of the DSK into your Z-Wave gateway interface to complete S2 encrypted pairing, DSK is printed on the Doorbell 6 unit).
5. If Doorbell 6 has successfully paired to your Z-Wave gateway, the LED on Doorbell 6 will emit a solid color for 30 seconds, then turn off. If in the case that the Doorbell 6 failed to pair, LED will continue to blink slowly.

With your Doorbell now working as a part of your smart home, you'll be able to configure it from your home control software. Please refer to your software's user guide for precise instructions on configuring Doorbell to your needs.

### **Advanced.**

#### **Removing your Doorbell from a Z-Wave network.**

Your Doorbell can be removed from your Z-Wave network at any time. It is always advised that you use your gateway to perform an unpair in order to avoid leaving phantom / failed nodes that become difficult to remove. To do so, follow the steps below:

1. Place your gateway or controller into Z-Wave unpair or exclusion mode. (Please refer to your controller/gateway manual on how to do this)
2. Press the Action Button 6x times in 2 seconds on your Doorbell.
3. If your Doorbell has been successfully unpaired from your network, its LED will begin to blink slowly which indicates that it is ready to be paired again.

### **Test Doorbell 6 sound manually.**

You will be able to manually test your Doorbell 6 unpaired or paired to a Z-Wave network, to determine if its sound is working, perform the button action listed below:

- Press and hold Action Button down for 2-5 seconds

**Safety:** Test only when wearing necessary ear protection. Doorbell 6's speaker emits tones up to 105dB that can cause hearing damage.

## **Reset your Doorbell.**

This method is not fully advised unless your gateway has failed, and you do not yet have another gateway to perform a general unpair on Doorbell 6.

To do this, follow the steps below:

1. Press and hold the Action button for 20 seconds
2. [2-5 seconds], the test Doorbell sound will run, then stop after 5 seconds have passed.
3. [5-20 seconds] The LED will continue to blink faster (5 to 10 seconds) and faster (10 to 20 seconds).
4. [21 seconds and later] The LED will then quickly flash 3 times then will have LED breath in and out as you hold down the Action Button
5. Release the Action button, and the Doorbell 6 will factory reset.

## **Add more buttons to Doorbell 6.**

Doorbell 6 supports up to 3 Aeotec Buttons. Doorbell 6 already comes with one Aeotec Button, which you can purchase 2 additional Aeotec Button to pair and control a single Siren/Doorbell 6 sound unit.

You can learn how to pair more Aeotec Button to Doorbell 6 here:

<https://aeotec.freshdesk.com/solution/articles/6000202225-aeotec-button-user-guide->  
(<https://aeotec.freshdesk.com/solution/articles/6000202225-aeotec-button-user-guide->)

## **More Advanced Configurations.**

You can find more advanced configurations for Siren 6 in our Engineering Sheet section on our Freshdesk which can be used to integrate Siren 6 into a new gateway or software or use as a reference for configurations.

- **More Advanced Configuration settings and function use.**

(<https://aeotec.freshdesk.com/helpdesk/attachments/6086176996>)


## **Using Doorbell 6 with SmartThings hub.**

klraframboise has created a custom device handler to be used with SmartThings hub with all functions and use cases integrated. You can find instructions on how to install the custom device handler here and how to configure your Siren 6 to your needs

- <https://aeotec.freshdesk.com/solution/articles/6000223182-aeotec-doorbell-6-with-smartthings-hub->  
(<https://aeotec.freshdesk.com/solution/articles/6000223182-aeotec-doorbell-6-with-smartthings-hub->)

<https://aeotec.freshdesk.com/support/solutions/articles/6000202226-doorbell-6-user-guide->

Documents / Resources
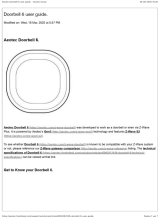
|   |   |
|---|---|
|  | <p><a href="#">AEOTEC ZW162 Doorbell 6 with Push-Button</a> [pdf] User Guide<br/>ZW162, Doorbell 6 with Push-Button</p> |
|---|---|