

AFEXOA DY28Z Sound Machine Alarm Clock



AFEXOA DY28Z Sound Machine Alarm Clock Installation Guide

[Home](#) » [AFEXOA](#) » AFEXOA DY28Z Sound Machine Alarm Clock Installation Guide 

Contents

- [1 AFEXOA DY28Z Sound Machine Alarm Clock](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions \(FAQ\)](#)
- [5 OVERVIEW](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

AFEXOA

AFEXOA DY28Z Sound Machine Alarm Clock



Product Specifications

- Timer Mode for setting timers
- Bluetooth/TF Card Mode for audio playback
- Standby Mode for device resting state
- White Noise Mode for soothing sounds
- Natural Sound Mode for calming sounds
- Speaker for answering calls and playing music
- Light modes for ambient lighting
- Alarm function with snooze capability
- Volume control for audio output
- Alarm and time settings

Product Usage Instructions

Timer Mode

Press the corresponding button to enter Timer Mode. Set the desired timer duration using the controls.

Bluetooth/TF Card Mode

Access Bluetooth or TF Card Mode by pressing the designated button. Pair your device or insert a TF card to play audio.

Standby Mode

Long press the standby button to put the device in Standby Mode. Reactivate by touching the Speaker Mesh or pressing a key.

Frequently Asked Questions (FAQ)

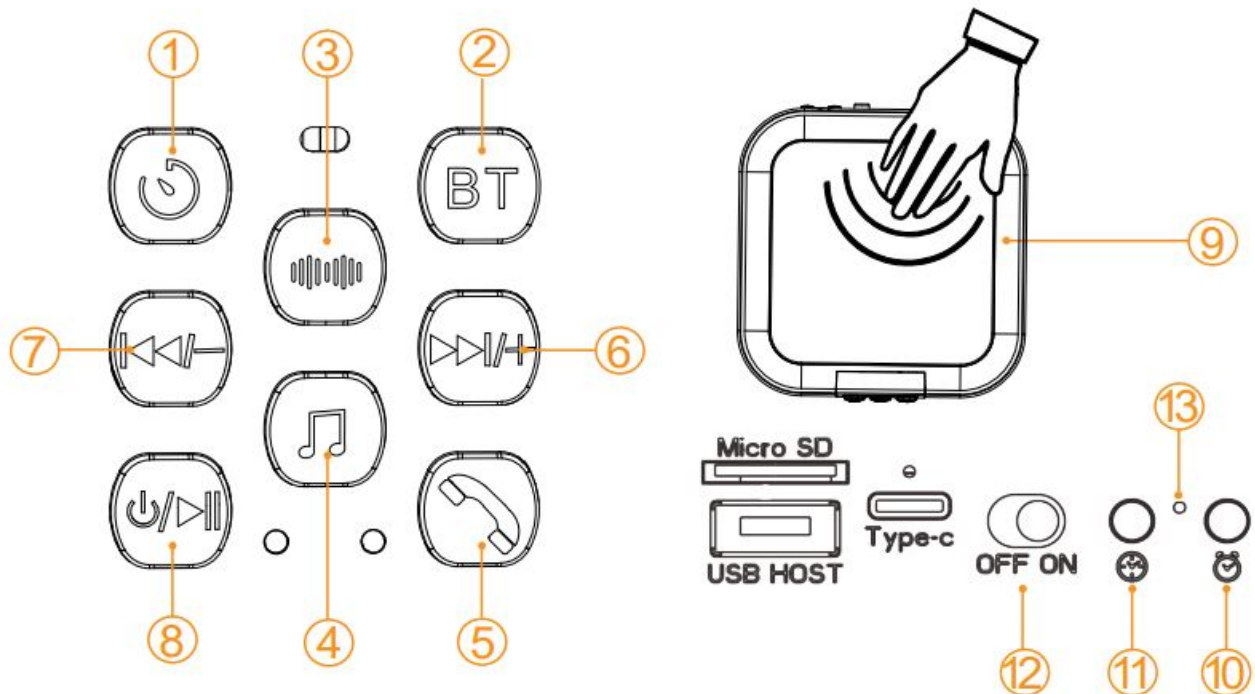
Q: How do I reset all settings on the device?



A: Locate the reset hole (labeled as 13) and poke it to reset all settings back to default.

Q: How can I adjust the alarm settings?

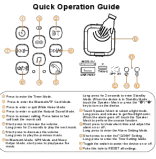
A: Long press the Alarm Setting button to enter the Alarm Setting Mode, then follow on-screen instructions to adjust alarm time and settings.

OVERVIEW



1. Press to enter the Timer Mode.
2. Press to enter the Bluetooth/TF Card Mode.
3. Press to enter or quit White Noise Mode.
4. Press to enter or quit the Natural Sound Mode.
5. Press to answer calling. Press twice to fast call back the recent call.
6. Short press to increase the volume; Long press for 2 seconds to play the next music.
7. Short press to decrease the volume; Long press to play the previous music.
8. In Bluetooth Mode, MP3 Mode, and Sleep Helper Mode, short press to play/pause the music.
9. Long press for 2 seconds to enter Standby Dude he Speaked Mesh or press the  " / "  key to turn on the device.
10. Touch Speaker Mesh to select a light mode. Long press and release to get a fixed light color; When the alarm goes off, touch the Speaker Mesh to perform the snooze function.
11. Short press to show alarm time and adjust the alarm on or off; Long press to enter the Alarm Setting Mode.
12. Short press to enter the "12/24H" Setting; Long press to enter the Time Setting Mode.
13. Toggle the switch to power the device on or off.
14. Poke this hole to RESET all settings.

Documents / Resources

	<p>AFEXOA DY28Z Sound Machine Alarm Clock [pdf] Installation Guide</p> <p>DY28Z Sound Machine Alarm Clock, DY28Z, Sound Machine Alarm Clock, Machine Alarm Clock, Alarm Clock, Clock</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.