

AJAX 8065 Leak Protect Detector User Manual

Home » ajax » AJAX 8065 Leak Protect Detector User Manual



LeaksProtect User Manual Updated October 4, 2021



LeaksProtect is a wireless leakage detector that notices both in case of a leak and when the water dries out. Developed only for indoor use.

LeaksProtect connects to the Ajax security system via the protected <u>Jeweller</u> radio protocol.

The communication range is up to 1300 meters in line of sight. Also, LeaksProtect can be connected to third-party security systems using the Ajax UART bridge Ajax Oxbridge Plus or integration modules.

Users can congure LeaksProtect via the <u>Ajax app</u> for macOS, Windows, iOS, or Android. The system noties users of all events through push notications, SMS, and calls (if activated).


The user can connect the Ajax security system to the central monitoring station of a security company.

Buy leakage detector LeaksProtect

Contents

- 1 Functional Elements and Indication
- **2 Operating Principle**
- 3 Connecting to the third-party security systems
- 4 States
- **5 Settings**
- 6 Indication
- 7 Turned-on detector indication
- **8 Functionality Testing**
- 9 Selecting the Location
- **10 Detector Testing**
- 11 Maintenance
- 12 Tech specs
- 13 Warranty
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts

Functional Elements and Indication

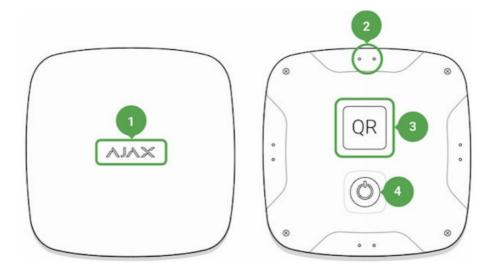

- 1. LED indicator
- 2. Water sensor contacts
- 3. QR code with the device registration key
- 4. On/off button

Operating Principle

At the bottom of its body, LeaksProtect is equipped with four pairs of water-sensitive contacts. If at least one

contact pair gets wet, the detector immediately transmits an alarm signal to the hub, notifying the user and security company. Also, the detector notifies users if the water dries out.

When switched on, LeaksProtect is always active and monitors the situation regardless of the security mode: disarmed or armed.

If the leak is detected, LeaksProtect not once, and the next alarm is transmitted when the contacts have dried out and gotten wet again.

Connecting the detector to the Ajax security system Detector connection to hub

Before connecting:

- 1. Following the hub user manual, install the Ajax app. Create an account, add the hub to the app, and create at least one room.
- 2. Check the internet connection (via Ethernet cable and/or GSM network).
- 3. Check the hub status in the app: make sure that it is disarmed and does not update.



Only users with administrator rights can add the device to the hub.

How to pair the detector with hub:

- 1. Select Add Device in the Ajax app.
- 2. Name the device, scan or enter the QR Code (located on the body and packaging), and select the location room.
- 3. Select Add the countdown will begin.
- 4. Switch on the device.



LeaksProtect has a rigid "ON" button: press it with force to switch the detector on.

For the detection and pairing to occur, the device should be located within the wireless coverage area of the hub (at the same facility).

Request for connection is transmitted for a short time at the moment of switching on the device.

If the connection failed, LeaksProtect switches off after 6 seconds. To retry the connection, you do not need to reboot the device. If LeaksProtect is paired with another hub, switch the detector off, then retry the standard adding procedure.

The detector connected to the hub is displayed in the list of devices in the app. The update of the detector status in the list depends on the device inquiry time set in the hub settings (the default value is 36 seconds).

Connecting to the third-party security systems

To connect the detector to a third-party security central unit using the <u>uartBridge</u> or <u>ocBridge</u> Plus integration module, follow the recommendations in the manual of the respective device.

The detector is always active. When connecting LeaksProtect to third-party security systems, it is appropriate to place the detector in a permanently active protection zone.

States



2. LeaksProtect

Parameter	Value
Temperature	The temperature of the detector, measured on the processor and changes gradually
Jeweler Signal Strength	Signal strength between the hub and detector
Battery Charge	The battery level of the device. Displayed as a percentage How battery charge is displayed in Ajax apps
Lid	The state of the tamper, which reacts to the body being disassembled or damaged
ReX	Displays the status of using the ReX radio signal range extender
Connection	Connection status between the hub and detector
Leakage detected	Alarm if the water sensor contacts wet
Temporary Deactivation	Shows the status of the device: active, completely disabled by the user, or only notifications about triggering of the device tamper button is disabled
Firmware	Detector firmware version
Device ID	Device identifier

Settings

- 1. Devices
- 2. LeaksProtect
- 3. Settings

Setting	Value
First eld	Detector name can be edited
Room	Selecting the virtual room to which the device is assigned
Alert with a siren if leakage is det ected	If active, added to the system are activated if sirens leakage is detected
Jeweler Signal Strength Test	Switches the detector to the signal strength test mode
Temporary Deactivation	Allows the user to disconnect the device without removing it from the system . Two options are available: • Entirely — the device will not execute system commands or participate in a utomation scenarios, and the system will ignore device alarms and other notifications • Lid only — the system will ignore only notifications about the triggering of the device tamper button Learn more about the temporary deactivation of devices
User Guide	Opens the detector User Manual
Delete Device	Disconnects the detector from the hub and deletes its settings

Indication

The LeaksProtect LED indicator may light up red or green depending on the device status.

Indication when pressing the power button

Event	Indication
Pressing the power button (detector is switche d on)	Lights up red while the button is held down
Switching on	Lights up green while the device is switching on
Switching off	Initially lights up red, then blinks three times

Turned-on detector indication

Event	Indication	Note
Detector connection to the, hub ocBr idge Plus and uartBridge	Lights up green for a few seconds	
Hardware error	Blinks red continuously	The detector requires repair, please contact w6.wdpf@gmail.com
Leakage detected	Lights up red for about one second	
Battery needs replacing	During the alarm, it slowly lights up red and slowly goes out	Replacement of the detector batt ery is described in the Battery replacement manual

Functionality Testing

Ajax security system allows conducting tests for checking the functionality of connected devices.

The tests do not start straight away but within a period of 36 seconds when using the standard settings. The test time start depending on the settings of the detector scanning period (the paragraph on "Jeweller" settings in the hub settings).

Jeweller Signal Strength Test Attenuation Test

Selecting the Location

When selecting the device location, please take into account its remoteness from the hub (up to 1300 meters) and the absence of any obstacles between the devices hindering the radio signal transmission: walls, doors, or large objects located in the room.



The device was developed only for indoor use.



Check the Jeweller signal strength level at the installation place.

If the signal level is low (one bar), we cannot guarantee the stable operation of the device. Take all possible measures to improve the signal strength. At least, move the device: even a 20 cm shift can significantly improve the quality of signal reception. If, after moving, the device still has a low or unstable signal strength, use the.

ReX radio signal range extender

Install LeaksProtect in the place of potential leakage: on or under the bath, sink, washing machine, etc.

Do not install the detector:

- outside the premises (outdoors);
- nearby any metal objects or mirrors causing attenuation and screening of the signal;

- within any premises with the temperature beyond the range of permissible limit;
- · on conductive surfaces;
- closer than 1 m to the hub.

Detector Testing

When the liquid gets on the detector contacts, it closes the electrical circuit. It is enough to close one contact pair to activate the alarm.

- 1. To check LeaksProtect, close one contact pair with a wet finger for 3 seconds (the delay prevents false triggering). If water is detected, the detector LED will light up red for 1 second.
- 2. Wipe the contacts with a dry napkin. When the electrical circuit is open, LeaksProtect switches on its LED red for 1 second and notices that the water dried out.

If you drown the detector with soapy water, it may continue signal coding after getting dry. The issue is about the soapy Im closing the contacts. To eliminate the problem, wipe the detector contacts with a napkin moistened with pure water, and then dry them up.

Maintenance

Check the LeaksProtect operational capability on a regular basis. We recommend cleaning the detector contacts as it gets dirty, at least, once every 2-3 months. Use an alcohol solution for cleaning the contacts.

Clean the detector body from dust, spider webs, and other contaminants as they appear: they can conduct electricity and cause false actuation. Use a soft dry napkin suitable for equipment maintenance.

Do not use any substances containing alcohol, acetone, gasoline, and other active solvents for cleaning the detector body.

The batteries installed in the detector ensure up to 5 years of autonomous operation on average (with the inquiry frequency by the hub of 1 minute). If the detector batteries are low, the security system sends the notification and the detector LED smoothly lights up and goes out green every hour if the device is triggered.

To replace the batteries, turn off the detector, loosen the screws and remove the LeaksProtect front panel. Change the batteries with new ones type AAA, adhering to polarity.

How long Ajax devices operate on batteries, and what affects this Battery replacement

Tech specs

Frequency band	868.0 – 868.6 MHz or 868.7 – 869.2 MHz depending on the region of sale
Compatibility	Operates with all Ajax, hubs range extenders, ocBridge Plus uartB ridge
Maximum RF output power	Up to 20 mW
Modulation of the radio signal	GFSK
Radio signal range	Up to 1,300 m (any obstacles absent) Learn more
Power supply	2 × AAA batteries
Power supply voltage	3 V (batteries are installed in pairs)
Battery life	Up to 5 years
Dust and moisture protection class	IP65
Installation method	Indoors
Operating temperature range	From 0°C to +50°C
Operating humidity	Up to 100%
Overall dimensions	56 × 56 × 14 mm
Weight	40 g
Service life	10 years

Compliance with standards

Complete Set

- 1. LeaksProtect
- 2. Batteries AAA (pre-installed) 2 pcs
- 3. Quick Start Guide

Warranty

Warranty for the "AJAX SYSTEMS MANUFACTURING" LIMITED LIABILITY COMPANY products is valid for 2 years after the purchase and does not apply to the pre-installed battery.

If the device does not work correctly, you should first contact the support service — in half of the cases, technical issues can be solved remotely!

The full text of the warranty
User Agreement

w6.wdpf@gmail.com

Documents / Resources



AJAX 8065 Leak Protect Detector [pdf] User Manual 8065, Leak Protect Detector, 8065 Leak Protect Detector, Protect Detector, Detector

References

- End user agreement Ajax Systems
- <u>Jeweller radio technology | Ajax Systems</u>
- <u>Current product lines of the Ajax security system</u>
- Current product lines of the Ajax security system
- <u>Current product lines of the Ajax security system</u>
- LeaksProtect Wireless flood detector | Ajax Systems
- <u>ocBridge Plus</u> Module for Ajax devices integration with wired systems
- <u>ReX Intelligent radio signal range extender | Ajax Systems</u>
- <u>uartBridge</u> <u>Module for Ajax devices integration with third-party wireless alarms systems</u>
- <u>Jeweller and Wings radio protocols in the Ajax security system</u>
- Software | Ajax Systems
- <u>Ajax devices standards compliance list</u>
- <u>─ Warranty Ajax Systems</u>
- How battery charge is displayed in Ajax apps | Ajax Systems Support
- How long Ajax devices operate on batteries, and what affects this | Ajax Systems Support
- We have to temporarily deactivate a device without removing it from the system | Ajax Systems Support
- ► How to change batteries in the LeaksProtect | Ajax Systems Support
- What is Attenuation Test | Ajax Systems Support
- What is Jeweller Signal Strength Test | Ajax Systems Support

Manuals+