



AKAI LPK25 V2 Laptop Performance Keyboard Owner's Manual

[Home](#) » [AKAI](#) » AKAI LPK25 V2 Laptop Performance Keyboard Owner's Manual 



LPK25 V2 Laptop Performance Keyboard Owner's Manual



WWW.AKAIPRO.COM

Contents

- 1 BOX CONTENTS
- 2 SOFTWARE CD
- 3 TOP PANEL OVERVIEW
- 4 SOFTWARE EDITOR
- 5 LOADING & SAVING PRESETS
- 6 EDITING PRESETS
- 7 SPECIFICATIONS
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts

BOX CONTENTS

- LPK25
- USB cable
- Software CD
- Safety Instructions & Warranty Information

SOFTWARE CD


PC Users: To install the Akai Professional LPK25 Editor, open the contents of the disc, double-click Setup.exe, and follow the on-screen instructions. To open the editor, connect the LPK25 to your computer with a standard USB cable (included) then double-click LPK25 Editor.exe.

Mac Users: Drag the contents of the disc to an appropriate location on your hard drive. To open the editor, connect the LPK25 to your computer with a standard USB cable (included) then double-click the LPK25 Editor.

Note: Always connect the LPK25 to your computer before opening the editor.

TOP PANEL OVERVIEW

1.

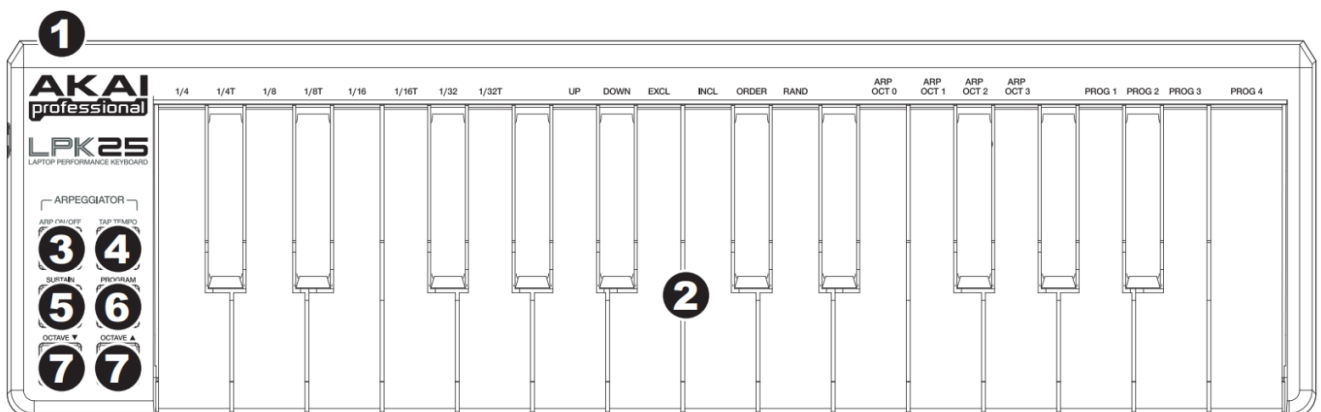

USB CONNECTION Plug a standard USB cable into this outlet and into the USB port of your computer. The computer's USB port will provide power to the LPK25.

2. **KEYBOARD** This 25-note keyboard is velocity-sensitive and, in conjunction with the OCTAVE +/- buttons, can control a nine-octave range. The ARP ON / OFF and PROGRAM buttons allow some of its keys to access additional commands (see below).
3. **ARP ON / OFF** Press this button to turn the Arpeggiator on or off. Pressing it during a latched arpeggio will stop the arpeggio.

Hold down ARP ON / OFF and press a labeled key on the LPK25's KEYBOARD to enter new settings for the Arpeggiator (see EDITING PRESETS for more information on these settings):

- Time Division 1/4 note, 1/4 note triplet ("1/4 T"), 1/8 note, 1/8 note triplet ("1/8 T"), 1/16 note, 1/16 note triplet ("1/16 T"), 1/32 note, or 1/32 note triplet ("1/32T")
- Arpeggiator Mode Up, Down, Inclusive, Exclusive, Order, or Random
- Arpeggiator Octave ARP OCT 0, 1, 2, or 3

4. TAP TEMPO Tap this button at the desired rate to determine the tempo of the Arpeggiator. The minimum number of taps required is programmable in the software. (**Note:** This button is disabled if the Arpeggiator is synced to an external clock.)
5. SUSTAIN / LATCH When the Arpeggiator is off, you can hold down the SUSTAIN button to sustain the currently held notes on the KEYBOARD, which will stop when SUSTAIN is released.
When the Arpeggiator is turned on and this button has been enabled, you can hold down a combination of keys the Arpeggiator will memorize and continue to arpeggiate these notes, even if you depress the keys. There are a couple of ways to use this LATCH function:
 - a. While holding down the keys, you can add more notes to the sequence by pressing down additional keys.
 - b. If you depress the keys, release them, and then press down a new combination of notes, the Arpeggiator will memorize and arpeggiate the new notes.
6. PROGRAM Hold down this button and press one of the KEYBOARD keys labeled PROG 1, 2, 3 or 4 to recall the preset of the same number.
7. OCTAVE +/- These buttons can be used to shift the KEYBOARD's range up or down four octaves in either direction. When you are higher or lower than the center octave, the corresponding OCTAVE button will light. Press both OCTAVE buttons simultaneously to reset the KEYBOARD to the default center octave.

SOFTWARE EDITOR

OPENING THE EDITOR

Always connect the LPK25 to your computer before opening the software editor.



After opening the software editor, you will need to select the LPK25 from the dropdown menu on the opening screen and click "Done." y For Mac or Windows Vista users, it will be listed as Akai LPK25. y For Windows XP users, it will be listed as USB Audio Device. (If you have other USB audio devices connected to your computer, which may have identical names, you may need to try selecting each one until the LPK25 is recognized.)

IMPORTANT!: The first time you use the software editor, even if the correct device is already shown in the drop-down menu, you still need to click on the menu and select the device. (You will also need to do this if you move your files to a new location.) In future sessions, though, you can simply click "Done" if the correct device is shown in this window.

LOADING & SAVING PRESETS



The editor lets you edit, save, or load presets for the LPK25 on your computer. These buttons and fields are shown at the top of the editor window.


1. **GET PRESET** Click a button to select the number of presets currently on the LPK25 (1-4). When you select it, its settings will be shown on the software interface.
2. **PRESET #** Click on this field to select the number that the currently shown preset will use if you upload it to the LPK25 (by clicking COMMIT UPLOAD).
3. **COMMIT UPLOAD** Click this button to send the currently shown preset to the LPK25. The number of this preset is determined by the EDIT PRESET field.
4. **SAVE PRESET** Click this button to save the currently shown preset to your computer.
5. **LOAD PRESET** Click this button to load a saved preset from your computer. Once it loads, you will see its settings in the software interface.

Note: When you save a preset, the current PRESET # will be saved with it. When you load that preset later, the PRESET # field will be updated with that number. If you want to change the preset number before uploading it to the LPK25, simply select a new PRESET # before clicking COMMIT UPLOAD.

TO COPY A PRESET:

1. Load the preset you want to copy from the LPK25 by clicking the GET PRESET button.
2. Set the preset you want to copy it to on the LPK25 by clicking the EDIT PRESET field and selecting it.
3. Click COMMIT UPLOAD to send the copied preset to the LPK25.

EDITING PRESETS

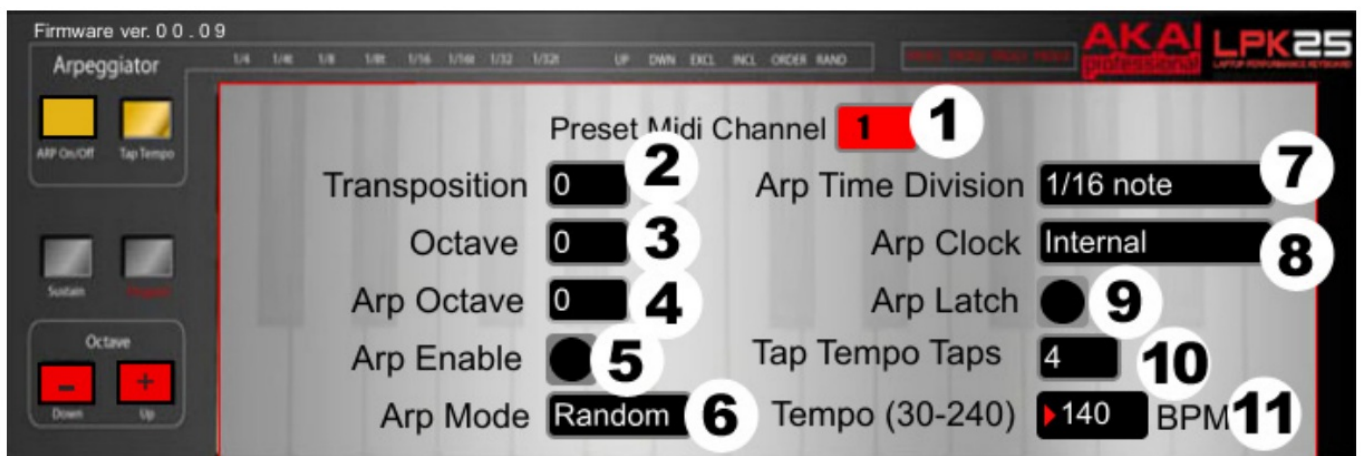

This section outlines the editable items for each preset.

1. **PRESET MIDI CHANNEL** Click this field to select the number of the MIDI channel that the LPK25 will use to transmit MIDI messages while using this preset.
2. **TRANSPOSITION** Click on this field and drag up or down with the mouse (or use your keyboard or keys) to

change the transposition of the LPK25's KEYBOARD. You can transpose it up to 12 semitones in either direction.

3. OCTAVE Click this field to select the default octave for the preset.
4. ARP OCTAVE Click this field to select the number of octaves (0-3) that an arpeggio will span. If this number is larger than zero, after the first arpeggio in its original octave, subsequent arpeggios will sound in increasingly higher octaves. After sounding at the highest octave (assigned here), the process will repeat from the original octave.
5. ARP ENABLE Click this button to enable or disable the Arpeggiator. The button is red when the Arpeggiator is enabled.
6. ARP MODE Click this field to select the mode for the Arpeggiator.
 - Up Notes arpeggiate from the lowest note up to the highest note.
 - Down Notes arpeggiate from the highest note down to the lowest note.
 - Inclusive Notes arpeggiate from the lowest to the highest note and back down. The lowest and highest notes are retriggered when the arpeggio changes direction.
 - Exclusive Notes arpeggiate from the lowest to the highest note and back down. The lowest and highest notes are not retriggered when the arpeggio changes direction. Order Notes will be repeated in the same order in which their keys were pressed.
 - Random Plays the held notes in random selection.
7. ARP TIME DIVISION Click this field to select the time division, which determines how often the Arpeggiator will play a note. The smaller the value, the faster the arpeggio.
8. ARP CLOCK Click this field to select whether the Arpeggiator will follow the LPK25's internal clock or an external clock. (Note: When synced to an external clock, the LPK25's TAP TEMPO button will be disabled.)
9. ARP LATCH Click this button to enable or disable latching for the Arpeggiator. When this button is red, latching is enabled, which means notes will continue to arpeggiate even after the key is no longer being pressed. (Press the ARP ON / OFF button to stop the arpeggio.) When latching is disabled, notes will only arpeggiate when their keys are held down.
10. TAP TEMPO TAPS Click this field to select the minimum number of taps (of the TAP TEMPO button) required to detect and enter a new tempo for the Arpeggiator.
11. TEMPO Click on this field and drag up or down with the mouse (or use your keyboard or keys) to change the current tempo for the Arpeggiator.

MIDI IMPLEMENTATION CHART

Manufacturer: Akai Professional Model: LPK25 Version: 1.0 Date: 2009.05.15			
	Transmit/Export	Recognize/Import	Remarks
1. Basic Information			
MIDI channels	1-16	1-16	
Note numbers	0-127	0-127	
Program change	No	No	

Bank Select response? (Yes/No) If yes, list banks utilized in the remarks column	No No		
Modes supported: Mode 1: Omni-On, Poly (Yes/No) Mode 2: Omni-On, Mono (Yes/No) Mode 3: Omni-Off, Poly (Yes/No) Mode 4: Omni-Off, Mono (Yes/No) Multi-Mode (Yes/No)	No	No	
Note-On Velocity (Yes/No)	Yes	No	
Note-Off Velocity (Yes/No)	No	No	
Channel Aftertouch (Yes/No)	No	No	
Poly (Key) Aftertouch (Yes/No)	No	No	
Pitch Bend (Yes/No)	No	No	
Active Sensing (Yes/No)	No	No	
System Reset (Yes/No)	Yes	No	
Tune Request (Yes/No)	No	No	
Universal System Exclusive: Sample Dump Standard (Yes/No) Device Inquiry (Yes/No) File Dump (Yes/No) MIDI Tuning (Yes/No) Master Volume (Yes/No) Master Balance (Yes/No) Notation Information (Yes/No) Turn GM1 System On (Yes/No) Turn GM2 System On (Yes/No) Turn GM System Off (Yes/No) DLS-1 (Yes/No) File Reference (Yes/No) Controller Destination (Yes/No) Key-based Instrument Ctrl (Yes/No) Master Fine/Coarse Tune (Yes/No) Other Universal System Exclusive	No	No	
The manufacturer or Non-Commercial System Exclusive	Yes	Yes	
NRPNs (Yes/No)	No	No	
RPN 00 (Pitch Bend Sensitivity) (Yes/No) RPN 01 (Channel Fine Tune) (Yes/No) RPN 02 (Channel Coarse Tune) (Yes/No) RPN 03 (Tuning Program Select) (Yes/No) RPN 04 (Tuning Bank Select) (Yes/No) RPN 05 (Modulation Depth Range) (Yes/No)	No	No	
2. MIDI Timing and Synchronization			
MIDI Clock (Yes/No)	No	Yes	
Song Position Pointer (Yes/No)	No	Yes	

Song Select (Yes/No)	No	No	
Start (Yes/No) Continue (Yes/No) Stop (Yes/No)	No	Yes	
MIDI Time Code (Yes/No)	No	No	
MIDI Machine Control (Yes/No)	No	No	
MIDI Show Control (Yes/No) If yes, MSC Level supported	No	No	
3. Extensions Compatibility			
General MIDI compatible? (Level(s)/No) Is GM default power-up mode? (Level/No)	No	No	
DLS compatible? (Levels(s)/No) (DLS File Type(s) /No)	No	No	
Standard MIDI Files (Type(s)/No)	No	No	
XMF Files (Type(s)/No)	No	No	
SP-MIDI compatible? (Yes/No)	No	No	


SPECIFICATIONS

Number of presets:.....4
 MIDI output channels over USB:..... 16
 Note keys:..... 25 (velocity-sensitive)
 Inputs/outputs:..... 1 USB-mini port
 Power:..... < 100 mA, 5V DC via USB
 Dimensions (W x D x H):..... 339 mm x 97 mm x 33 mm
 Weight:..... 40 g



WWW.AKAIPRO.COM

Documents / Resources

	<p>AKAI LPK25 V2 Laptop Performance Keyboard [pdf] Owner's Manual LPK25 V2 Laptop Performance Keyboard, LPK25, V2 Laptop Performance Keyboard, Keyboard, Performance Keyboard</p>
---	--

References

-  [Music Production Hardware & Software | Akai Pro](#)

Manuals+.