



Altronix HubWayLDD Series Active UTP Transceiver Hubs with Integral Camera Power Installation Guide

[Home](#) » [Altronix](#) » Altronix HubWayLDD Series Active UTP Transceiver Hubs with Integral Camera Power Installation Guide 

Contents

- [1 Altronix HubWayLDD Series Active UTP Transceiver Hubs with Integral Camera Power](#)
- [2 Models Include](#)
- [3 Overview](#)
- [4 HubWayLD Specifications](#)
- [5 Installation Instructions](#)
- [6 Typical Applications](#)
- [7 Dimensions](#)
- [8 Mounting Options](#)
 - [8.1 Mounting Hardware \(Included\)](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



Altronix HubWayLDD Series Active UTP Transceiver Hubs with Integral Camera Power



Models Include

HubWayLD8D

- UL Listed eight (8) Channel Active UTP Transceiver Hub with Integral Camera Power

HubWayLD82D

- UL Listed eight (8) Channel Active UTP Transceiver Hub with Integral Camera Power
- Includes eight (8) UL Listed Accessory HubWayAv Video Balun/Combiners

HubWayLD83D

- UL Listed eight (8) Channel Active UTP Transceiver Hub with Integral Camera Power
- Includes eight (8) UL Listed Accessory HubWayDv Video Balun/Combiners

HubWayLD16D

- UL Listed sixteen (16) Channel Active UTP Transceiver Hub with Integral Camera Power

HubWayLD162D

- UL Listed sixteen (16) Channel Active UTP Transceiver Hub with Integral Camera Power
- Includes sixteen (16) UL Listed Accessory HubWayAv Video Balun/Combiners

HubWayLD163D

- UL Listed sixteen (16) Channel Active UTP Transceiver Hub with Integral Camera Power
- Includes sixteen (16) UL Listed Accessory HubWayDv Video Balun/Combiners

Overview

Altronix HubWayLD8D/16D Active UTP Transceiver Hub with Integral Camera Power transmits UTP video, RS422/RS485 data and power over a single CAT-5 or higher structured cable. Unit provides 8 or 16 camera channels in a space-saving 1U EIA 19" rack mount chassis which may be rack, wall or shelf mounted. Video transmission range is up to 3000 ft. max. per channel. Units are compatible with AC and/or DC fixed or PTZ cameras when utilizing Altronix HubWayAv, HubWayAv2, HubWayDv or HubWayDvi Video Balun/Combiners. In

addition, the unit features individually selectable 24VAC or 28VAC PTC protected outputs with surge suppression. An optional HubSat4D Passive UTP Transceiver Hub with Integral Camera Power can be used as an accessory module to transmit video from up to 4 cameras over a single CAT-5 or higher structured cable back to the HubWayLD8D/16D. In addition, the HubSat4D provides power to these cameras locally to eliminate the possibility of voltage drop associated with long cable runs.

HubWayLD Specifications

HubWayLD8D/LD82D/LD83D

Input:

- 115VAC, 60Hz, 1.5A or 230VAC 50/60Hz, 1A.

Video:

- Eight (8) channels of video over twisted pair up to a distance of 3000 ft. per channel.
- Eight (8) 75-ohm video outputs.

Power:

The unit provides up to 1A max. per channel not to exceed a total of 5A (150VA) maximum current.

HubWayLD16D/LD162D/LD163D

Input:

- 115VAC 60Hz, 3A or 230VAC 50/60Hz, 1.5A.

Video:

- Sixteen (16) channels of video over twisted pair up to a distance of 3000 ft. per channel.
- Sixteen (16) 75-ohm video outputs.

Power:

The unit provides up to 1A max. per channel not to exceed a total of 10A (300VA) maximum current.

Common Specifications:

Agency Listings:

- UL Listed for Commercial CCTV Equipment (UL 2044).

Data:

- RS422/RS485 data inputs.

Power:

- Individually selectable 24VAC or 28VAC power outputs with OFF position.
- PTC-protected outputs are rated @ 1A per channel.
- Surge suppression.

Visual Indicators:

- Individual video signal LED indicators.
- Individual power LED indicators.

Features:

- Picture and Gain control.
- Illuminated master power disconnect circuit breaker with manual reset.
- IEC 320 – 3-wire grounded line cord (detachable).
- The unit can be rack, wall or shelf mounted.
- 1U rack mount chassis for standard EIA 19" rack.

Accessories:

- Video Balun/Combiners:
 - HubWayAv: for use with 24VAC cameras.
 - HubWayAv2: for use with 24VAC cameras.
 - HubWayDv: for use with 12VDC cameras.
 - HubWayDvi: for use with non-isolated 12VDC cameras.
- Optional HubSat4D allows transmission of up to four (4) video signals over a single CAT-5 or higher structured cable.

Additional Models:**HubWayLD82D**

- HubWayLD8D with eight (8) UL Listed Accessory HubWayAv Video Balun/Combiners for 24VAC Cameras.

HubWayLD83D

- HubWayLD8D with eight (8) UL Listed Accessory HubWayDv Video Balun/Combiners for 12VDC Cameras.

HubWayLD162D

- HubWayLD16D with sixteen (16) UL Listed Accessory HubWayAv Video Balun/Combiners for 24VAC Cameras.

HubWayLD163D

- HubWayLD16D with sixteen (16) UL Listed Accessory HubWayDv Video Balun/Combiners for 12VDC Cameras.

WARNING:

To reduce the risk of fire or electric shock do not expose the unit to rain or moisture. This installation should be made by qualified service personnel and should conform to all local codes.

Installation Instructions

1. Set the input voltage selector switch located on the left side of the HubWayLD8D/LD16D unit (facing the front panel) for 115VAC or 230VAC operation (Fig. 1k, pg. 4).
2. Attach mounting brackets to the HubWayLD unit for rack or wall mount installation (Fig. 6-7, pg. 8). Affix rubber pads to HubWayLD for shelf installation (Fig. 8, pg. 8).
3. Secure the unit in a rack, mount the unit to a wall or place the unit on a shelf as desired (the unit should be spaced at least 3" from any video monitors).
4. Set the illuminated master power disconnect circuit breaker to the (OFF) position (Fig. 5, pg. 7).
5. Plug the grounded AC line cord (included) into the IEC 320 connector of the HubWayLD8D/HubWayLD16D unit (Fig. 1j, pg. 4). Insert the plug end of the line cord into a grounded AC receptacle.
6. Set the voltage output selector switch of each camera channel for 24VAC or 28VAC (Fig. 1d, pg. 4).
7. Connect the BNC video outputs for HubWayLD8D/LD16D Channels 1 – 8 (Channels 1-16) to the corresponding video inputs on the head end equipment (DVR) (Fig. 1f, pg. 4).
8. Connect the RS422/RS485 output of the head end equipment (DVR) to the one (1) or both data input terminal blocks of the HubWayLD8D or HubWayLD16D unit (polarity must be observed) (Fig. 1e, pg. 4).

Note: The Data input terminals of the HubWayLD8D or HubWayLD16D must be wired in parallel for proper operation. When using fixed cameras disregard this step.

9. Connect Video Balun/Combiner at camera 1 to the HubWayLD8D or HubWayLD16D unit utilizing CAT-5 or higher structured cable. Plug the RJ45 connector at one end of the structured cable into the RJ45 jack marked [Channel 1] of the HubWayLD8D/LD16D (Fig. 1a, pg. 4). Plug the RJ45 connector at the opposite end of the structured cable into the RJ45 jack of the Video Balun/Combiner located at camera 1.

- For 24VAC cameras use the Altronix model HubWayAv/HubWayAv2 Video Balun/Combiner (Fig. 2a, 2b, 2e, pg. 5).
- For 12VDC cameras use the Altronix model HubWayDv Video Balun/Combiner (Fig. 2c, 2d, pg. 5).
- For non-isolated 12VDC cameras use Altronix model HubWayDvi Video Balun/Combiner (Fig. 2c, 2d, pg. 5). Repeat steps 6-9 for each additional camera (Channels 2-8 or Channels 2-16).

Note: When a particular camera exceeds the maximum distance for power transmission, a local external power source is required. Optionally, an Altronix HubSat4D Passive UTP Transceiver Hub with Integral Camera Power may be utilized (Fig. 4a, pg. 6). The combined total cable distance must not exceed 3,000 ft. for video transmission between the HubWayLD8D/LD16D and each camera routed through the HubSat4D.

10. Set the illuminated master power disconnect circuit breaker to the RESET (ON) position (Fig. 5, pg. 7) and measure the output voltage at the power output of each Video Balun/Combiner (Fig. 2b, 2d, pg. 5) before powering each camera to ensure proper operation and avoid possible damage.
 - HubWayAv/HubWayAv2 – Terminals marked [AC POWER] (Fig. 2a, 2b, 2e, pg. 5).
 - HubWayDv/HubWayDvi – Terminals marked [– 12VDC +] (Fig. 2c, 2d, pg. 5).


11. Set the illuminated master power disconnect circuit breaker to the (OFF) position to make the final connections (Fig. 5, pg. 7).
12. Connect the power outputs of the HubWayAv, HubWayAv2, HubWayDv or HubWayDvi Video Balun/Combiners to the power inputs of the cameras (Fig. 2a-2e, pg. 5). Polarity must be observed.
13. Connect the terminals marked [+ DATA –] of the HubWayAv, HubWayAv2, HubWayDv or HubWayDvi Video Balun/Combiners to the data terminals of the cameras for PTZ control (Fig. 2a-2e, pg. 5). Polarity must be observed. When using fixed cameras disregard this step.
14. Connect the BNC connectors of the HubWayAv, HubWayAv2, HubWayDv, or HubWayDvi Video Balun/Combiners to the BNC video outputs of the cameras (Fig. 2a-2e, pg. 5).
15. Upon completion of the wiring set illuminated master power disconnect circuit breaker to the RESET (ON) position (Fig. 5, pg. 7).
16. The power LEDs (Red) located on the front of the HubWayLD8D/LD16D will illuminate when AC power is present (Fig. 1c, pg. 4).

Note: If any of these LEDs are not illuminated either a voltage output selector switch is in the OFF position or the PTC is tripped for that channel.

To reset the PTC:

1. Set the voltage output selector switch for that corresponding channel to the OFF position. The switch must remain in the OFF position for approximately 2 minutes in order for the PTC to reset.
 2. Eliminate the trouble condition (short circuit or overload).
 3. Set the voltage output selector switch for 24VAC or 28VAC (Fig. 1d, pg. 4).
17. AC LEDs (Green) of the HubWayAv or DC LEDs (Red) of the HubWayDv/HubWayDvi Video Balun/ Combiners will illuminate indicating power is present at the cameras (Fig. 2b, 2d, pg. 5).
 18. The video signal indicator LEDs (Red) located on the rear of the HubWayLD8D/LD16D will illuminate when the video signal is present (Fig. 1i, pg. 4). If any of these LEDs are not illuminated, no video signal is present for that corresponding channel.
 19. Optimize the picture quality for all camera channels by adjusting the corresponding potentiometers marked [Picture] (Fig. 1g, pg. 4).
 20. Set the gain for all camera channels adjusting the corresponding potentiometers marked [Gain] (Fig. 1h, pg. 4).

Fig. 1

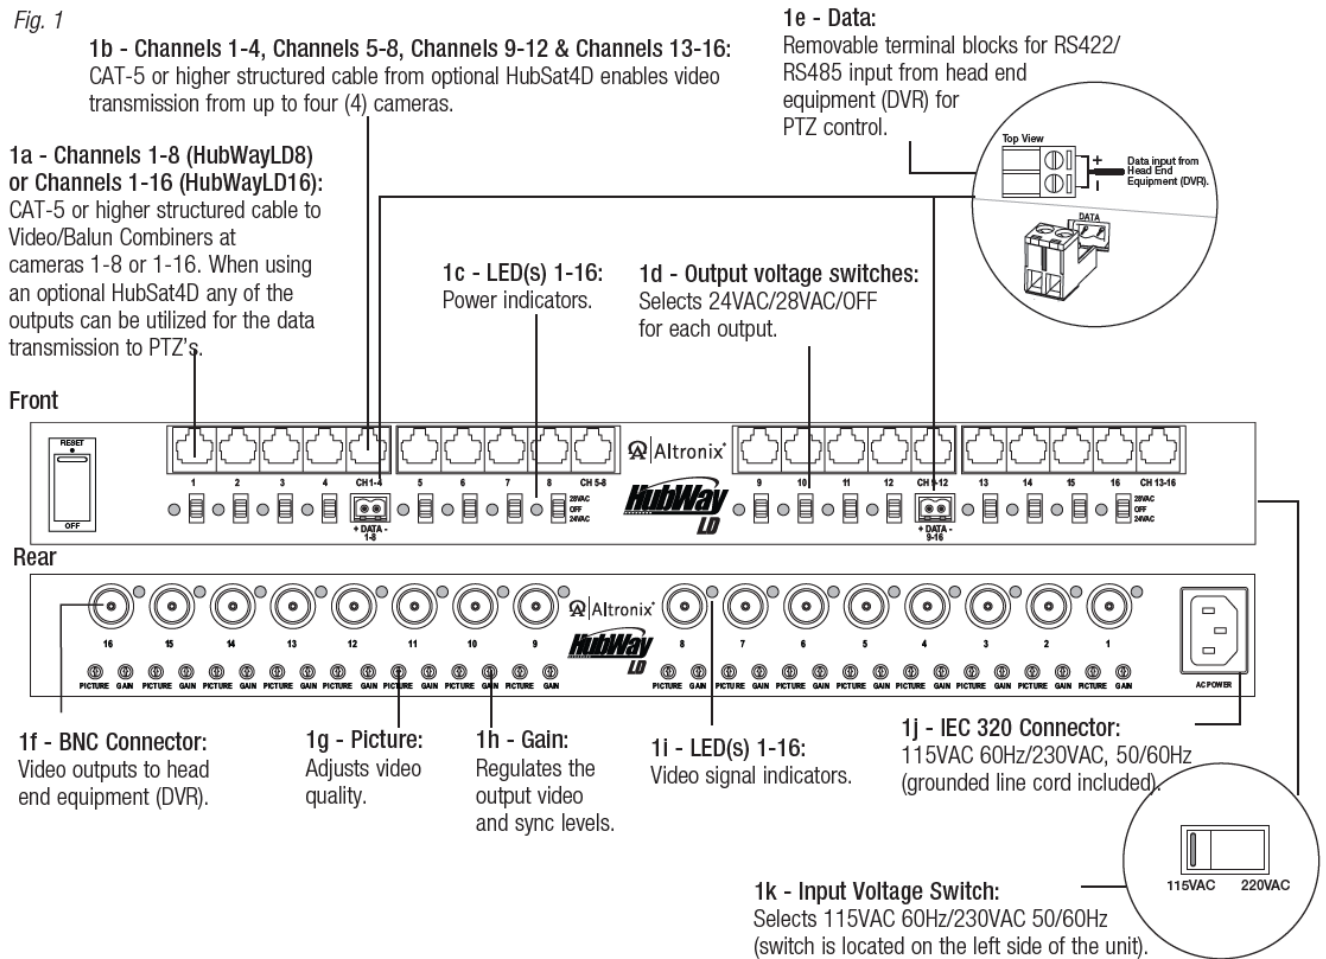

HubWayAv, HubWayAv2, HubWayDv, and HubWayDvi Video Balun/Combiners:

| Altronix Model Number | Input Voltage from HubWay Unit | Output Voltage to Camera | Camera Type | Power LED |
|-----------------------|--------------------------------|--------------------------|---------------|-----------|
| HubWayAv | *24VAC/28VAC | *24VAC/28VAC | *24VAC/28VAC | Green |
| HubWayAv2 | *24VAC/28VAC | *24VAC/28VAC | *24VAC/28VAC | N/A |
| HubWayDv | *24VAC/28VAC | 12VDC | 12VDC cameras | Red |

Based on camera load and structured cable length.

Fig. 2



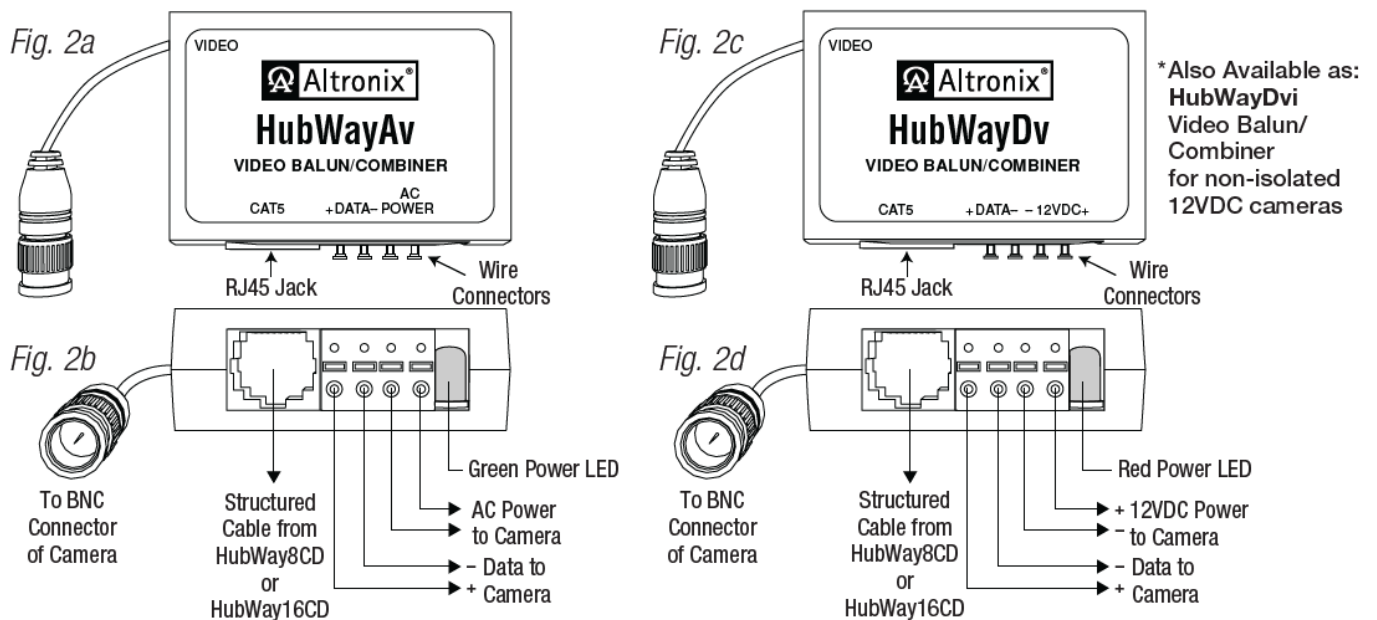


Fig. 2e – HubWayAV2

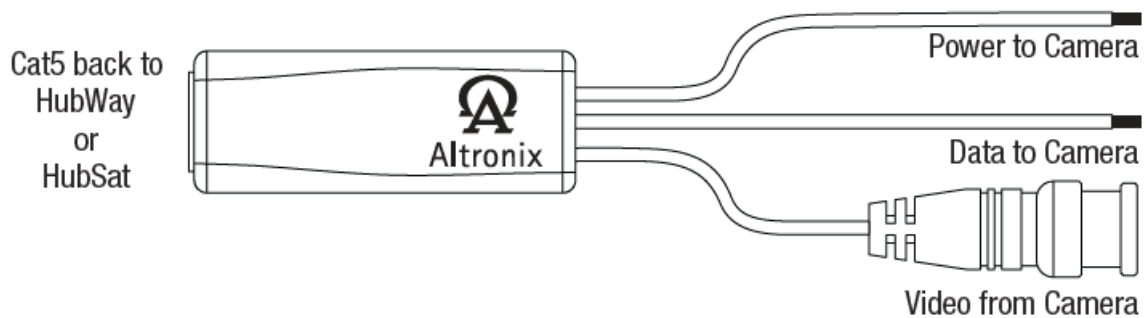

HubWayAv/HubWayAv2 passes AC voltage from pins 4, 5, 7, 8 to terminals marked [AC Power] (Fig. 3, pg. 5). HubWayDv/HubWayDvi converts AC voltage to DC voltage from pins 4, 5, 7, 8 to terminals marked [- 12VDC +] (Fig. 3, pg. 5).

CAT-5 Structured Cable Wiring Color Codes and PIN Configurations

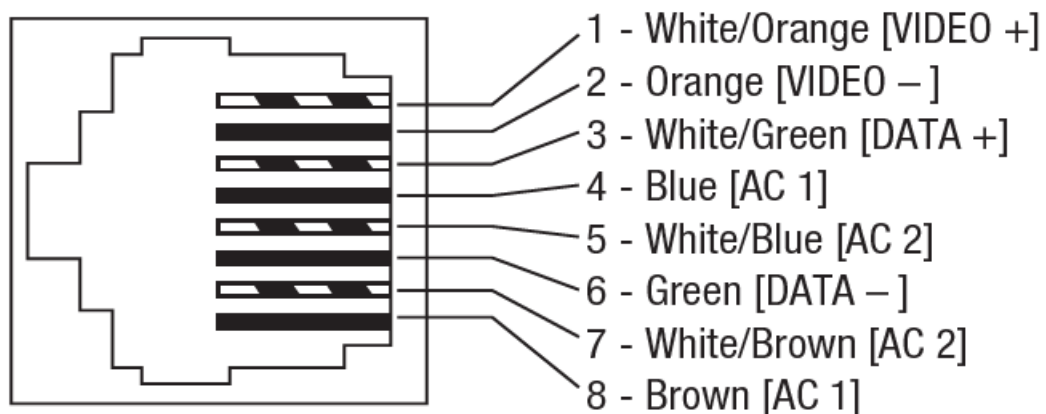

Typical Applications

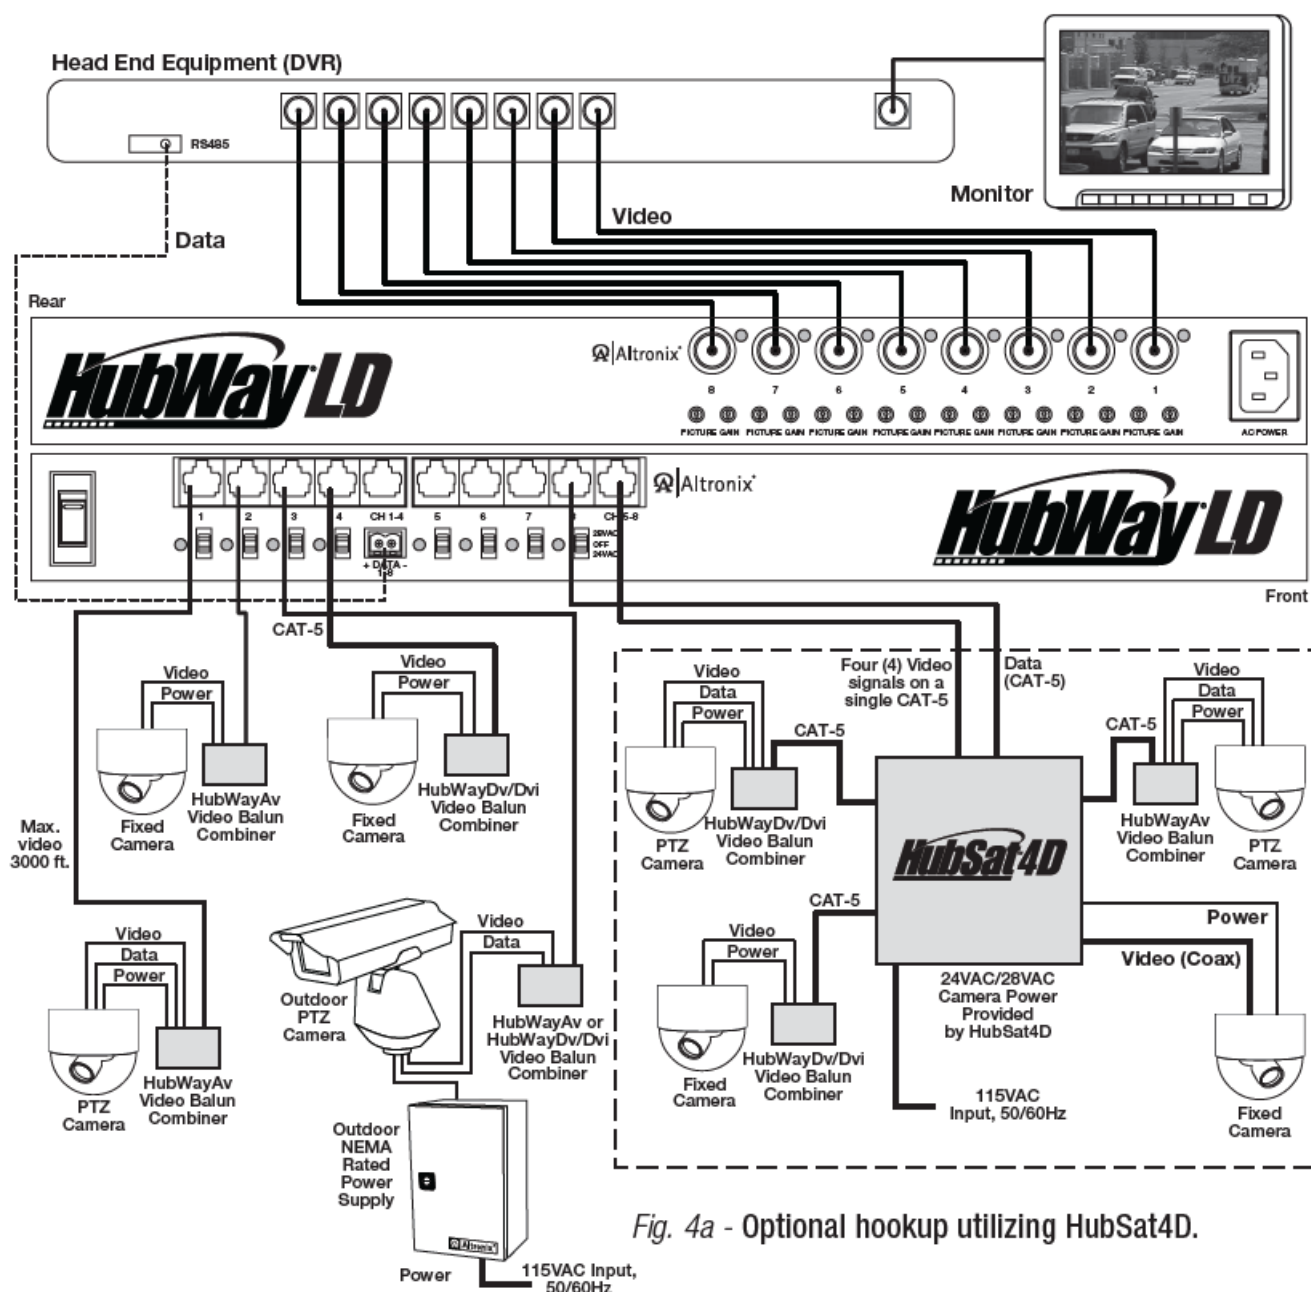


Fig. 4a - Optional hookup utilizing HubSat4D.

- The lightning flash with an arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of an insulated DANGEROUS VOLTAGE within the product's enclosure that may be of sufficient magnitude to constitute an electric shock.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.
- **CAUTION:** To reduce the risk of electric shock do not open the enclosure. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.

Dimensions

1U EIA 19" Rack Mount Chassis Dimensions (H x W x D approximate): 1.625" x 19.125" x 8.5" (41.3mm x 486mm x 216mm)

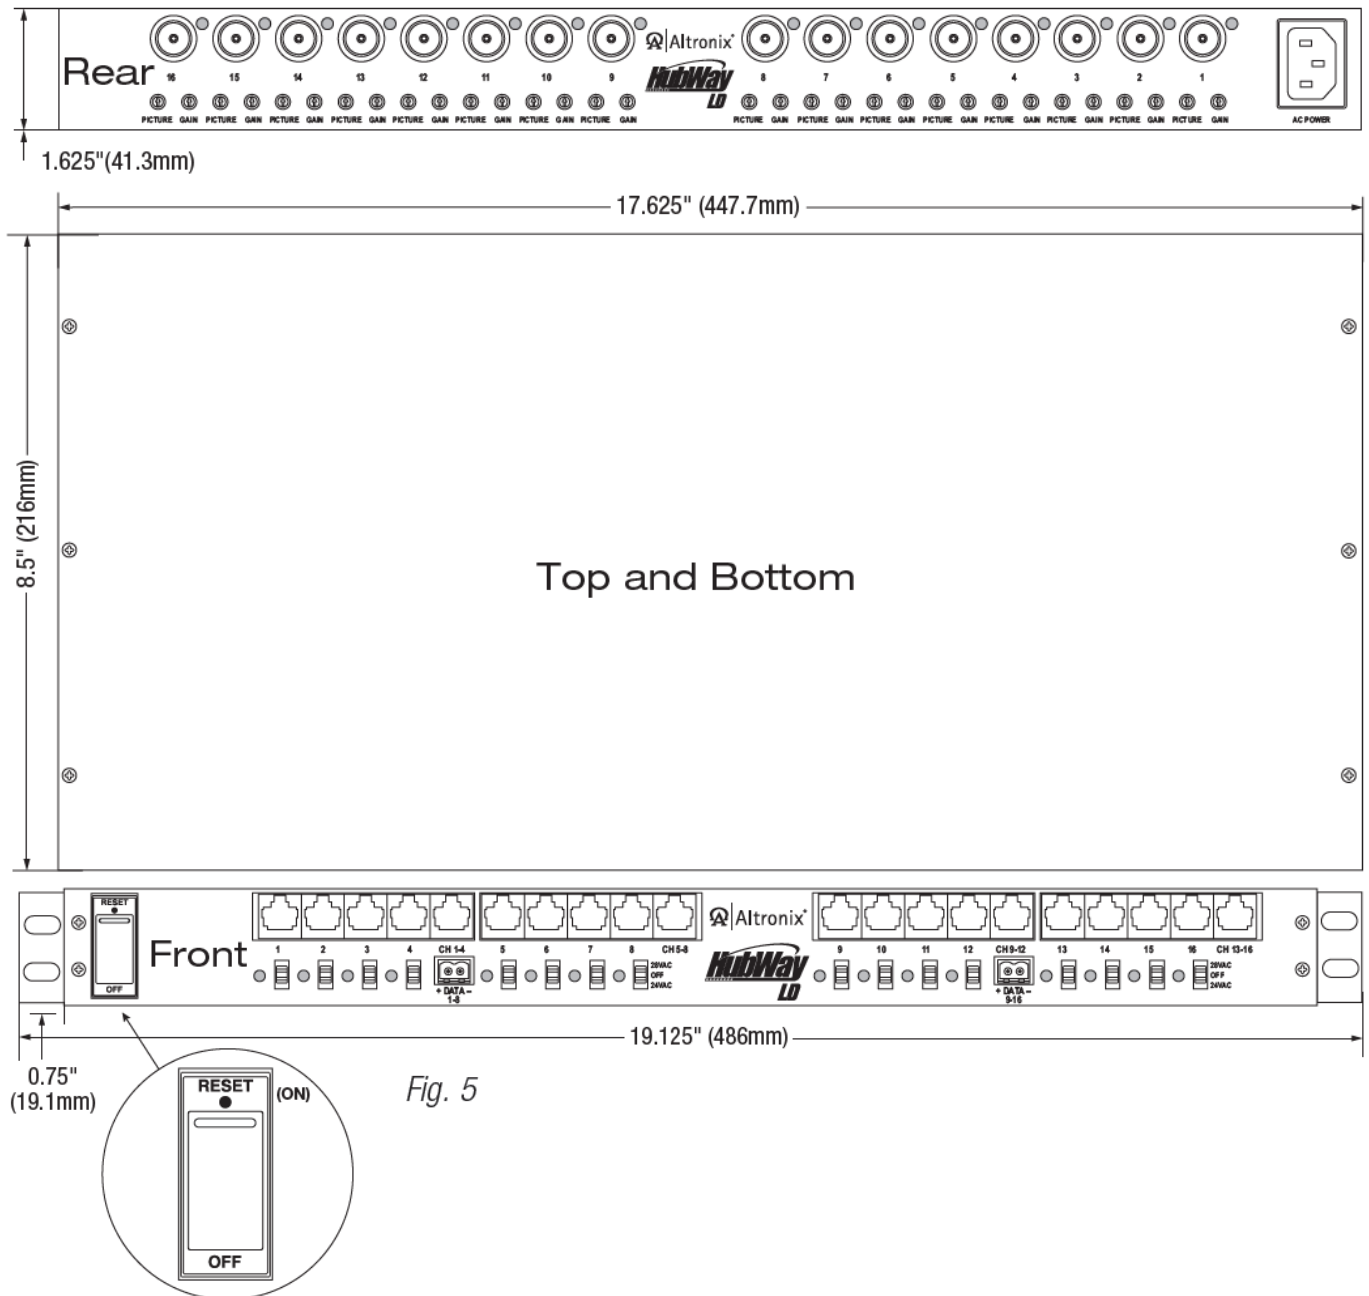


Fig. 5

Illuminated master power disconnect circuit breaker:

- OFF position Circuit breaker tripped – Switch not illuminated.
- RESET (ON) position – Switch illuminated.

Mounting Options

Rack Mount Installation

1. Remove factory installed screws from both sides of the rack chassis (Fig. 6a).
2. Install mounting brackets (A) on the left and right side of the rack chassis using the two (2) flat head screws (B) (included) (Fig. 6b).
3. Place the unit into desired EIA 19" rack position and secure it with mounting screws (not included) (Fig. 6c).

Fig. 6

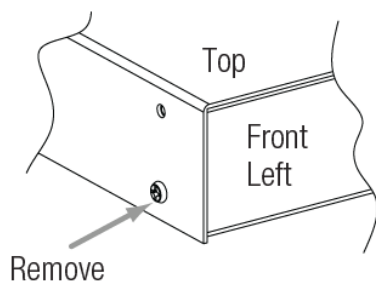


Fig. 6a

Fig. 6b


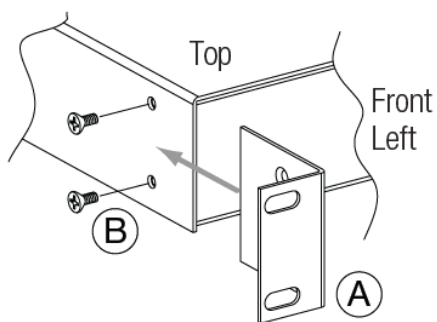


Fig. 6c

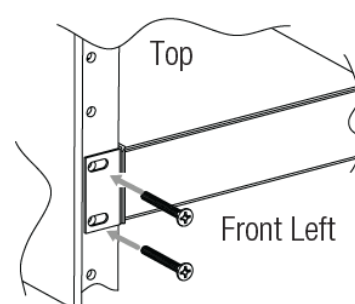

Wall Mount Installation

1. Install mounting brackets (A) on the left and right side of the rack chassis using two (2) flat head screws (B) (included) (Fig. 7a).
2. Place the unit at the desired location and secure it with mounting screws (not included) (Fig. 7b).

Caution: It is necessary to make sure mounting screws are securely fastened to a beam when installing.

Fig. 7


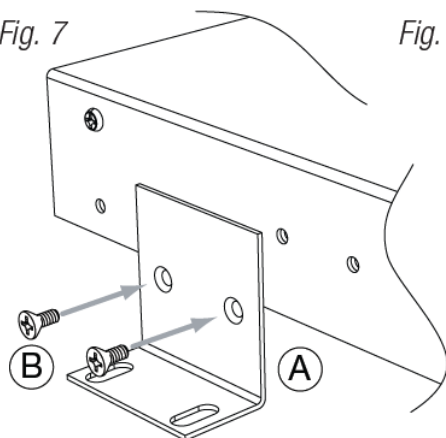


Fig. 7a


Fig. 7b

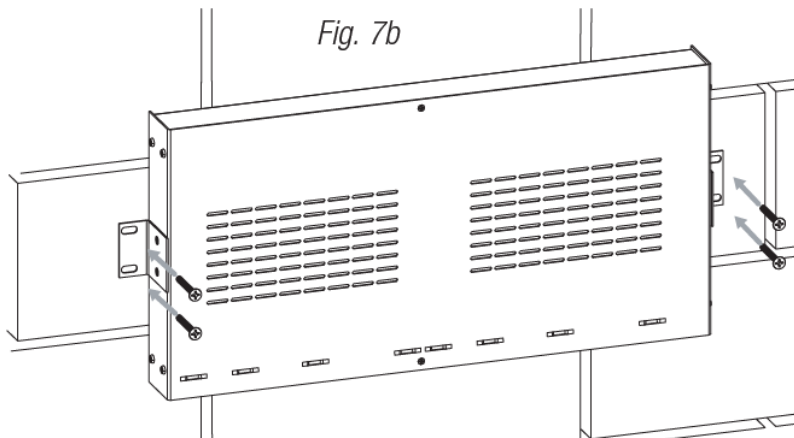


Shelf Installation

1. Position and affix rubber pads (C) (included) at each corner on the bottom of the unit (Fig. 8).
2. Place the unit in the desired location.

Fig. 8

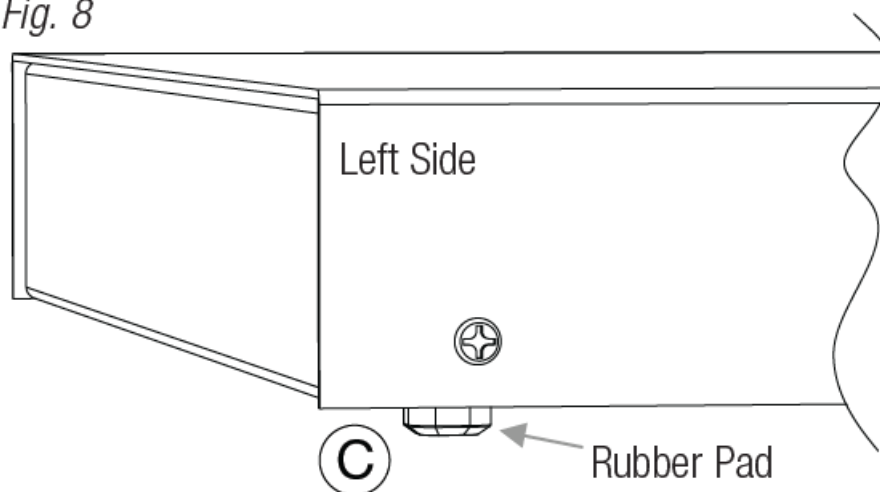

Mounting Hardware (Included)

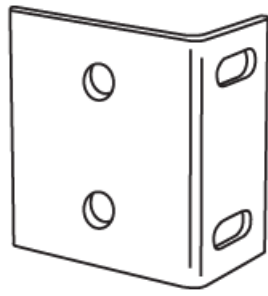

A Two (2) mounting brackets



B Six (6) flat head screws for mounting brackets.





C Four (4) rubber pads.

Altronix is not responsible for any typographical errors.

140 58th Street, Brooklyn, New York 11220 USA | phone: 718-567-8181 | fax: 718-567-9056 website: www.altronix.com | e-mail: info@altronix.com | Lifetime Warranty IIHubWayLD8D/HubWayLD16D K22U.

Documents / Resources

| | |
|--|---|
|  Video • Data • Power HubWayLDD Series Active UTP Transceiver Hubs with Integral Camera Power Models Include: HubWayLD8D 8-port 10/100/1000 Ethernet ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports HubWayLD8D2D 8-port 10/100/1000 Ethernet ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports HubWayLD8D3D 8-port 10/100/1000 Ethernet ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports, 2 RJ45 ports Installation Guide HubWayLDD Series Active UTP Transceiver Hubs with Integral Camera Power, HubWayLDD Series, Active UTP Transceiver Hubs with Integral Camera Power, Active UTP Transceiver Hubs, UTP Transceiver Hubs, Transceiver Hubs, Hubs  | Altronix HubWayLDD Series Active UTP Transceiver Hubs with Integral Camera Power [pdf] Installation Guide HubWayLDD Series Active UTP Transceiver Hubs with Integral Camera Power, HubWayLDD Series, Active UTP Transceiver Hubs with Integral Camera Power, Active UTP Transceiver Hubs, UTP Transceiver Hubs, Transceiver Hubs, Hubs |
|--|---|

References

-  [Altronix Home](#)