

Amazon Basics B07V81CNJN Adjustable Universal Smoothing Bench Hand Plane User Manual

Home » amazon basics » Amazon Basics B07V81CNJN Adjustable Universal Smoothing Bench Hand Plane User Manual ™



No.4 Smoothing Bench Hand Plane - 2-Inch Blade



Contents

- 1 Important Safeguards
- 2 Intended Use
- 3 Before First Use
- **4 Tool Overview**
- 5 Assembly/Disassembly
- 6 Adjustment
- 7 Operation
- 8 Maintenance
- 9 Specifications
- 10 Feedback and Help
- 11 Documents /

Resources

11.1 References

Important Safeguards

Read these instructions carefully and retain them for future use. If this tool is passed to a third party, then these instructions must be included.

When using the tool, basic safety precautions should always be followed to reduce the risk of injury including the following:



Risk of cuts!

Parts of this tool are are extremely sharp. Care must be taken at all times when handling them. To avoid injury the tool should always be held with two hands.

- 1. This tool is not a toy. Children must always be supervised by an adult when using the tool.
- 2. Remain alert and use good judgment when using this tool. Do not use this tool if you are in any way impaired by medications, alcohol, drugs or fatigue.
- 3. Dress appropriately and remove all jewelry, secure loose clothing and tie up long hair before using this tool.
- 4. There is a risk of splintering and dust formation during woodworking. Wear appropriate protective clothing (e.g. work gloves, dust mask, safety glasses, etc.).
- 5. Keep the blade sharp to avoid the plane catching on material which may cause it to move in an unexpected way or cause workpiece damage.
- 6. Always check the workpiece for any metal (nails, screws, staples, etc.) that could damage the cutting edge.
- 7. Make sure that the workpiece is clamped or held securely.
- 8. Do not modify the tool in any way unless instructed by this user manual.

Intended Use

- 1. This tool is intended for woodworking, mainly for creating even and plane surfaces.
- 2. This tool is intended for household use only. It is not intended for commercial use.
- 3. No Liability will be accepted for damages resulting from improper use or non-compliance with these instructions.

Before First Use


⚠ DANGER

Risk of suffocation!

Keep any packaging materials away from children – these materials are a potential source of danger, e.g. suffocation.

- Check the tool for transport damages.
- Remove all the packing materials.
- Make sure the blade (E) is sharp and the sole (L) is flat before use. Sharpen the blade (E) and flatten the sole (L) if necessary (see section "Sharpening the blade" and "Flattening the sole").

Tool Overview

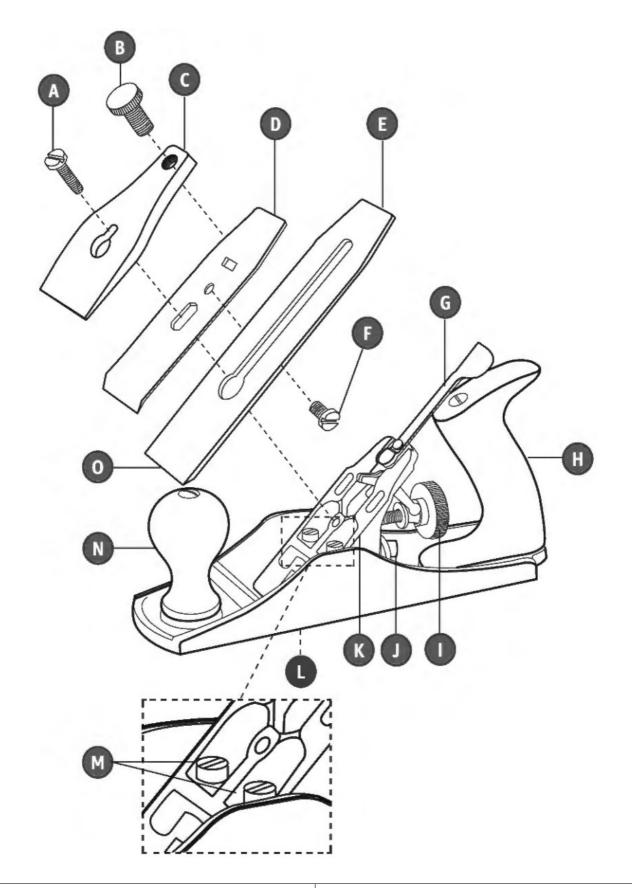

- A. Blade screw
- B. Clamping screw
- C. Lever cap
- D. Chip breaker
- E. Blade
- F. Screw
- G. Lateral adjustment lever

- H. Rear handle
- I. Depth adjustment wheel
- J. Frog adjusting screw
- K. Frog
- L. Sole
- M. Frog fixing nuts
- N.. Front handle
- O. Cutting edge

Assembly/Disassembly

NOTICE

To disassemble the tool, follow the steps below in a reverse order.

- 1. Attach the blade (E) to the chip breaker (D) using the screw (F). The flat surfaces of the blade (E) has to face the chip breaker (D).
- 2. Place the blade (E) with the chip breaker (D) onto the frog (K).
- 3. Place the lever cap (C) on the chip breaker (D).
- 4. Tighten the blade screw (A).
- 5. Tighten the clamping screw (B).

NOTICE

Do not over-tighten the clamping screw (B). It should be tightened enough to secure the blade (E) during use. Turning the depth adjustment wheel (I) should be possible without an excessive force.

Adjustment

6.1 Adjusting the cutting depth NOTICE


- For creating an even workpiece surface, the blade's (E) cutting edge (0) should be parallel to the mouth opening an the sole (L).
- If you want to achieve a side slope you can move one side of the blade (E) out more than the other. in that case the side protruding more from the mouth opening will cut deeper into the workpiece surface.
- 1. Turn the depth adjustment wheel (I) to adjust the depth of cut.
 - Turn the depth adjustment wheel (I) clockwise to move the blade in for increasing the cutting depth.
 - Turn the depth adjustment wheel (I) counter-clockwise to move the blade out for reducing the cutting depth.
- 2. Use the lateral adjustment lever (G) for setting the lateral position of the blade (E).

6.2 Adjusting the cutting angle NOTICE

- For fine cuts, decrease the cutting angle to tighten up the mouth opening on the sole (L).
- For rough cuts, increase the cutting angle to widen the mouth opening on the sole (L).
- 1. Loosen the clamping screw (B) and remove the lever cap (C), blade (E) and the chip breaker (D).
- 2. Slightly loosen the frog fixing nuts (M) to allow the adjustment of the frog's (K) position.
- Turn the frog adjusting screw (J) clockwise for a larger cutting angle, or turn it counter- clockwise for a smaller cutting angle.
- 4. Refit all parts.
- 5. Check if the desired angle is reached. Repeat steps 1 to 4 if necessary.

6.3 Reducing the tear-out

1. Loosen the clamping screw (B) and remove the lever cap (C), blade (E) and the chip breaker (D).

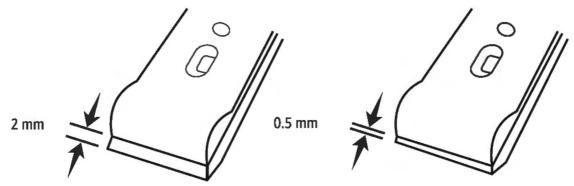


- 2. Slightly loosen the screw (F) to adjust the positions of the blade (E) against the chip breaker (D). For general work, leave 2 mm of the blade (E) protruding from the chip breaker (D); for fine finishing work, reduce the gap to 0.5 mm.
- 3. Tighten the screw (F) and refit all parts.

Operation

For a secure operation always hold the tool with one hand on the front handle (N) and the other hand on the rear handle (H).


7.1 General rules

For best results:

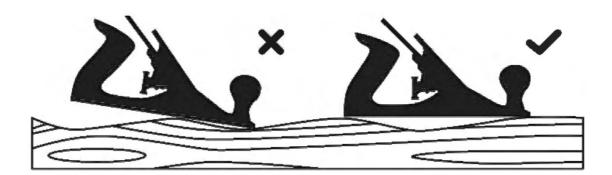

• Move the blade (E) downwards.

7.2 Working techniques

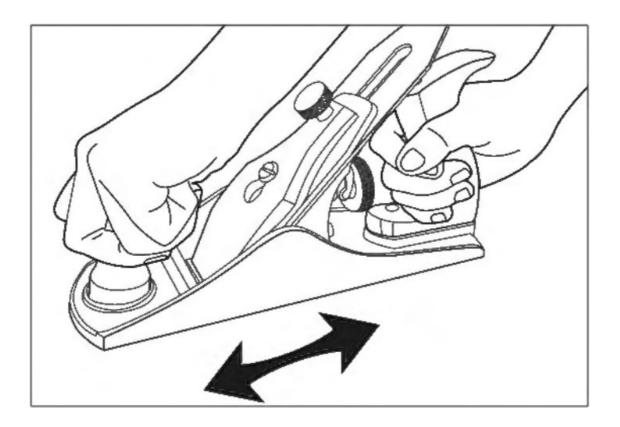

- 1. Hold the tool with both hands. Put the palm of one hand on the top of the front handle (N), and firmly grab the rear handle (H) with the other hand.
- 2. Place the tool with it's sole (L) on the workpiece. Push and pull along the surface of the workpiece with the rear handle (H), while pressing down hard on the front handle (N).

Maintenance

8.1 De-rusting and rust protection

- Use commercially available rust cleaner or citrus cleaner. Wear gloves and follow manufacturer's cleaning instructions.
- Spray the metal components. Let them stand for several minutes then, using steel wool, brass brush or toothbrush, scrub off as much of the rust as you can.
- To prevent the metal parts from rusting, keep them lubricated with a commercially available lubrication solution.


NOTICE

Some lubrication solutions may interact with the wood what may affect the look of the wood. Ask your dealer for an accurate lubrication solution.

8.2 Sharpening the blade

Use quality oil sharpening stones. Lubricate them with an accurate lubrication solution.

1. Remove the blade (E) from the tool.

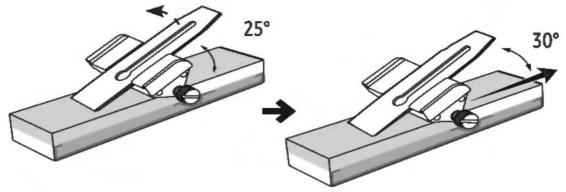

- 2. Place the cutting edge (0) against the sharpening stone at approximately 25° angle.
- 3. Slightly lift the blade (E) to a 30° angle.
- 4. Pull the blade (E) backwards to sharpen the cutting edge (0). Repeat until sharpened.
- 5. Draw the sharpened cutting edge (0) across the corner of a scrap piece of wood to remove burr.
- 6. Reassemble the tool.

8.3 Flattening the sole NOTICE

Make sure all parts are installed and in tension before flattening the sole (L). Otherwise, the blade (E) becomes flex once the parts are reinstalled to the tool.

- 1. Affix a coarse sandpaper to a dead-flat surface, such as a granite or cast iron table.
- 2. Draw lines across the entire sole (L) at regular intervals with a permanent marker.
- 3. Holding the tool with even pressure at the front and back, work the sole over the sandpaper.
- 4. Pause periodically to check and continue until all lines on the sole (L) fade evenly.
- 5. Whenall lines are removed, polish the sole (L) by working it over a fine sandpaper.

8.4 Storage

Store in a cool and dry place away from children and pets, ideally in original packaging.

Specifications

Body Length:	10" (254 mm)
Blade Width:	2" (51.2 mm)
Net weight:	approx. 4.1 lbs (1.852 kg)
Dimensions (W x H x D):	approx. 2.6 x 5.7 x 10" (65 x 145 x 254 mm)

9.1 Importer Information

	For EU
Postal:	Amazon EU S.a r.l., 38 avenue John F. Kennedy, L-1855 Luxembourg
Business Reg.:	134248
	For UK
Postal:	Amazon EU SARI, UK Branch, 1 Principal Place, Worship St, London EC2A 2FA, United Kingdom
Business Reg.:	BR017427

Feedback and Help

We would love to hear your feedback. To ensure we are providing the best customer experience possible, please consider writing a customer review.

Scan QR Code below with your phone camera or QR reader:

US:



https://www.amazon.com/review/review-your-purchases/listing/?ref=327198_UM_CR

UK: amazon.co.uk/review/review-your-purchases#
If you need help with your Amazon Basics product, please use the website or number below.
US: amazon.com/gp/help/customer/contact-us
UK: amazon.co.uk/gp/help/customer/contact-us
1 +1 877-485-0385 (US Phone Number)



Documents / Resources



Amazon Basics B07V81CNJN Adjustable Universal Smoothing Bench Hand Plane [pdf] U ser Manual

B07V81CNJN Adjustable Universal Smoothing Bench Hand Plane, B07V81CNJN, Adjustable Universal Smoothing Bench Hand Plane, Smoothing Bench Hand Plane, Bench Hand Plane, Hand Plane

References

• User Manual

Manuals+,