



ams UG000418 ALS Color and Proximity Sensor User Manual

[Home](#) » [ams](#) » ams UG000418 ALS Color and Proximity Sensor User Manual 



User Guide
UG000418
TCS3701

ALS/Color and Proximity Sensor for Use Behind
OLED Displays Evaluation Kit
TCS3701 EVM

Contents

- [1 Introduction](#)
- [2 Getting Started](#)
- [3 Hardware Description](#)
- [4 Software Description](#)
- [5 Information](#)
- [6 Resources](#)
- [7 Revision Information](#)
- [8 Legal Information](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Introduction

The TCS3701 evaluation kit comes with everything needed to evaluate the TCS3701 . The device features ambient light and color (RGB) sensing in parallel with proximity detection.

1.1 Kit Content

Figure 1 :

Evaluation Kit Contents



| No. | Item | Description |
|-----|-------------------------|--|
| 1 | TCS3701 Daughter Card | PCB with TCS3701 sensor installed |
| 2 | EVM Controller Board | Used to communicate USB to I2C |
| 3 | USB Cable (A to Mini B) | Connects EVM controller to PC |
| 4 | Flash Drive | Includes application installer and documents |

1.2 Ordering Information

| Ordering Code | Description |
|---------------|--|
| TCS3701 EVM | TCSTCS3701 ALS/Color and Proximity Sensor for Use Behind OL ED Displays Evaluation Kit |

Getting Started

The software should be installed prior to connecting any hardware to the computer. Follow the instructions found in the Quick Start Guide (QSG). This loads the required driver for the USB interface and also the device's graphical user interface (GUI).

The balance of this document identifies and describes the controls available on the GUI. In combination with the TCS3701 datasheet, the QSG and application notes available on the ams website, there should be enough information to allow evaluation of the TCS3701 device.


Hardware Description

The hardware consists of the EVM Controller, the TCS3701 EVM daughter card, and a USB interface cable. The EVM controller board provides power and I2C communication to the daughter card through a seven pin connector. When the EVM controller is connected to the PC through USB, a green LED on the board flashes once on power up to indicate the system is getting power.

For schematics, layout and BOM information, please see the documents included with the install located in the TCS3701 EVM folder (All Programs -> ams -> TCS3701 EVM > Documents). "

Figure 2 :

Evaluation Kit Hardware

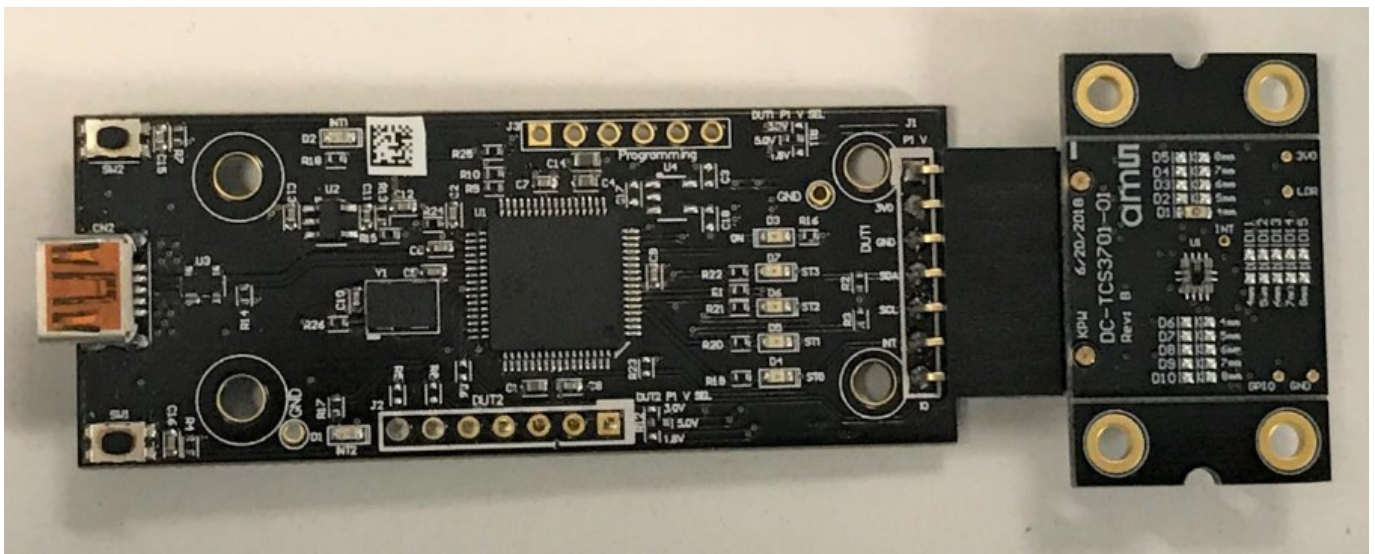


Software Description

The main window (Figure 3) contains the system menus, system level controls, device information and logging status. The ALS tab contains controls for the light sensing function. The Prox tab contains settings for the proximity function. The application polls the ALS and proximity raw data continuously and calculates the Lux, CCT, and prox standard deviation values.

Figure 3 :

Graphical User Interface (GUI) Main Window

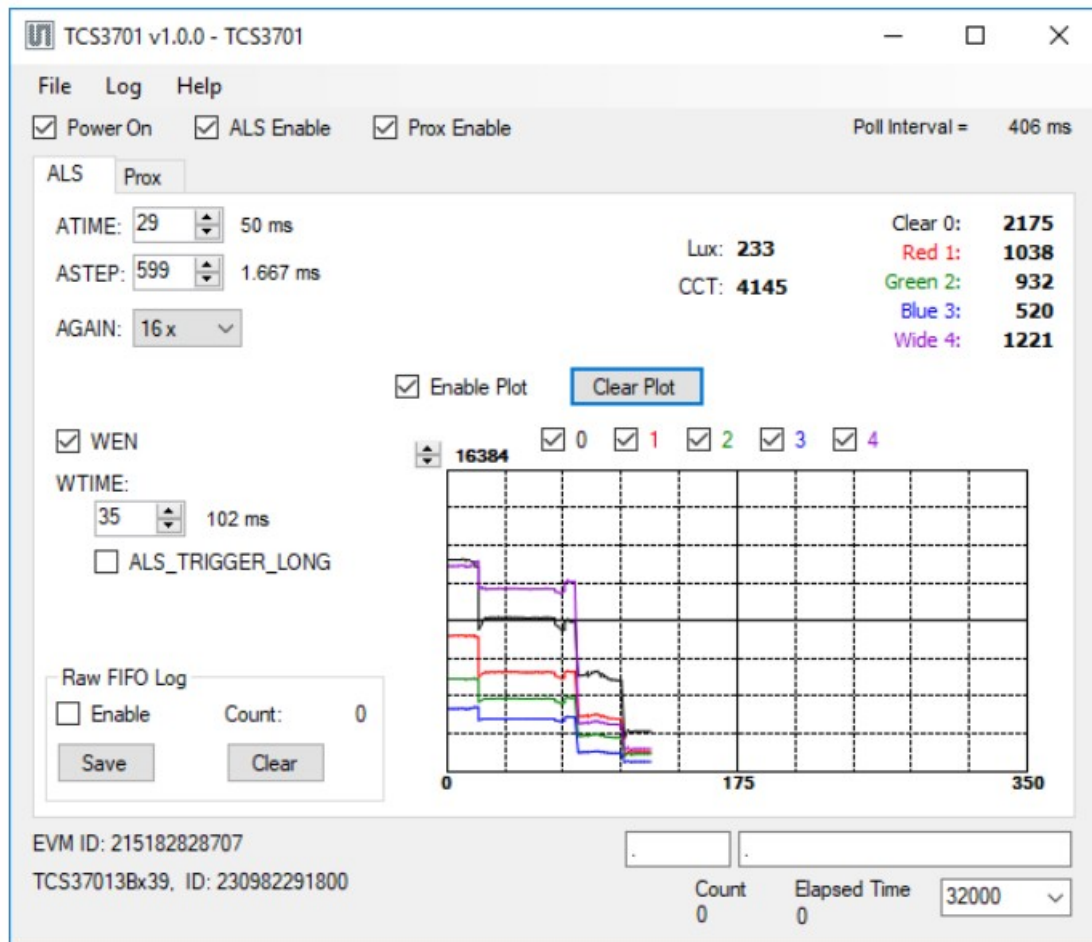

4.1 Connect Software to Hardware

On startup, the software automatically connects to the hardware. On successful initialization, the software displays a main window, containing controls pertinent to the connected device. If the software detects an error, an error window appears. If “Device not found or is unsupported” appears, verify the correct daughterboard is properly connected to the EVM controller board. If “Cannot connect to EVM board” appears, verify the USB cable is connected. When the EVM controller board is connected to the USB, a green LED on the board flashes once on power up to indicate the USB cable is connected and providing power to the system.

If the EVM board is disconnected from the USB bus while the program is running it displays an error message and then terminates. Reconnect the EVM board and restart the program.

4.2 System Menus


At the top of the window there are pull-down menus labeled “File”, “Log”, and “Help”. The File menu provides basic application-level control. The Log menu is used to control the logging function, and the Help menu provides version and copyright information for the application.

4.2.1 File Menu

The File menu contains the following functions:

Figure 4 :

File Menu

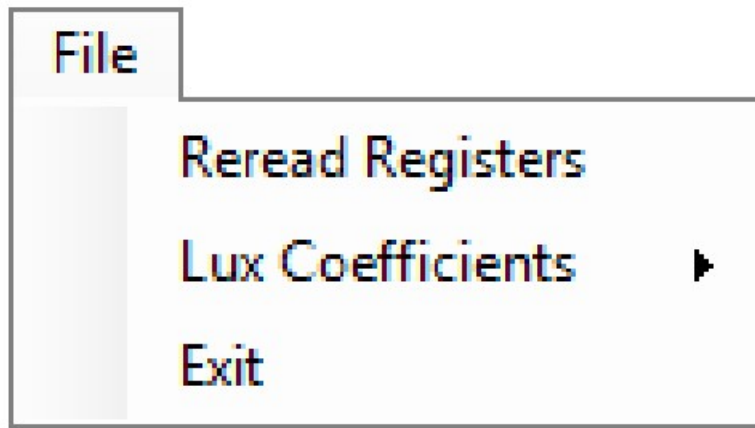

The Reread Registers function forces the program to re-read all of the control registers from the device and display them on the screen. This does not read the output data, because those registers are continually read while the program is running.

The Lux Coefficients menu allows the user to Display, Load or Save the lux coefficients used to calculate lux. See the ALS Lux Coefficients section for more details.


Click on the Exit command to close the main window and terminate the application. Any unsaved log data is cleared from memory. The application can also be close by clicking the red "X" in the upper right hand corner.

4.2.2 Log Menu

The Log menu is used to control the logging function and to save the log data to a file. Log data is accumulated in memory until it is discarded or written to a data file.

Figure 5 :

Log Menu

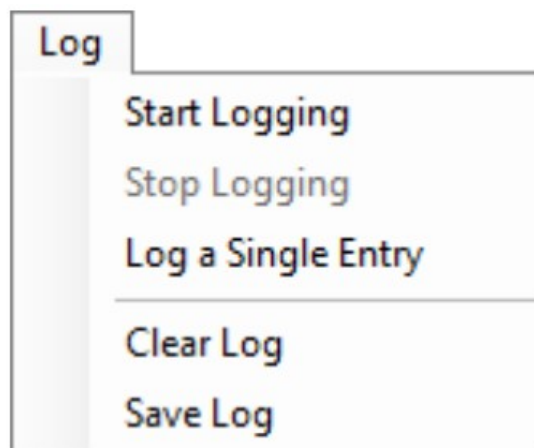

Click Start Logging to start the logging function. Each time the program polls the output information from the device, it creates a new log entry showing the raw data values, the values of various control registers, and the values entered by the user into the text fields near the bottom right corner of the window.

Click Stop Logging to stop the logging function. Once logging is stopped, the data can be written to a file, or the user can continue collecting additional data by clicking Start Logging again.

The Log a Single Entry command causes logging to start, collect one single entry, and immediately stop again. This function is not available when logging is already running.

Click Clear Log to discard any data that has already been collected. If there is data in memory, which has not been saved to disk, this function displays a prompt asking to verify it is OK to discard the data. If the log is running when this function is clicked, the log continues running after the existing data is discarded.

Click Save Log to save the collected log data to a csv file. This stops the logging function, if it is active, and displays a file dialog box to specify where to store the logged data. The default file name is described in the Log Status and Control Information section, but the file name may be changed if desired.

4.2.3 Help Menu

The Help menu contains a single function: About.

Figure 6 :


Help Menu



The About function displays a dialog box (Figure 7) showing the version and copyright information for the application and library. Click the OK button to close this window and continue.

Figure 7 :

About Window

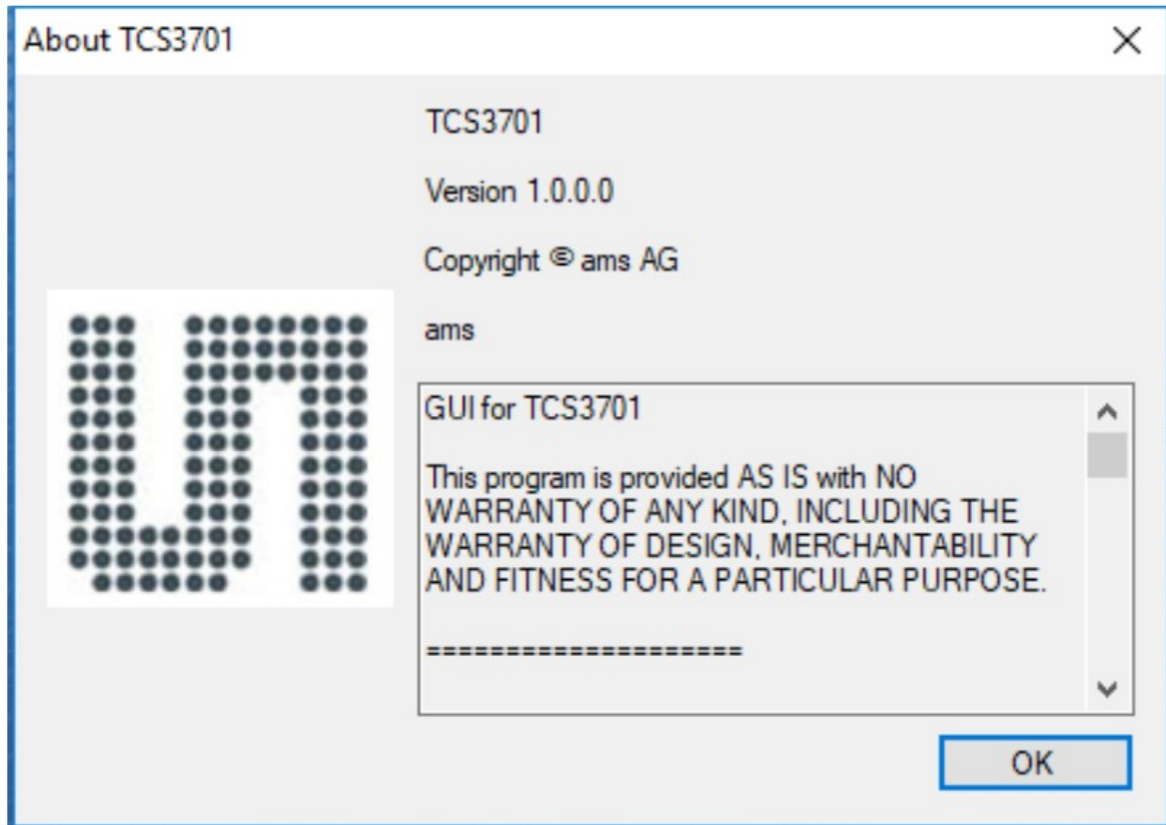

4.3 System Level Controls

Immediately below the top menu bar there are checkboxes used to control the system level functions of the TCS3701 device.

The Power On checkbox controls the PON function of the TCS3701 . When this box is checked, the power is on and the device can operate. When this box is unchecked, the power is off and the device does not operate (The control registers can still be written, but the device does not function).

The ALS Enable checkbox controls the AEN function of the TCS3701. When this box is checked, the device collects and report ALS data as programmed. When this box is unchecked, the ALS functions do not operate.

The Prox Enable checkbox controls the PEN function of the TCS3701. Proximity detection is enabled when this box is checked or disabled when unchecked.

4.4 Automatic Polling

The application automatically polls the TCS3701 raw data of ALS and Prox if enabled. The Poll Interval displays the time between reads of the device.

4.5 Device ID Information

The lower left corner of the window displays the ID number of the EVM Controller board, identifies the device being used and displays the ID of the device.

4.6 Log Status and Control Information

The lower right corner of the window contains status information and controls for the logging function:

Figure 8 :

Logging Status

| | |
|------------|-------------------|
| . | . |
| Count 0 | Elapsed Time 0 |
| 32000 | |

This section contains text boxes that are stored in the log file data and used to build the file name for the log file. If the data in these fields are changed, the new values are stored with any new data logged. The default log file name is based on these values at the time the log file is written. If nothing is entered in these boxes they default to a period (“.”).

Sample default file name:

TCS3707_1-2-3_Log_HH_MM_SS.csv

From Application

From User Input

The Count value displayed is a count of the number of samples currently in the log buffer.


The Elapsed Time value indicates the elapsed time since data logging was started.

4.7 “ALS” Tab

The main portion of the screen contains a tab labeled ALS. The controls in this tab are divided into 3 sections, each performing a separate function.

Figure 9 :

ALS Tab

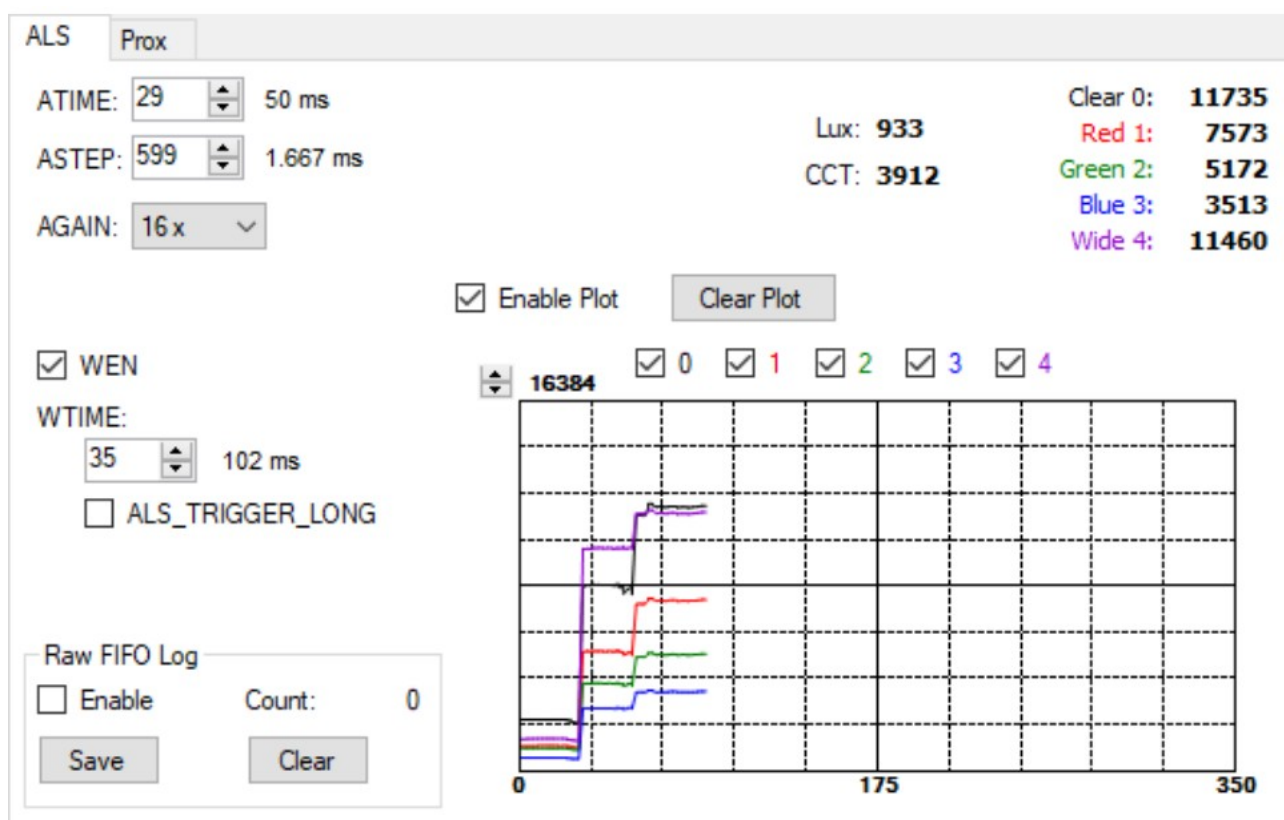

4.7.1 ALS Controls

The left side of the ALS tab contains controls to set various ALS settings.

The ATIME control sets the steps of the ALS/color integration from 1 to 256.

The ASTEP control sets the integration time per step in increments of 2.78μs.

The AGAIN control is a pulldown menu which sets the analog gain of the ALS sensor. The values available are 0.5x, 1x, 2x, 4x, 8x, 16x, 32x, 64x, 128x, 256x, 512x, and 1024x.

The WEN checkbox controls the ALS Wait feature. When this box is checked, the values for WTIME and ALS_TRIGGER_LONG are used to determine the time between ALS cycles. When this box is unchecked, there is no wait period between ALS cycles and the values of WTIME and ALS_TRIGGER_LONG are ignored.

The WTIME control sets the time to wait between ALS cycles. WTIME can be adjusted in 2.778ms steps.

The ALS_TRIGGER_LONG checkbox control sets the WTIME factor. When this box is checked, the wait time between ALS cycles is multiplied by a factor of 16.

The lower left corner of the ALS Tab contains a box titled Raw FIFO Log. Because of the operating speed of the PC and polling rate of the GUI program, the GUI does not display every sample, since the actual TCS3701 is operating faster than the GUI can display and log the data. This is not normally an issue, since the operating environment is not rapidly changing. The Raw FIFO Log is a special function that is designed to capture all of the ALS Data for Channels 0 and 1, without skipping any data.

When this function is enabled, the TCS3701 will store channel 0 and 1 data into its internal FIFO.

When the GUI performs its normal data polling it will also extract all of the data in the FIFO and store it in memory. You may then store this data to a special log file.

The Raw FIFO Log controls function as follows:

The Enable checkbox will activate the FIFO and collect the data into memory while polling.

The Count field displays the number of channel 0/1 pairs that have been collected in memory.

The Save button will store the accumulated data from memory into a user-specified file. The data in the log file is identified with a time stamp showing when the data was read from the FIFO and a zerobased sequential index number for each time stamp (since

there may be several data samples each time the FIFO is emptied.

The FIFO can hold up to 64 channel 0/1 data pairs. If the index numbers for any time stamp increment all the way to 63, then there has likely been FIFO overload which means that data has been lost. This situation should only occur when the ATIME/ASTEP settings are very so small that the TCS3701 is producing several data values per millisecond.

4.7.2 ALS Lux Coefficients

The TCS3701 supplies information that is used to calculate Lux (unit of illumination). The Lux equation for the TCS3701 uses a combination of data from the sensor and various coefficients to calculate the Lux value. The software is pre-configured with coefficients for an open-air configuration. When the sensor is placed behind glass, different coefficients should be loaded into the software to update the Lux equation. The coefficients can be loaded or saved to an XML file using the File menu. To ensure the proper XML format first save the current coefficients using File > Lux Coefficients > Save. Once the file is saved locate the XML file created and edit with a text editor such as notepad to change the coefficients. Then go to File > Lux Coefficients > Load and select the XML file that was updated.

The software can also automatically load new coefficients upon starting the GUI. To do this save the XML file as TCS3701_luxe.xml in the system documents directory (%USERPROFILE%\Documents, also known as My Documents). When GUI is started, you will see a dialog appear with the new coefficients displayed.

If you are experiencing trouble loading new coefficients, this may indicate a problem with the file format. The XML file must contain all the required Lux equation elements to be loaded. The format of the file follows the standard XML format and is as follows:

```
<?xml version="1.0" encoding="utf-8"?>
<!-- Device:TCS3701 Saved:1/9/2019 2:10:00 PM -->
<luxeq>
<eq_values>
<coef name="DGF" value="801.65" />
<coef name="C_Coef" value="0.081" />
<coef name="R_Coef" value="-0.099" />
<coef name="G_Coef" value="0.309" />
<coef name="B_Coef" value="-0.247" />
<coef name="CT_Coef" value="5089" />
<coef name="CT_Offset" value="1635" />
</eq_values>
</luxeq>
```

4.7.3 ALS Output Data

The top right corner of the ALS tab displays the output data. This data is continuously polled. The polling interval is shown above the tab.

- Clear 0 displays the Clear Channel data count.
- Red 1 displays the Red Channel data count.
- Green 2 displays the Green Channel data count or the IR Channel counts if IR Mux is checked.
- Blue 3 displays the Blue Channel data count.
- Wide 4 displays the Wideband Channel data count.


- Lux displays the calculated lux.
- CCT displays the calculated correlated color temperature.

4.7.4 ALS Data Plot

The remaining portion of the ALS tab is used to display a running plot of the collected ALS values and calculated Lux. The last 350 values are collected and plotted on the graph. As additional values are added, the old values will be deleted from the left side of the graph. To start the plotting function, check the Enable Plot checkbox and select any of the 0, 1, 2, 3 or 4 checkboxes.

Figure 10 :

ALS Data Plot

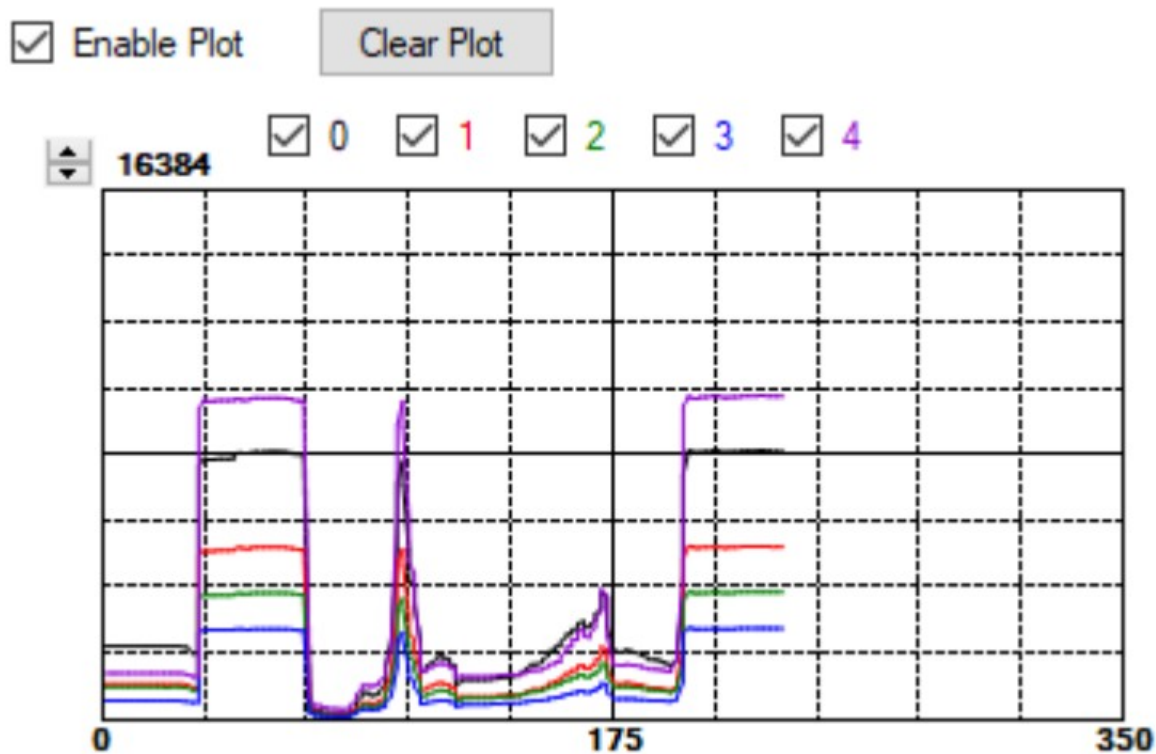

The scale of the Y-axis of the plot can be adjusted by clicking on the small up and down arrows at the top left corner of the plot. The scale can be set to any power of 2 from 64 through 65536.


Click the Clear Plot button to discard the current data and continue plotting the new data. Note if the Clear Plot button is clicked while the plot is disabled, the data is discarded, but the actual plot will not be updated until the plot function is re-enabled.

4.8 "Prox" Tab

The main portion of the screen contains a tab labeled Prox. The controls on this tab control the operation of the Proximity function of the TCS3701.

Figure 11 :

Prox Tab

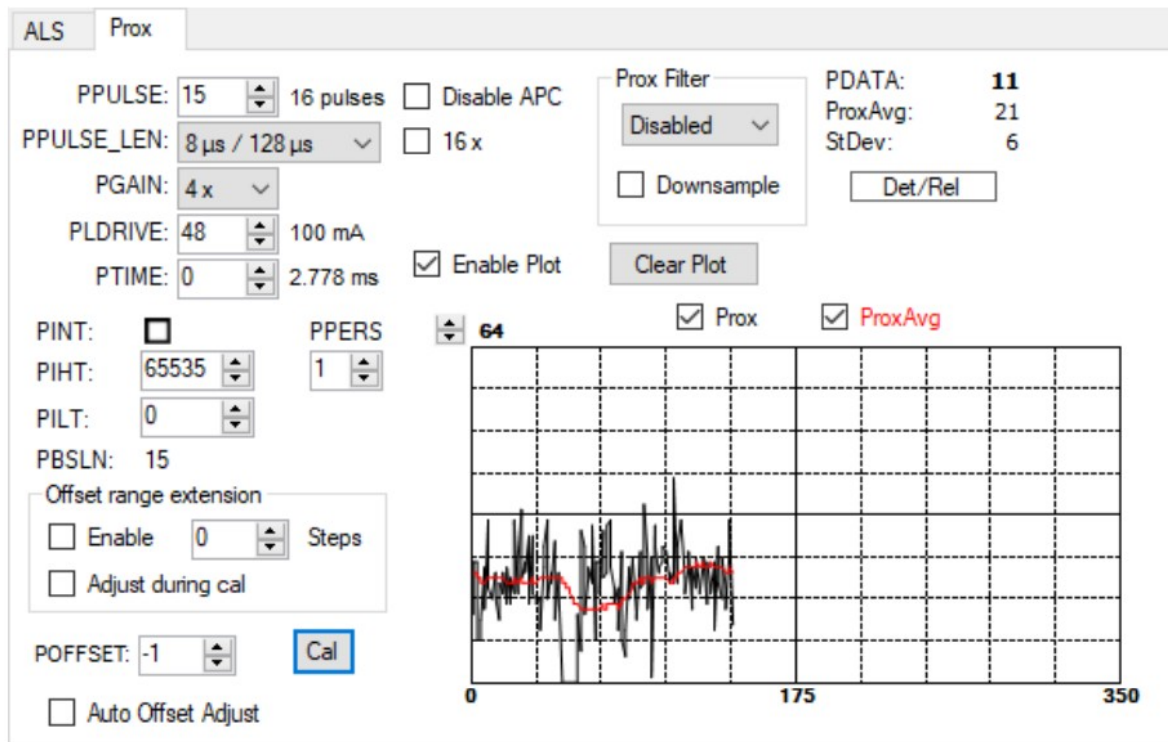

4.8.1 Prox Controls

The left side of the Prox tab contains controls to set various Prox settings.

The PPULSE controls the number of pulses used for each prox cycle. The number of pulses is the PPULSE value plus 1 and is displayed immediately to the right of the box.

The PPULSE_LEN control sets the width of all IR LED pulses within the proximity cycle. Longer pulses result in increased proximity range and typically result in less electrical noise generated in the analog front end. This drop-down box works in conjunction with the 16x checkbox to select the actual pulse length that is used. The values that can be chosen are 4 μs / 64 μs, 8 μs / 128 μs, 16 μs / 256 μs and 32 μs / 512 μs.

When the 16 x box is checked, the longer pulse length values will be used. When the box is not checked, the system will use the shorter pulse lengths.

The PGAIN control is a pulldown menu that lets you select the analog gain of the proximity IR sensor.

The values that can be chosen are 1x, 2x, 4x and 8x.

The PLDRIVE control sets the drive strength of the IR LED current. The values range 4mA to 258mA.

The PTIME control sets proximity sample time to $(n + 1) \times 2.778$ ms, where n is the PTIME value.

The PINT control displays if an interrupt is generated. Clicking on this control will clear the interrupt. If the interrupt condition still exists, it will occur again on the next cycle.

The PIHT control sets proximity interrupt high threshold value.

The PIHL control sets proximity interrupt low threshold value.

The PPERS control sets proximity interrupt persistence value. It defines a filter for the number of consecutive occurrences that PDATA must remain outside the threshold range before a PINT interrupt is generated. The frequency of generated interrupts is as follows:

The PBSLN control displays a proximity baseline, the minimum PDATA since last calibration.

Figure 12:

PPERS Interrupt Generation

| Value | Interrupt generated when... |
|--------|--|
| 0 | Every proximity cycle |
| 1 | Any proximity value outside of threshold range |
| 2 | 2 consecutive proximity values out of range |
| 3 | 3 consecutive proximity values out of range |
| ... 15 | ... |
| | 15 consecutive proximity values out of range |

Information

The Offset Range Extension feature of the TCS3701 is known to cause the PDATA values to drift over time. Use of this feature IS NOT recommended.

The Enable control in the Offset range extension group box enables the coarse offset range when checked.

The Steps control in the Offset range extension group box sets the offset range if the Adjust control and Enable control is not set. It read out the offset range here which is set automatically when the Adjust control and Enable control are checked.

The Adjust during cal control in the Offset range extension group box enables the coarse offset range calibrated automatically if checked.

The POFFSET control shifts PDATA to remove crosstalk from the proximity data. The values range from -255 to 255.

The Cal button triggers the sensor's proximity offset calibration sequence. This function automatically selects a POFFSET to remove crosstalk from PDATA.

The Auto Offset Adjust control, when checked, will decrease the proximity offset register when proximity ADC measurement is zero. When this box is checked, manual changing of the POFFSET control is disabled and The POFFSET value is read from the device on each update cycle.

The Disable APC control disables the automatic pulse control (APC) function. When this function is active, the range of the PDATA value is 0-1023.


The Dropdown control in the Prox Filter group box enables and disables the Proximity Filter. This causes a running average of 1 (Disabled), 2, 4, or 8 samples to be reported in the PDATA register. When the Downsample control in Prox Filter group box is checked, proximity results are checked for interrupts and persistence, and the PDATA register is updated only every Nth time, based on the setting of the dropdown.

4.8.2 Prox Data Plot

The remaining portion of the Prox tab is used to display a running plot of the collected PDATA values and/or the calculated average of the most recent 32 PDATA values. The last 350 values are collected and plotted on the graph. As additional values are added, the old values will be deleted from the left side of the graph. To start the plotting function, check the Enable Plot checkbox.

Figure 13 :

Prox Plot Data

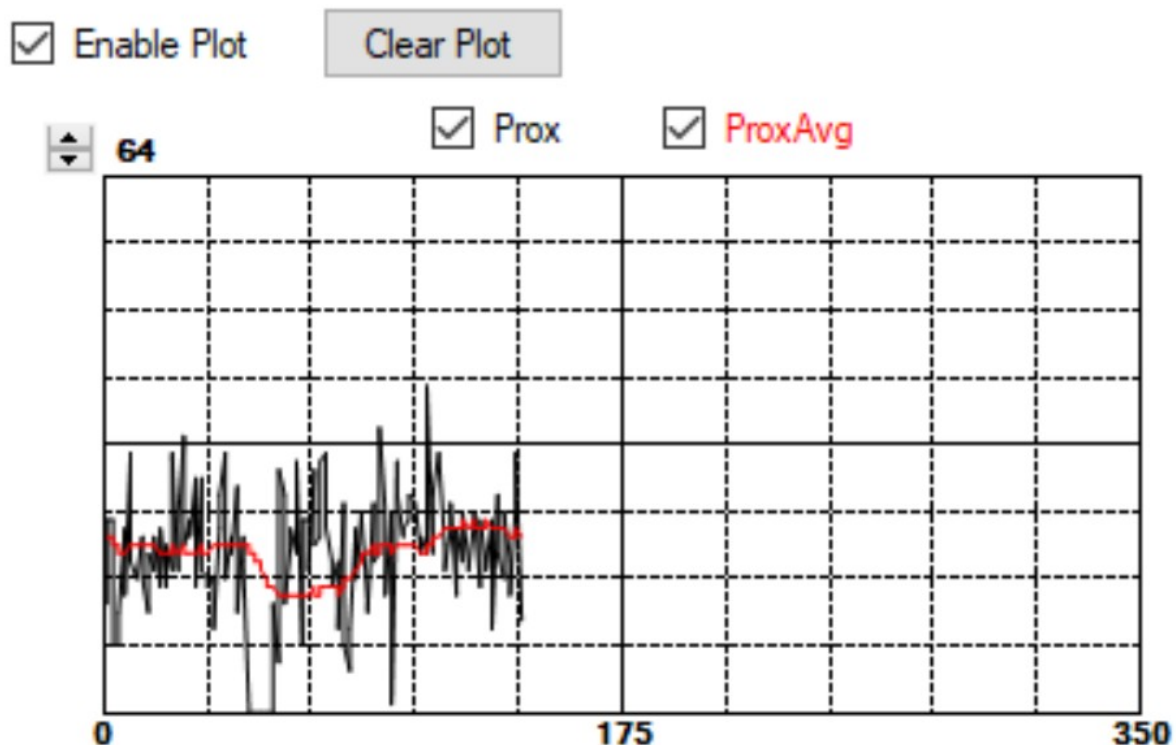

Check the Prox or ProxAvg boxes to select the value(s) to be displayed.

The scale of the Y-axis of the plot can be adjusted by clicking on the small up and down arrows at the top left corner of the plot. The scale can be set to any power of 2 from 16 to 16384.

Click the Clear Plot button to discard the current data and continue plotting the new data. Note if the Clear Plot button is clicked while the plot is disabled, the data is discarded, but the actual plot will not be updated until the

plot function is re-enabled.

Resources

For additional information regarding the TCS3701, please refer to the datasheet. For information regarding the installation of the TCS3701 EVM host application software please refer to the TCS3701 EVM Quick Start Guide.

Designer's Notebooks dealing with various aspects of optical measurement and optical measurement applications are available.

Additional Resources:

- TCS3701 Datasheet
- TCS3701 EVM Quick Start Guide (QSG)
- TCS3701 EVM User's Guide (this document)
- TCS3701 EVM Schematic Layout
- TCS3701 Optical Design Guide
- TCS3701 Proximity Design Guide

Revision Information

| Changes from previous version to current revision v1-00 | Page |
|---|------|
| Initial Release | All |

- Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.
- Correction of typographical errors is not explicitly mentioned.

Legal Information

Copyrights & Disclaimer

Copyright ams AG, Tobelbader Strasse 30, 8141 Premstaetten, Austria-Europe. Trademarks Registered. All rights reserved.

The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Demo Kits, Evaluation Kits and Reference Designs are provided to recipient on an "as is" basis for demonstration and evaluation purposes only and are not considered to be finished end-products intended and fit for general consumer use, commercial applications and applications with special requirements such as but not limited to medical equipment or automotive applications. Demo Kits, Evaluation Kits and Reference Designs have not been tested for compliance with electromagnetic compatibility (EMC) standards and directives, unless otherwise specified. Demo Kits, Evaluation Kits and Reference Designs shall be used by qualified personnel only.

ams AG reserves the right to change functionality and price of Demo Kits, Evaluation Kits and Reference Designs at any time and without notice.

Any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed. Any claims and demands and any direct, indirect, incidental, special, exemplary or consequential damages arising from the inadequacy of the provided Demo Kits, Evaluation Kits and Reference Designs or incurred losses of any kind (e.g. loss of use, data or profits or business interruption however caused) as a consequence of their use are excluded.

ams AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the

technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams AG rendering of technical or other services.

RoHS Compliant & ams Green Statement

RoHS Compliant: The term RoHS compliant means that ams AG products fully comply with current RoHS directives. Our semiconductor products do not contain any chemicals for all 6 substance categories, including the requirement that lead not exceed 0.1% by weight in homogeneous materials. Where designed to be soldered at high temperatures, RoHS compliant products are suitable for use in specified lead-free processes.

ams Green (RoHS compliant and no Sb/Br): ams Green defines that in addition to RoHS compliance, our products are free of Bromine (Br) and Antimony (Sb) based flame retardants (Br or Sb do not exceed 0.1% by weight in homogeneous material). **Important Information:** The information provided in this statement represents ams AG knowledge and belief as of the date that it is provided. ams AG bases its knowledge and belief on information provided by third parties, and makes no representation or warranty as to the accuracy of such information. Efforts are underway to better integrate information from third parties. ams AG has taken and continues to take reasonable steps to provide representative and accurate information but may not have conducted destructive testing or chemical analysis on incoming materials and chemicals. ams AG and ams AG suppliers consider certain information to be proprietary, and thus CAS numbers and other limited information may not be available for release.



Headquarters

ams AG

Tobelbader Strasse 30

8141 Premstaetten

Austria, Europe

Tel: +43 (0) 3136 500 0

Please visit our website at www.ams.com

Buy our products or get free samples online at www.ams.com/Products

Technical Support is available at www.ams.com/Technical-Support

Provide feedback about this document at www.ams.com/Document-Feedback

For sales offices, distributors and representatives go to www.ams.com/Contact

For further information and requests, e-mail us at ams_sales@ams.com

Demo Kit Manual • PUBLIC







UG000418 • v1-00 • 2019-Jan-11

Documents / Resources

| | |
|--|--|
| The icon shows a document with the ams logo and the text 'User Guide'. | ams UG000418 ALS Color and Proximity Sensor [pdf] User Manual UG000418 ALS Color and Proximity Sensor, UG000418, ALS Color and Proximity Sensor, Proximity Sensor, Sensor |
|--|--|

References

- [Sensor Solutions | ams](#)
- [Contact us | ams OSRAM](#)
- [Login | ams](#)
- [Products | ams](#)
- [Login | ams](#)

-  [Sensor Solutions | ams](#)
-  [Contact us | ams OSRAM](#)
-  [Login | ams](#)
-  [Products | ams](#)
-  [Login | ams](#)
-  [Search - Manual-Hub.com](#)

Manuals+.