



## aparian A-DNTR-B DeviceNet Router User Guide

[Home](#) » [aparian](#) » [aparian A-DNTR-B DeviceNet Router User Guide](#) 



### Contents

- [1 A-DNTR-B DeviceNet Router](#)
- [2 INTRODUCTION](#)
- [3 REQUIRED SOFTWARE](#)
- [4 MODULE INSTALLATION](#)
- [5 DEVICENET TERMINATION](#)
- [6 ADDITIONAL INFORMATION](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)


### A-DNTR-B DeviceNet Router

**NOTE:** Before installing, configuring, operating, or maintaining Aparian products, please review this information and the information located on [www.aparian.com](http://www.aparian.com) for the latest software, documentation, and installation files specific to your Aparian product.

### INTRODUCTION

This quick start guide provides an basic overview of the installation, operation, and diagnostics of the Aparian DeviceNet Router Series B module. The DeviceNet Router/B provides intelligent data routing between either EtherNet/IP or Modbus TCP/RTU and a DeviceNet network. This allows the user to integrate DeviceNet devices into a Rockwell Logix platform (e.g., ControlLogix or CompactLogix) or any Modbus Client or Server device with minimal effort. The module can be configured to be either a DeviceNet Scanner or a DeviceNet Device allowing

the user to not only integrate DeviceNet devices into a Logix or Modbus system, but to also allow the user to use EtherNet/IP or Modbus devices in an existing DeviceNet network (by using the DeviceNet Router/B in device mode).

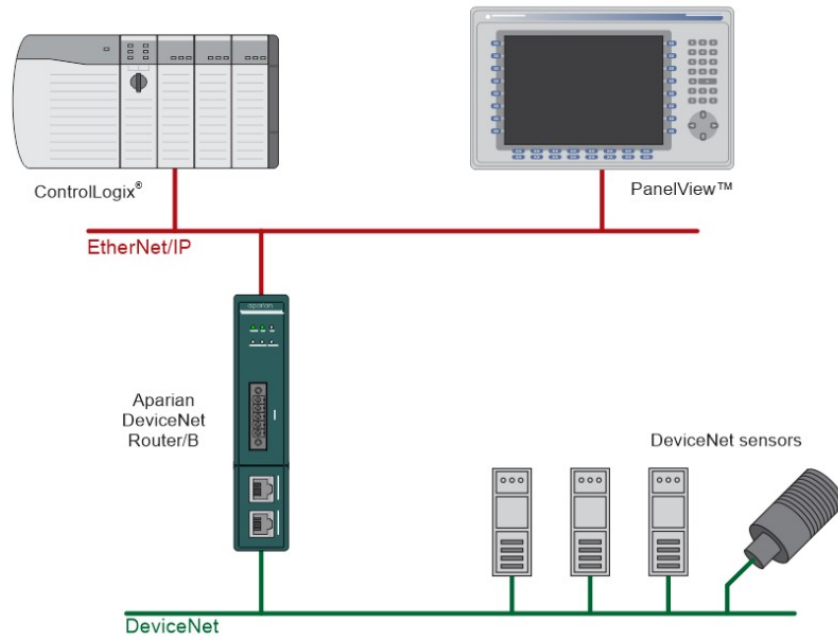


## REQUIRED SOFTWARE

The DeviceNet Router/B requires Aparian Slate software to setup and configure. The software installation can be found at [www.aparian.com/software/slate](http://www.aparian.com/software/slate).

## MODULE INSTALLATION

The module has two Ethernet ports located at the lower front of the module. There are also two ports at the bottom of the module for RS232/RS485 serial and power. The power port uses a three-way connector which is used for the DC power supply positive and negative (or ground) voltage as well as the earth connection. The at the front of the module there is a 5-way connector which is used for the DeviceNet network and can also be used for power. Both bottom and front power connectors can be plugged in at the same time.

The nine-way connector is used to connect the RS232 and RS485 conductors for serial communication. The shield terminal can be used for shielded cable in high noise environments.

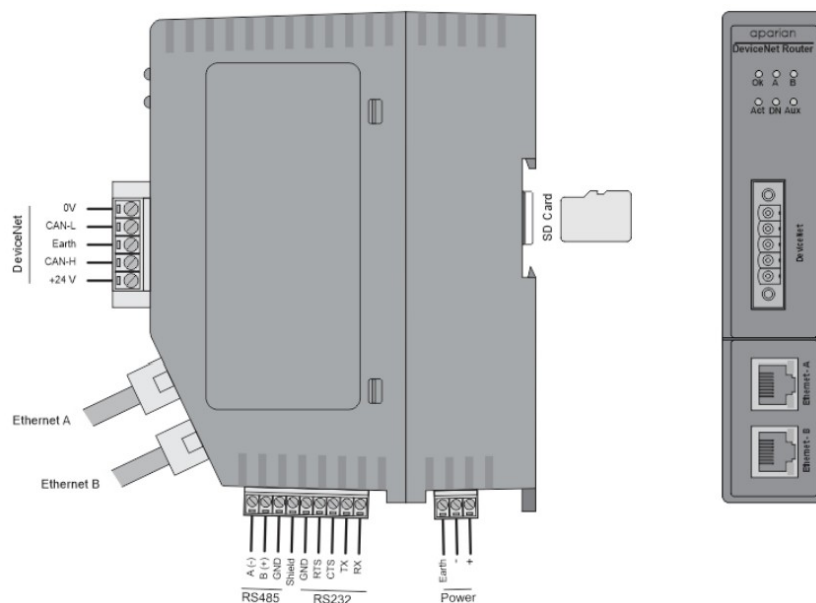

LED	Description
Ok	The module LED will provide information regarding the system-level operation of the module.
A / B	The Ethernet LED will light up when an Ethernet link has been detected (by plugging in a connected Ethernet cable). The LED will flash every time traffic was detected. This module has two Ethernet ports A and B. Each LEDs represents each specific port.
Act	The Act LED indicates if the module is operating as a DeviceNet target or DeviceNet Scanner. Solid Green – The local DeviceNet Router/B is operating as a DeviceNet Scanner. Off – The local DeviceNet Router/B is operating as a DeviceNet Target.
DN	The DeviceNet LED indicates the activity on the DeviceNet network. Flashing Red – A corrupted or incorrect DeviceNet packet was received. Flashing Green – A valid DeviceNet packet was received. Off – No DeviceNet packets are being received.
Aux	The Aux LED will flash each time there was activity on any of the primary interfaces. Flashing Red – A corrupted or incorrect packet was received on one of the Primary Interfaces ( EtherNet/IP, Modbus TCP/RTU232/RTU485). Flashing Green – A valid packet was received on one of the Primary Interfaces (EtherNet/IP, Modbus TCP/RTU232/RTU485). Off – No activity.

## DEVICENET TERMINATION

All DeviceNet networks need to be terminated at the extremities (start and end point) of the communication conductor. The termination for the DeviceNet network can be enabled/disabled via the module configuration. Enabling the termination will connect an internal 120 Ohm resistor across the positive (+) and negative (-) conductors of the DeviceNet network.

## ELECTRICAL AND ENVIRONMENTAL

Specification	Rating
Power requirements	Input: 10 – 32V DC,
Power consumption	2.2 W (Max.) Current: 180 mA @ 10 V Current: 85 mA @ 24 V
Temperature	-20 – 70 °C

## STUDIO 5000 CONFIGURATION

The module must be added to the Logix IO tree using a EDS AOP (Logix v21+).

## NORTH AMERICAN HAZARDOUS LOCATION APPROVAL

SUITABLE FOR USE IN CLASS I, DIVISION 2, GROUPS A, B, C AND D HAZARDOUS LOCATIONS, OR NONHAZARDOUS LOCATIONS ONLY.

**WARNING** – EXPLOSION HAZARD – DO NOT DISCONNECT EQUIPMENT WHILE THE CIRCUIT IS LIVE OR UNLESS THE AREA IS KNOWN TO BE FREE OF IGNITABLE CONCENTRATIONS.

**WARNING** – EXPLOSION HAZARD – SUBSTITUTION OF ANY COMPONENT MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2.

For professional users in the European Union



If you wish to discard electrical and electronic equipment (EEE), please contact your dealer or supplier for further information.



**WARNING** – Cancer and reproductive harm – [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov)

## ADDITIONAL INFORMATION

The following resources contain additional information that can assist the user with the module installation and operation.

Resource	Link
Slate Installation	<a href="http://www.aparian.com/software/slate">www.aparian.com/software/slate</a>
DeviceNet Router/B User Manual DeviceNet Router/B Datasheet	<a href="https://www.aparian.com/dnrb">https://www.aparian.com/dnrb</a>
Ethernet wiring standard	<a href="http://www.cisco.com/c/en/us/td/docs/video/cds/cde/cde205_220_420/installation/guide/cde205_220_420_hig/Connectors.html">www.cisco.com/c/en/us/td/docs/video/cds/cde/cde205_220_420/installation/guide/cde205_220_420_hig/Connectors.html</a>
DeviceNet	<a href="http://www.odva.org">http://www.odva.org</a>
Slate Installation	<a href="http://www.aparian.com/software/slate">www.aparian.com/software/slate</a>

## SUPPORT

Technical support will be provided via the Web (in the form of user manuals, FAQ, datasheets etc.) to assist with installation, operation, and diagnostics.

For additional support the user can use either of the following:


Contact Us web link	<a href="https://www.prosoft-technology.com/ServicesSupport/Customer-Support">https://www.prosoft-technology.com/ServicesSupport/Customer-Support</a>
Support email	<a href="mailto:support@prosoft-technology.com">support@prosoft-technology.com</a>



Document No. D154-011

Revision 1.1

01/2023

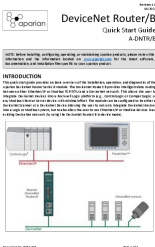	<a href="#">Aparian A-DNTR-B DeviceNet Router [pdf] User Guide</a> A-DNTR-B DeviceNet Router, A-DNTR-B, DeviceNet Router, Router
--	---

## References

- [technology.com](#)
- [Home](#)
- [ODVA | Industrial Automation | Technologies and Standards](#)
- [ODVA | Industrial Automation | Technologies and Standards](#)
- [p65warnings.ca.gov](#)
- [Regional Technical Support / Services & Support / Homepage - ProSoft Technology, Inc.](#)
- [User Manual](#)

### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.