



Applied Motion Products TSM23C Integrated Step Servo Motor User Guide

[Home](#) » [Applied Motion Products](#) » Applied Motion Products TSM23C Integrated Step Servo Motor User Guide



Contents

- [1 Applied Motion Products TSM23C Integrated Step Servo Motor](#)
- [2 Quick Set-Up Guide](#)
- [3 Requirements](#)
- [4 Connect the Power Supply](#)
- [5 Configure the Drive](#)
- [6 I/O](#)
- [7 Safety Instructions](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



Applied Motion Products TSM23C Integrated Step Servo Motor



Quick Set-Up Guide

Integrated Step Servo Motor

Requirements

You will need these items to set-up TSM23C:

- a 12 – 70 volt DC power supply
- a small flat blade screwdriver for tightening the connectors (included)
- a PC running Microsoft Windows XP, Vista, or Windows: 7/8/10/11
- Software: Step-Servo Quick Tuner
- The included RS-232 programming cable

Connect the Power Supply

- Connect the power supply “+” terminal to the drive “+” terminal & the power supply “-” terminal to the drive “-” terminal using 16 to 20-gauge wire.
- Be careful not to reverse the wires. Reversing the connection may open the internal fuse and void the warranty.
- If a regulated power supply is being used, there may be a problem with regeneration that can be solved with the use of an Applied Motion Products RC880 Regeneration Clamp. Please see the Applied Motion Products website or the TSM23C Hardware Manual for more information.


Configure the Drive

- Load the Step-Servo Quick Tuner software

- Connect the drive to PC using the programming cable
- Open the software: Step-Servo Quick Tuner
- Apply power to the drive
- Set the Node ID-Each node on a CANopen network must have a unique Node ID. The Node ID is configured using a sixteen position switch SW2 to set the lower 4 bits of the Node ID while the upper 3 bits are configured by using Step-Servo Quick tuner. Follow the steps on the Step-Servo Quick tuner to set up the motor.
- Set the Bit Rate-The CANopen Network bit rate is configured with the BCD switch SW1 on the front of the drive. The bit rate must be same for all nodes on the CANopen network.

I/O


- 8 optically isolated digital inputs, 5 to 24 Volts
- 1 analog input, 0 to 5 Volts
- 4 optically isolated digital outputs
- Please see Applied Motion Products website or the TSM23C Hardware Manual for more information.

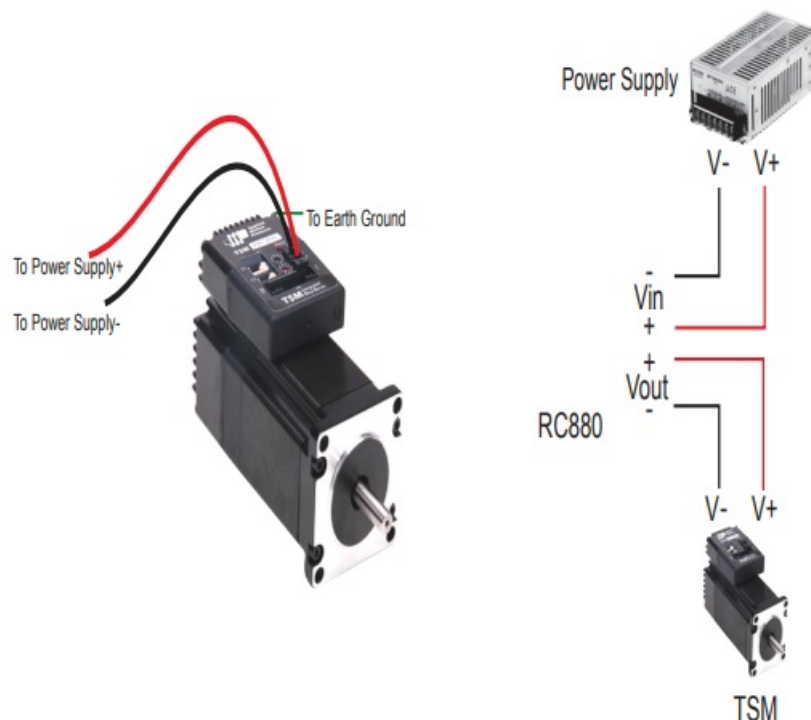

Safety Instructions

- DO NOT apply power until all connections to the drive have been made.
- Only qualified personnel should assemble, install, operate, or maintain this equipment.
- Read all available documentation before assembly and operation.
- It is vital to ensure that all system components are connected to earth ground.
- This product contains electrostatically sensitive components that can be damaged by incorrect handling.

Documents / Resources

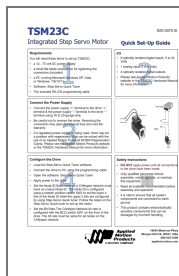

Applied Motion Products TSM23C Integrated Step Servo Motor [pdf] User Guide
TSM23C Integrated Step Servo Motor, TSM23C, TSM23C Step Servo Motor, Integrated Step S
ervo Motor, Step Servo Motor, Step Motor, Servo Motor, Motor, 920-0075 B

References

- Applied Motion

Manuals+,