

## Clarity 600

# Clarity 600 Wake Assure Alarm Clock with Bed Shaker

Model: 600 | Brand: Clarity

## INTRODUCTION

The Clarity 600 Wake Assure Alarm Clock is designed to provide a reliable and effective wake-up experience, especially for deep sleepers or individuals with hearing difficulties. It combines a super loud audible alarm with a powerful vibrating bed shaker and a visual alarm indicator to ensure you wake up on time. This manual provides detailed instructions for setting up, operating, and maintaining your alarm clock.

## PRODUCT OVERVIEW



Image: The Clarity 600 Wake Assure Alarm Clock, a black digital alarm clock with a large display, shown with its connected black bed shaker unit.

## Key Features:

- Super-bright 1.8" LCD display for clear time visibility.
- Super loud 85+ decibel alarm to ensure audible notification.

- Included bed shaker provides powerful vibration to wake deep sleepers.
- Visual alarm indicator for an additional wake-up cue.
- Snooze button for temporary alarm pause.
- Includes port for optional Lamp Flasher accessory (sold separately).

## SETUP

---

### 1. Powering the Unit:

Connect the provided AC adapter to the DC IN port on the back of the alarm clock and plug it into a standard wall outlet. For battery backup, insert 3 AAA batteries (not included) into the battery compartment. This will maintain time settings during a power outage, though the alarm function may be limited without AC power.

### 2. Connecting the Bed Shaker:

Plug the bed shaker's cable into the designated shaker port on the back of the alarm clock. Place the bed shaker under your pillow or mattress for optimal vibration. The shaker often has adjustable intensity settings (Low, Medium, High) on its side.

### 3. Setting the Time:

1. Press and hold the 'TIME SET' button (or similar, refer to specific button labels on your unit).
2. Use the 'HOUR' and 'MIN' buttons to adjust the current time.
3. Press 'TIME SET' again to confirm.
4. Some models may have a 12/24H button to switch between 12-hour and 24-hour formats.

### 4. Adjusting Display Brightness (Dimmer):

Locate the 'DIMMER' button (or 'DIM') on the top or back of the unit. Press it repeatedly to cycle through different brightness levels for the LCD display, from low to high, to suit your preference.

## OPERATING

---

### 1. Setting the Alarm:

The Clarity 600 typically supports two independent alarms (AL1, AL2).

1. Press and hold the 'ALARM 1 SET' button (or 'AL1'). The alarm time will begin to flash.
2. Use the 'HOUR' and 'MIN' buttons to set your desired alarm time.
3. Press 'ALARM 1 SET' again to confirm the alarm time.
4. Repeat for 'ALARM 2 SET' (or 'AL2') if desired.

### 2. Selecting Alarm Mode:

On the back of the unit, locate the switch or buttons for 'SOUND', 'VIBRATION', or 'BOTH'. Select your preferred wake-up method. The alarm volume can also be adjusted from low to high using dedicated controls.

### 3. Snooze Function:

When the alarm sounds, press the large 'SNOOZE' button on top of the unit to temporarily silence the alarm. The alarm will sound again after approximately 5-9 minutes (check specific model details). Repeatedly pressing snooze may be possible.

## 4. Turning Off the Alarm:

To turn off the alarm completely, press the 'ALARM OFF' button (or the corresponding AL1/AL2 button once, depending on the model). Ensure the alarm indicator on the display is no longer active.

## 5. USB Charging Port:

The alarm clock may include a USB port on the back for charging small electronic devices. Refer to the product specifications for output capabilities.

## MAINTENANCE

---

### Cleaning:

Wipe the alarm clock and bed shaker with a soft, dry cloth. Do not use abrasive cleaners or solvents. Keep the unit dry and away from excessive moisture.

### Battery Replacement:

If using battery backup, replace the 3 AAA batteries annually or when the display shows signs of dimming during a power outage. Ensure correct polarity when inserting new batteries.

## TROUBLESHOOTING

---

Problem	Solution
Alarm does not sound/vibrate.	Check if the alarm is set correctly and activated. Ensure the alarm mode (sound, vibrate, or both) is selected. Verify AC power connection and battery backup.
Display is too bright/dim.	Use the 'DIMMER' button to adjust the display brightness to your preferred level.
Time/Alarm settings reset.	Ensure AC power is consistently supplied. Check and replace battery backup if necessary.
Bed shaker not vibrating.	Verify the bed shaker is securely plugged into the alarm clock. Check the shaker's intensity switch (if available) and ensure the alarm mode is set to 'VIBRATION' or 'BOTH'.
Snooze/Alarm Off confusion.	Familiarize yourself with the specific button presses for snooze (single press) versus turning the alarm off completely (often a different button or a longer press).

## SPECIFICATIONS

---



Image: The Clarity 600 Wake Assure Alarm Clock with its dimensions (12.3"W x 3.5"H) clearly indicated.

- **Brand:** Clarity
- **Model:** 600
- **Color:** Black
- **Display Type:** Digital, 1.8-Inch LCD
- **Special Feature:** Alarm, Snooze, Bed Shaker, Visual Alarm Indicator
- **Product Dimensions:** 12.3"W x 3.5"H
- **Power Source:** Electrical (AC Adapter), Battery Powered (3 AAA batteries for backup, not included)
- **Mounting Type:** Tabletop
- **Item Weight:** 2.5 Pounds
- **Material:** Plastic
- **Operation Mode:** Electrical

## WARRANTY

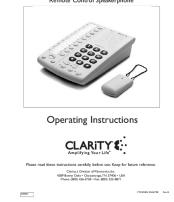
This product comes with a Limited Warranty. Please refer to the manufacturer's official website or the product packaging for specific warranty terms and conditions.

## SUPPORT

For further assistance, technical support, or to inquire about optional accessories like the Lamp Flasher, please visit the official Clarity website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

## Related Documents - 600

	<p><a href="#">Clarity Chat+ Hearing Aid Quick Start Guide - Setup and Usage</a></p> <p>Comprehensive quick start guide for Clarity Chat+ hearing aids (model JH-DW3F). Learn how to activate, fit, charge, connect via Bluetooth, and use the app for these OTC hearing devices.</p>
---	---

 <p><b>Clarity XLC3.4 User Guide: Extra Loud Cordless Speakerphone</b></p> <p>This comprehensive user guide for the Clarity XLC3.4 extra loud cordless speakerphone details installation, setup, features like Caller ID and ClarityLogic, battery management, volume and tone adjustments, and troubleshooting. Learn to optimize its use for clear and accessible conversations. Visit <a href="http://clarityproducts.com">clarityproducts.com</a> for more information.</p>	
 <p><b>AlertMaster AL10 Visual Alert System User Guide</b></p> <p>User guide for the Clarity AlertMaster AL10 Visual Alert System, detailing features, installation, operation, troubleshooting, and accessories for enhanced home notification and safety.</p>	
 <p><b>RC100 + RC200 Remote Control Speakerphone - Operating Instructions</b></p> <p>Comprehensive operating instructions and safety information for the Clarity RC100 and RC200 Remote Control Speakerphone, covering installation, operation, features, troubleshooting, and warranty. Includes details on programming, making calls, answering calls, optional accessories, and regulatory compliance.</p>	
 <p><b>Clarity E814CC Amplified Big Button Cordless Phone User Guide</b></p> <p>User guide for the Clarity E814CC amplified big button cordless phone with corded digital answering machine. Learn about setup, features, and safety instructions.</p>	
 <p><b>Clarity AlertMaster AL12 Visual Alert System User Guide</b></p> <p>User guide for the Clarity AlertMaster AL12 Visual Alert System, providing detailed information on safety precautions, features identification, installation, operation, channel settings, troubleshooting, optional accessories, regulatory compliance, and warranty.</p>	