Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Casio /
- > Casio TQ-148 Digital Alarm Clock Instruction Manual

Casio TQ-148

Casio TQ-148 Digital Alarm Clock Instruction Manual

Model: TQ-148

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Casio TQ-148 Digital Alarm Clock. Please read this manual thoroughly to ensure correct usage and to maximize the lifespan of your device. Keep this manual for future reference.

PRODUCT OVERVIEW

The Casio TQ-148 is a compact digital alarm clock designed for reliable timekeeping and alarm functionality. It features a classic analog display with digital quartz accuracy and a simple beeper alarm.



Figure 1: Front View of Casio TQ-148 Alarm Clock. This image displays the front of the black Casio TQ-148 alarm clock, featuring a white dial with green hour markers and hands, and the Casio logo. The top snooze/light button is visible.

Key Features:

- Beeper sound alarm for effective wake-up.
- Durable resin case material.
- Approximate battery life of 12 months on one R6P (AA) battery.
- Compact and portable design.

Component Identification:

- 1. Time Setting Knob: Located on the back, used to adjust the current time.
- 2. Alarm Setting Knob: Located on the back, used to set the desired alarm time.
- 3. Alarm ON/OFF Switch: Located on the back, slides to activate or deactivate the alarm.
- 4. Snooze/Light Button: Located on the top, activates snooze function and illuminates the dial temporarily.
- 5. Battery Compartment: Located on the back, holds the AA battery.



Figure 2: Side View of Casio TQ-148 Alarm Clock. This image shows the side profile of the black Casio TQ-148 alarm clock, highlighting its compact design and the smooth resin casing.

SETUP

1. Battery Installation:

- 1. Open the battery compartment cover located on the back of the clock.
- 2. Insert one AA (R6P) battery, ensuring the positive (+) and negative (-) terminals are aligned correctly according to the diagram inside the compartment.
- 3. Close the battery compartment cover securely.

Note: A battery is typically included with the product. Replace the battery when the clock's timekeeping becomes inaccurate or the alarm weakens.

2. Setting the Current Time:

- 1. Locate the **Time Setting Knob** on the back of the clock.
- 2. Rotate this knob in either direction until the hour and minute hands display the correct current time.

OPERATING INSTRUCTIONS

1. Setting the Alarm Time:

- 1. Locate the Alarm Setting Knob on the back of the clock.
- 2. Rotate this knob to move the small alarm hand to your desired wake-up time.
- 3. Ensure the alarm ON/OFF switch is in the "ON" position for the alarm to activate.

2. Activating and Deactivating the Alarm:

- To activate the alarm, slide the Alarm ON/OFF Switch on the back of the clock to the "ON" position.
- To deactivate the alarm, slide the Alarm ON/OFF Switch to the "OFF" position.

3. Using the Snooze/Light Function:

- When the alarm sounds, press the large **Snooze/Light Button** on the top of the clock to temporarily stop the alarm. The alarm will sound again after a few minutes (snooze duration is fixed).
- Pressing the Snooze/Light Button at any time will illuminate the clock face for a few seconds, allowing you
 to read the time in low-light conditions.

MAINTENANCE

Cleaning:

Wipe the clock's exterior with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the casing and internal components. Avoid exposing the clock to excessive moisture.

Battery Replacement:

When the clock begins to lose time or the alarm sound becomes weak, it is time to replace the battery. Follow the "Battery Installation" steps in the Setup section to replace the AA battery. Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

· Clock not working or displaying incorrect time:

- Check if the battery is installed correctly with the correct polarity.
- Replace the battery with a new AA battery.

. Alarm not sounding:

- Ensure the Alarm ON/OFF switch on the back is in the "ON" position.
- Verify that the alarm time is set correctly.
- Check the battery; a weak battery may result in a faint or non-sounding alarm.

· Clock face not visible in the dark:

 The clock features a temporary backlight. Press the top Snooze/Light button to illuminate the dial. The hands are not continuously luminous in the dark.


SPECIFICATIONS

Model Number	TQ-148-1EF
Manufacturer	Casio
Product Dimensions	2.36 x 0.79 x 2.36 inches (6 x 2 x 6 cm)
Item Weight	2.22 ounces (63 grams)
Case Material	Resin
Battery Type	1 x AA (R6P) battery (included)
Approx. Battery Life	12 months
Alarm Type	Beeper

WARRANTY AND SUPPORT

For information regarding warranty coverage, product support, or service, please refer to the warranty card included with your purchase or visit the official Casio website. Keep your proof of purchase for warranty claims. Casio Official Website: www.casio.com

Related Documents - TQ-148

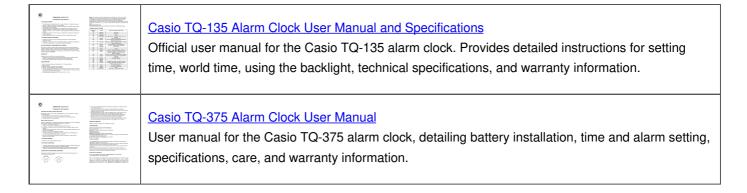

The state of the s	CASIO PQ-13, DQ-590, 640 User Manual and Specifications User manual and specifications for the CASIO PQ-13, DQ-590, 640 electronic alarm clock, detailing setup, alarm functions, backlight, battery replacement, and technical details.
	Casio LAW-21 Модуль 2789: Руководство пользователя и характеристики Полное руководство пользователя для часов Casio LAW-21 (Модуль 2789). Содержит инструкции по эксплуатации, уходу, описания режимов работы (текущее время, мировое время, таймер, секундомер, будильник) и технические характеристики.
The second secon	CASIO AR46 Analog Alarm Clock Instruction Manual User guide for the CASIO AR46 analog alarm clock. Learn how to set the time, set the alarm, and utilize the SNOOZE function. Includes product specifications and manufacturer information.
The second secon	Casio PQ65 Digital Clock Instruction Manual Detailed instructions and specifications for the Casio PQ65 digital clock, covering setup, features, temperature display, and power requirements.