

[Manuals.plus](#) /

› [Nintendo](#) /

› Nintendo Wii Sports (Nintendo Selects) Instruction Manual

Nintendo RVLPRSPE

Nintendo Wii Sports (Nintendo Selects) Instruction Manual

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your Nintendo Wii Sports (Nintendo Selects) game. Please read thoroughly before use to ensure optimal gameplay and longevity of your product.

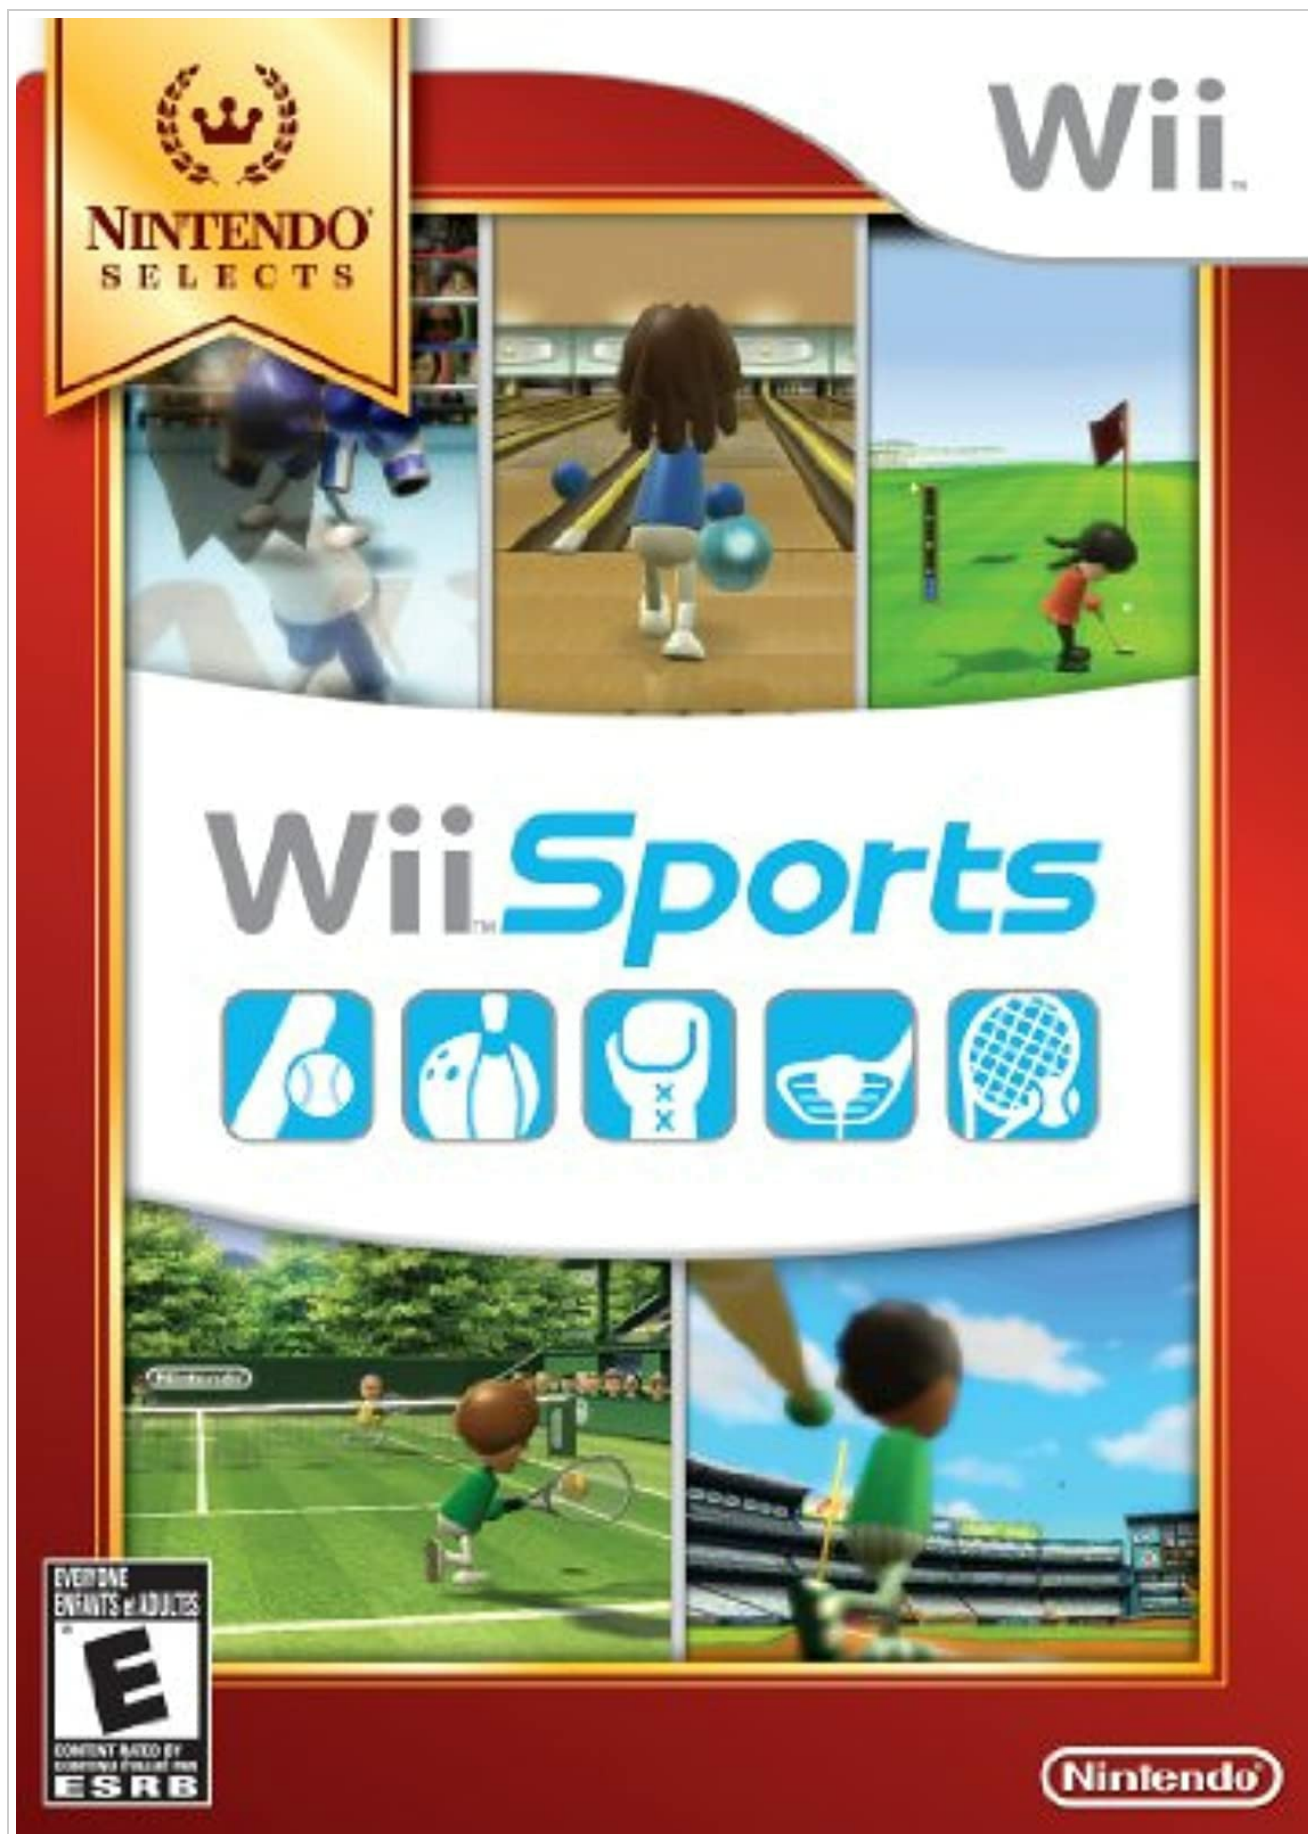


Image: The Nintendo Wii Sports game disc, clearly showing the game title, the Wii logo, and icons representing the five included sports: baseball, bowling, tennis, golf, and boxing. The disc is housed in a transparent game case.

2. SETUP

1. **Insert Game Disc:** Open the disc drive of your Nintendo Wii console. Carefully insert the Wii Sports game disc with the label facing up. Close the disc drive.
2. **Connect Wii Remote:** Ensure your Wii Remote is properly synced with your Wii console. If not, open the SD card slot cover on the front of the Wii console and press the red SYNC button. Then, open the battery cover on the back of your Wii Remote and press the red SYNC button. The player indicator lights on the Wii Remote will flash and then remain lit when connected.
3. **Attach Wrist Strap:** For safety, always attach the Wii Remote wrist strap to your wrist and tighten it before playing.
4. **Clear Play Area:** Ensure you have sufficient clear space around you to move freely without hitting objects or other people.

3. OPERATING INSTRUCTIONS

After launching Wii Sports from the Wii Menu, you will be prompted to select a Mii character or create a new one. Mii characters are customizable avatars that represent you in the game.

3.1. Game Selection

From the main menu, select one of the five available sports:

- **Tennis:** Use the Wii Remote like a tennis racket to swing and hit the ball. Motion controls dictate shot type and power.
- **Baseball:** Batting involves swinging the Wii Remote. Pitching requires a throwing motion. Fielding is handled automatically.
- **Bowling:** Hold the Wii Remote and perform a bowling motion to roll the ball down the lane. Release the B button at the bottom of your swing.
- **Golf:** Swing the Wii Remote like a golf club to hit the ball. Power and direction are determined by your swing.
- **Boxing:** Use both the Wii Remote and Nunchuk to punch and block. Motion controls simulate jabs, hooks, and uppercuts.

3.2. Basic Controls

- **Wii Remote (A Button):** Confirm selections, serve in tennis, throw in baseball, release ball in bowling.
- **Wii Remote (B Button):** Cancel selections, release ball in bowling.
- **Wii Remote (Directional Pad):** Navigate menus, adjust aim in bowling/golf.
- **Wii Remote (Home Button):** Access the Home Menu during gameplay.
- **Nunchuk (for Boxing):** Used for punching and blocking in conjunction with the Wii Remote.

Each sport includes a tutorial or practice mode to help you learn the specific controls and techniques.

4. MAINTENANCE

- **Disc Care:** Handle the game disc by its edges. Avoid touching the shiny surface. Store the disc in its case when not in use to prevent scratches and dust accumulation.
- **Cleaning:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive cleaners or solvents.
- **Storage:** Store the game disc and console in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

- **Disc Read Error:** If the console cannot read the disc, ensure the disc is clean and free of scratches. Reinsert the disc. If the problem persists, try another game disc to determine if the issue is with the console or the disc.
- **Wii Remote Not Responding:** Check the battery level of the Wii Remote. Ensure it is properly synced with the console (refer to Section 2: Setup).
- **Game Freezes:** If the game freezes, press the HOME button on the Wii Remote and select "Wii Menu" to return to the main console menu. If this does not work, turn off the console by holding the POWER button for several seconds.
- **Motion Sensor Issues:** Ensure the Sensor Bar is correctly positioned and connected to the console. Check for any obstructions between the Wii Remote and the Sensor Bar.

6. SPECIFICATIONS

Product Name	Wii Sports (Nintendo Selects)
Model Number	RVLPRSPE
Manufacturer	Nintendo
Compatible Consoles	Nintendo Wii, Nintendo Wii Mini, Nintendo Wii U
Number of Players	1-4
Release Date	May 15, 2011
Item Weight	2.24 ounces
Product Dimensions	5 x 5.3 x 0.6 inches
Language	English
Rating	Everyone (E)

7. WARRANTY INFORMATION

This Nintendo product is covered by a limited warranty provided by Nintendo. For specific details regarding warranty coverage, duration, and terms, please refer to the official warranty documentation included with your Nintendo Wii console or visit the official Nintendo support website. Proof of purchase may be required for warranty claims.

8. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Nintendo Wii Sports game, please visit the official Nintendo support website or contact Nintendo customer service. Contact information can typically be found on the Nintendo website or in the documentation accompanying your Wii console.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question