



Manuals.plus /

› **AROMA** /

› Aroma Housewares 20 Cup Cooked (10 cup uncooked) Digital Rice Cooker, Slow Cooker, Food Steamer, SS Exterior (ARC-150SB)  
User Manual

## **AROMA ARC-150SB**

# **Aroma Housewares Digital Rice Cooker, Slow Cooker, Food Steamer**

**MODEL: ARC-150SB**

### **Introduction**

---

Thank you for purchasing the Aroma Housewares Digital Rice Cooker, Slow Cooker, and Food Steamer. This appliance is designed to simplify your cooking process, offering multiple functions in one compact unit. Please read this manual thoroughly before first use to ensure safe and optimal operation.

This versatile cooker perfectly prepares 4 to 20 cups of any variety of rice and grains. It also features a slow cook function and a steam tray for healthy steaming of meats and vegetables.

### **Product Overview**

---



Image: Front view of the Aroma Housewares Digital Rice Cooker, showing the stainless steel exterior and the digital control panel with various function buttons.

The Aroma ARC-150SB is equipped with easy-to-use, programmable digital controls. Key features include:

- Automatic Keep Warm mode after each cooking cycle.
- Preset functions for White Rice, Brown Rice, Steam, Flash Rice, and Slow Cook.
- Sensor Logic Technology for consistent cooking results.
- Included accessories: rice measuring cup, serving spatula, and steam tray.

## Setup and First Use

---

1. **Unpack:** Carefully remove all packaging materials and accessories.

2. **Clean Components:** Wash the inner cooking pot, steam tray, rice measuring cup, and serving spatula thoroughly with warm, soapy water. Rinse and dry completely. The exterior of the rice cooker can be wiped with a damp cloth.
3. **Assemble:** Place the clean inner cooking pot inside the main unit. Ensure it is seated properly.

# 20 CUP CAPACITY

Cook up to 20 cooked rice cups of white or brown rice.



Image: Exploded view of the Aroma Rice Cooker showing its main components: the nonstick inner pot, serving spatula, rice measuring cup, and removable steam tray.

# SIMPLE & VERSATILE

Seven unique functions make mealtime easy.



EASY AS 1 · 2 · 3!



Image: A visual guide demonstrating the simple three-step process for using the rice cooker: 1. Add rice to the pot, 2. Add water, 3. Press the desired cooking function button.

## Operating Instructions

### Cooking Rice (White or Brown)

1. Measure rice using the included measuring cup. Rinse rice thoroughly until water runs clear.
2. Place rinsed rice into the inner cooking pot.
3. Add water to the corresponding water line inside the inner pot for the amount of rice being cooked. For example, for 4 cups of uncooked white rice, fill to water line 4.
4. Close the lid securely.
5. Plug the power cord into a 120V AC outlet.
6. Press the **White Rice** or **Brown Rice** button. The cooker will automatically begin cooking.
7. Once cooking is complete, the cooker will automatically switch to Keep-Warm mode.

### Flash Rice Function

The Flash Rice function is designed to cook tough-to-cook grains quicker. Follow the same steps as cooking regular rice, but select the **Flash Rice** button.

## Steaming Food

The steam tray allows for healthy steaming of meats and vegetables, even as rice cooks below.

1. Add water to the inner pot (refer to recipes for specific amounts).
2. Place food to be steamed into the steam tray.
3. Place the steam tray onto the rim of the inner pot.
4. Close the lid securely.
5. Press the **Steam** button. Use the + and - buttons to adjust steaming time.

# ONE-POT MEALS

Steam and cook meat, veggies and more simultaneously.



Image: The Aroma Rice Cooker with the steam tray in place, illustrating how to prepare one-pot meals by steaming ingredients above rice or other dishes cooking in the main pot.

## Slow Cook Function

The slow cook function transforms your rice cooker into a 4-quart slow cooker.

1. Add ingredients for slow cooking to the inner pot.

2. Close the lid securely.
3. Press the **Slow Cook** button. Use the + and - buttons to adjust cooking time.

### Delay Timer

The programmable 15-hour delay timer is ideal for preparing meals in advance.

1. Prepare ingredients as desired for your chosen cooking function (e.g., rice and water).
2. Press the **Delay Timer** button. Use the + and - buttons to set the desired delay time in hours.
3. After setting the delay, select your desired cooking function (e.g., White Rice, Brown Rice, Steam, Slow Cook). The timer will count down, and then the cooker will automatically begin the selected function.

### Sensor Logic Technology

This technology automatically controls the internal temperature throughout the cooking cycle for optimal texture and flavor, ensuring delicious, fluffy rice and grains every time.

# SENSOR LOGIC<sup>®</sup>

Sensor Logic<sup>®</sup> Technology automatically adjusts cooking temperature for perfect rice and flawless grains every time.

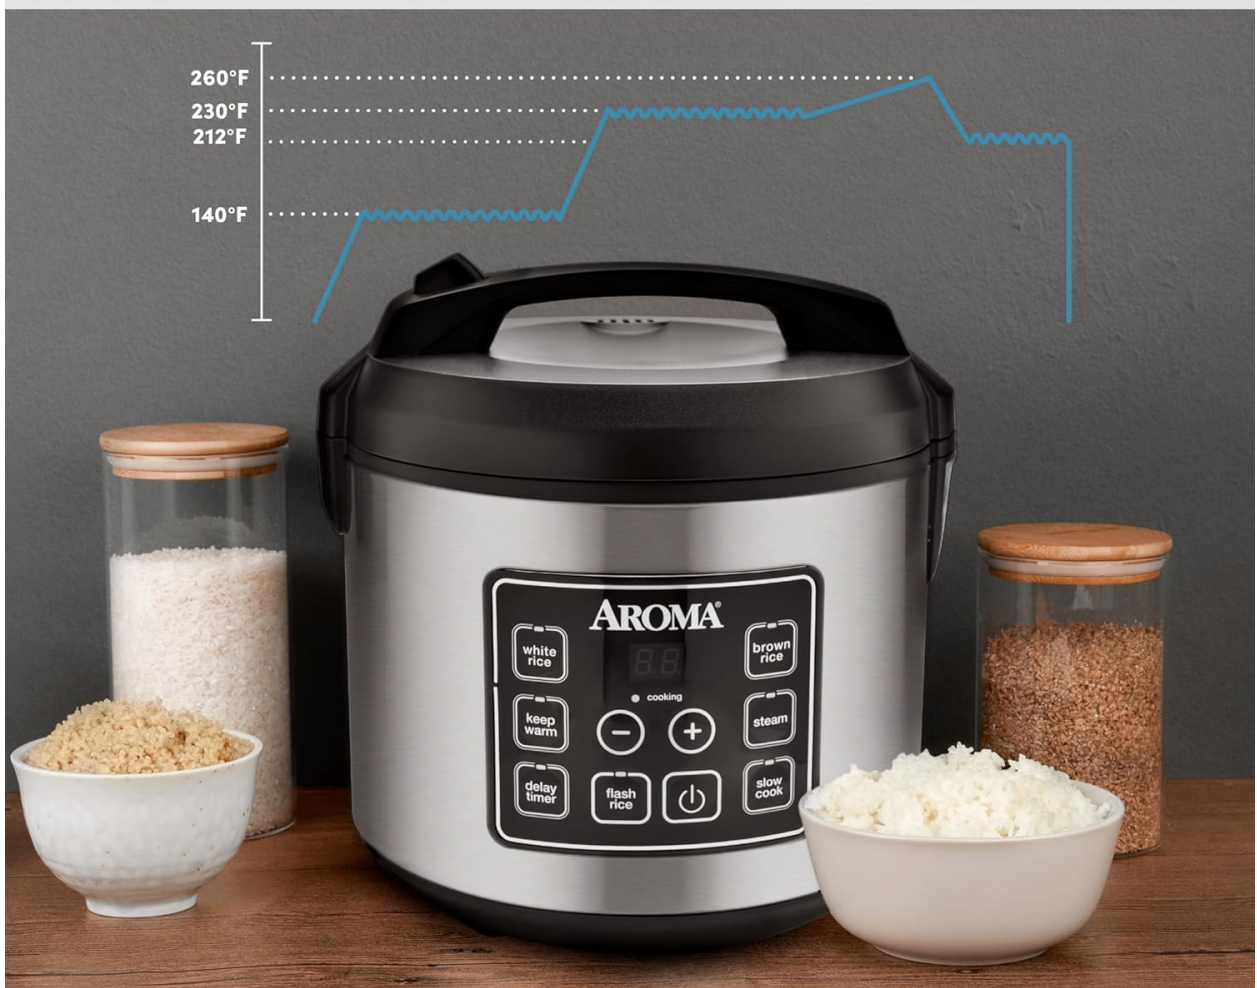


Image: A graph illustrating the temperature profile controlled by Sensor Logic Technology during the cooking process, showing preheat, soak, boil, steam, and keep warm phases.

### White Rice Cooking Chart

### White Rice Chart (Using Included Measuring Cup)

WHITE RICE uncooked	WATER LINE	COOK TIME	COOKED YIELD
2 Cups	Water Line 2	27-32 Min	4 Cups
4 Cups	Water Line 4	35-40 Min	8 Cups
6 Cups	Water Line 6	37-42 Min	12 Cups
8 Cups	Water Line 8	40-45 Min	16 Cups
10 Cups	Water Line 10	42-47 Min	20 Cups

Image: A table detailing the recommended water lines, cook times, and cooked yields for various amounts of uncooked white rice, using the provided measuring cup.

## Maintenance and Cleaning

Proper maintenance ensures the longevity and optimal performance of your rice cooker. Always unplug the unit and allow it to cool completely before cleaning.

- **Inner Cooking Pot:** The nonstick inner pot should be hand washed with warm, soapy water. Do not use abrasive cleaners or metal scouring pads, as these can damage the nonstick coating.
- **Steam Tray & Accessories:** The steam tray, rice measuring cup, and serving spatula are also recommended for hand washing.
- **Exterior:** Wipe the exterior of the rice cooker with a clean, damp cloth. Do not immerse the main unit in water or any other liquid.
- **Lid:** The lid should be wiped clean with a damp cloth. Ensure no food particles are left in the lid's crevices.

## Troubleshooting

If you encounter any issues with your rice cooker, please refer to the following common problems and solutions:

- **Rice is too hard/dry:** Ensure the correct water-to-rice ratio was used according to the cooking chart. Make sure the lid was securely closed during cooking.
- **Rice is too soft/mushy:** Reduce the amount of water slightly for the next batch. Ensure rice was rinsed properly.
- **Cooker does not turn on:** Check if the power cord is securely plugged into both the cooker and a working electrical outlet.
- **Steam escaping from sides of lid:** Ensure the lid is properly closed and sealed. Check for any food debris preventing a tight seal.
- **Food sticks to inner pot:** Ensure the nonstick coating is not damaged. Use only plastic or wooden utensils.

If the problem persists after attempting these solutions, please contact customer support.

## Specifications

---

Feature	Detail
Brand	AROMA
Model Name	Rice Cooker (ARC-150SB)
Capacity	20 Cups Cooked (10 Cups Uncooked) / 5 Quarts
Product Dimensions	11.13"D x 11.25"W x 10.75"H
Power Source	Corded Electric
Voltage	120 Volts
Wattage	250 watts
Material	Aluminum (Inner Pot), Stainless Steel (Exterior)
Color	Black
Item Weight	6.2 Pounds
Special Feature	Automatic Keep Warm
Product Care Instructions	Hand Wash

## Warranty Information

---

Specific warranty details for the Aroma Housewares ARC-150SB are typically provided with the product packaging or on the manufacturer's official website. Please refer to the documentation included with your purchase for comprehensive warranty terms and conditions.

## Customer Support

---

For further assistance, technical support, or inquiries regarding your Aroma Housewares Digital Rice Cooker, please contact the manufacturer directly. Contact information can usually be found on the product packaging, the official Aroma Housewares website, or within the included user manual.