

Casio LA20WH-1ACF

Casio LA20WH Series Women's Digital Watch User Manual

Model: LA20WH-1ACF

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Casio LA20WH Series Women's Digital Watch. This timepiece is designed for everyday use, featuring essential functions such as timekeeping, a stopwatch, an alarm, and an LED light for illumination. Its water-resistant design ensures durability for various activities.

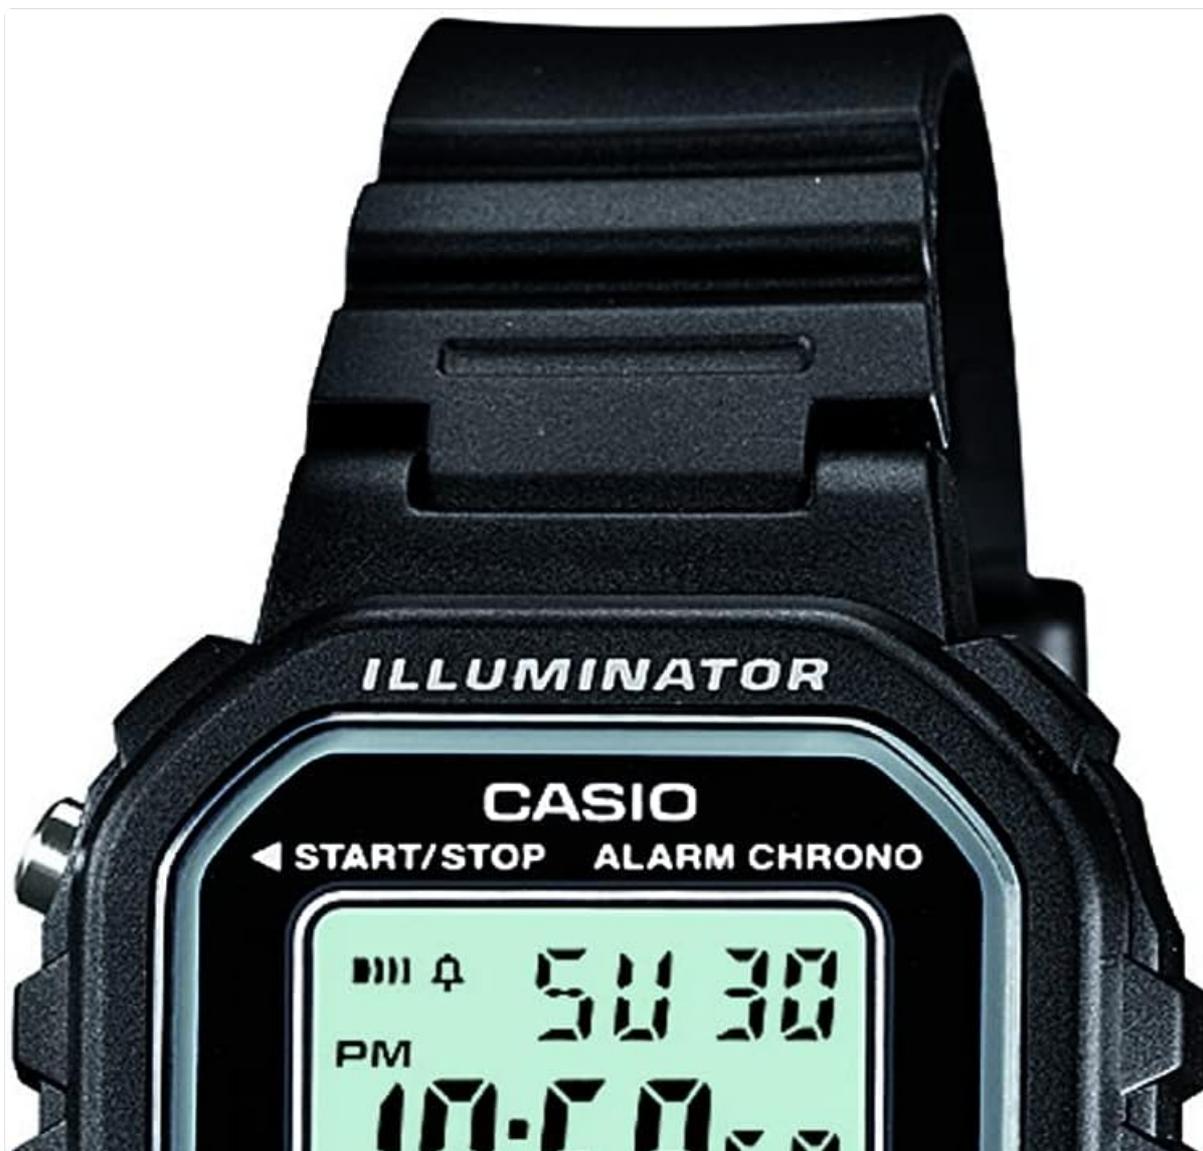




Figure 1: Front view of the Casio LA20WH digital watch. The watch features a black resin case and band, with a clear digital display showing the time, day, and date. Buttons are visible on both sides of the watch case.

2. SETUP AND INITIAL CONFIGURATION

2.1. Button Functions

Your Casio LA20WH watch has four buttons, typically located on the sides of the watch case. These buttons are used to navigate modes, adjust settings, and activate functions.

- **MODE Button:** Used to cycle through different modes (Timekeeping, Stopwatch, Alarm).
- **LIGHT Button:** Activates the LED backlight for illumination.
- **START/STOP Button:** Used to start/stop the stopwatch or adjust settings in setting mode.
- **ALARM CHRONO Button:** Used to set the alarm or reset the stopwatch. (Note: The exact labeling might vary slightly, but functions are similar).

2.2. Setting the Time and Date

1. In Timekeeping Mode, press and hold the **MODE** button until the seconds begin to flash, indicating setting mode.
2. Press the **START/STOP** button to cycle through the settings: Seconds → Hour → Minutes → Year → Month → Day.
3. Use the **ALARM CHRONO** button to increase the flashing value. Hold it down to rapidly advance the digits.

- Once all settings are adjusted, press the **MODE** button to exit the setting mode.

3. OPERATING INSTRUCTIONS

3.1. Using the Stopwatch

The stopwatch measures elapsed time with 1/100-second accuracy.

- From Timekeeping Mode, press the **MODE** button once to enter Stopwatch Mode. The display will show "00'00"00".
- Press the **START/STOP** button to start the stopwatch.
- Press the **START/STOP** button again to stop the stopwatch.
- Press the **ALARM CHRONO** button to reset the stopwatch to "00'00"00".
- Press the **MODE** button to return to Timekeeping Mode.

3.2. Setting and Using the Alarm

The watch features a daily alarm.

- From Timekeeping Mode, press the **MODE** button twice to enter Alarm Mode. The alarm time will be displayed.
- Press the **START/STOP** button to toggle the alarm ON/OFF. An alarm indicator will appear when ON.
- To set the alarm time, press and hold the **ALARM CHRONO** button until the hour digits flash.
- Use the **START/STOP** button to adjust the hour.
- Press the **ALARM CHRONO** button to move to the minute digits, then use the **START/STOP** button to adjust the minutes.
- Press the **ALARM CHRONO** button again to confirm and exit alarm setting.
- The alarm will sound for approximately 20 seconds at the set time. Press any button to stop the alarm.

3.3. Using the LED Light

Press the **LIGHT** button to illuminate the display for easy viewing in low-light conditions. The light will stay on for a few seconds.

4. MAINTENANCE AND CARE

4.1. Water Resistance

Your Casio LA20WH watch is water-resistant. This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. However, it is **not** suitable for swimming, diving, or prolonged water activities. Do not operate buttons while the watch is wet or submerged.

4.2. Battery Replacement

The watch is powered by a Lithium Metal battery, designed for approximately 5 years of operation. When the display becomes dim or functions become erratic, it is time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

4.3. General Care

- Clean the watch with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry.
- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Do not use chemical cleaners or solvents on the watch.
- Avoid strong impacts or dropping the watch.



Figure 2: The Casio LA20WH watch on a wrist, demonstrating its comfortable fit and practical design for daily wear.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to Section 2.2 to reset the time.
Buttons are unresponsive.	Watch is wet or internal issue.	Ensure watch is dry. If problem persists, consult a technician.
Alarm does not sound.	Alarm is turned OFF or set incorrectly.	Refer to Section 3.2 to ensure the alarm is ON and set to the correct time.

6. SPECIFICATIONS

- **Model Number:** LA20WH-1ACF
- **Display Type:** Digital
- **Case Material:** Resin
- **Band Material:** Resin
- **Water Resistance:** Water-resistant (suitable for splashes, rain, brief immersion; not for swimming/diving)
- **Light:** LED Backlight
- **Stopwatch:** 1/100-second stopwatch
- **Alarm:** Daily Alarm
- **Calendar:** Auto Calendar (pre-programmed until the year 2099)
- **Battery Life:** Approximately 5 years (CR1616)
- **Dimensions:** Approximately 5 x 4 x 8 inches
- **Weight:** Approximately 0.63 ounces



Figure 3: The packaging for the Casio LA20WH watch, featuring the brand's distinctive blue and white design.

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Casio website. Keep your proof of purchase for any warranty claims.

You can also find additional support and product information on the [Casio Store on Amazon](#).

A digital version of the user manual can be found [here](#).

© 2024 Casio. All rights reserved.

Related Documents



[Casio G-200 Watch Module 2387 User Manual](#)

Comprehensive user manual for the Casio G-200 digital watch, module 2387. Learn about timekeeping, alarm functions, stopwatch operations, water resistance, and specifications.

	<p>Casio Watch Module 950 User Manual</p> <p>This manual provides comprehensive instructions for operating the Casio watch with module 950. It details how to set the time and date, use the alarm functions, operate the stopwatch and countdown timer, and utilize the altimeter features. Includes specifications and troubleshooting tips.</p>
	<p>Casio WVA-420 Watch: User Manual and Specifications</p> <p>Comprehensive guide for the Casio WVA-420 watch (models 3309, 3345). Details water resistance, radio-controlled timekeeping, alarms, stopwatch, timer, world time, specifications, and maintenance.</p>
	<p>Casio Module 2606 Electronic Watch User Manual - Features, Operation, and Care</p> <p>Detailed user guide for the Casio Module 2606 watch. Learn about water resistance, battery, timekeeping, alarms, stopwatch, phone book, and technical specifications. Includes care instructions and mode explanations.</p>