

Casio GW2310FB-1

Casio G-Shock GW2310FB-1 Watch Instruction Manual

Model: GW-2310FB-1CR

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Casio G-Shock GW2310FB-1 watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. This watch features Tough Solar power, Multi-Band 6 Atomic Timekeeping, 200-meter water resistance, and shock resistance.

SETUP

1. Initial Charge (Tough Solar)

Your watch is powered by a solar cell and a rechargeable battery. To ensure proper operation, expose the watch face to light regularly. An initial full charge may take several hours under direct sunlight or a full day under fluorescent light.

- Place the watch where its face is exposed to bright light.
- Avoid covering the watch face while charging.
- The power indicator on the display shows the current charge level. Aim for a 'H' (High) charge level.

2. Time Setting (Multi-Band 6 Atomic Timekeeping)

The watch automatically receives time calibration signals to maintain accurate time. Ensure the watch is placed in a location where it can receive signals, typically near a window, especially overnight.

- **Automatic Reception:** The watch attempts to receive a calibration signal up to six times a day.
- **Manual Reception:** To manually initiate signal reception, hold down the 'RECEIVE' button (usually bottom right) for a few seconds until 'RC!' appears.
- **Home City Setting:** Set your home city correctly for accurate timekeeping and signal reception. Refer to the 'Operating' section for details on setting the home city.



Image: Casio G-Shock GW2310FB-1 watch displaying time and date on a wrist.

OPERATING MODES

Your G-Shock watch has several modes accessible via the 'MODE' button (bottom left).

1. Timekeeping Mode

This is the default mode, displaying the current time, day, and date. Press the 'ADJUST' button (top left) to toggle between 12-hour and 24-hour formats.

2. World Time Mode

Displays the current time in 48 cities (31 time zones) around the world.

- Press 'MODE' to navigate to World Time Mode.
- Use the 'FORWARD' (top right) and 'REVERSE' (bottom right) buttons to scroll through city codes.

3. Alarm Mode

Set up to 5 daily alarms and a snooze alarm.

- Press 'MODE' to navigate to Alarm Mode.
- Use 'FORWARD'/'REVERSE' to select an alarm (AL1-AL5, SNZ).
- Hold 'ADJUST' to enter setting mode, then use 'FORWARD'/'REVERSE' to set the alarm time. Press 'MODE' to move between hour and minute settings.
- Press 'ADJUST' to exit setting mode.

4. Stopwatch Mode

Measures elapsed time, split times, and two finishes.

- Press 'MODE' to navigate to Stopwatch Mode.
- Press 'FORWARD' to start/stop.
- Press 'REVERSE' to reset (when stopped) or take a split time (when running).

5. Countdown Timer Mode

Counts down from a specified time, up to 24 hours.

- Press 'MODE' to navigate to Countdown Timer Mode.
- Hold 'ADJUST' to enter setting mode. Use 'FORWARD'/'REVERSE' to set the countdown start time. Press 'MODE' to move between hour and minute settings.
- Press 'ADJUST' to exit setting mode.
- Press 'FORWARD' to start/stop the countdown.

6. Auto EL Backlight

The watch features an Electro-Luminescent backlight for visibility in low light conditions. The Auto EL function automatically illuminates the display when you tilt your wrist towards your face.

- To activate/deactivate Auto EL, hold the 'LIGHT' button (top right) for approximately three seconds in Timekeeping Mode. An indicator will appear/disappear on the display.

MAINTENANCE

1. Cleaning

Regularly clean your watch to prevent dirt and grime buildup. Use a soft, dry cloth for the case and band. For resin bands, a mild soap and water solution can be used, followed by thorough rinsing and drying.

2. Battery Care (Tough Solar)

To maintain the rechargeable battery's health, ensure the watch receives adequate light exposure. Avoid prolonged storage in dark places, as this can lead to battery depletion and potential damage. If the power indicator shows 'L' (Low) or 'M' (Medium), expose the watch to light immediately.

3. Water Resistance

The watch is water resistant to 200 meters. This means it is suitable for showering, swimming, and diving. However, avoid operating buttons underwater, as this can compromise the water resistance. After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.

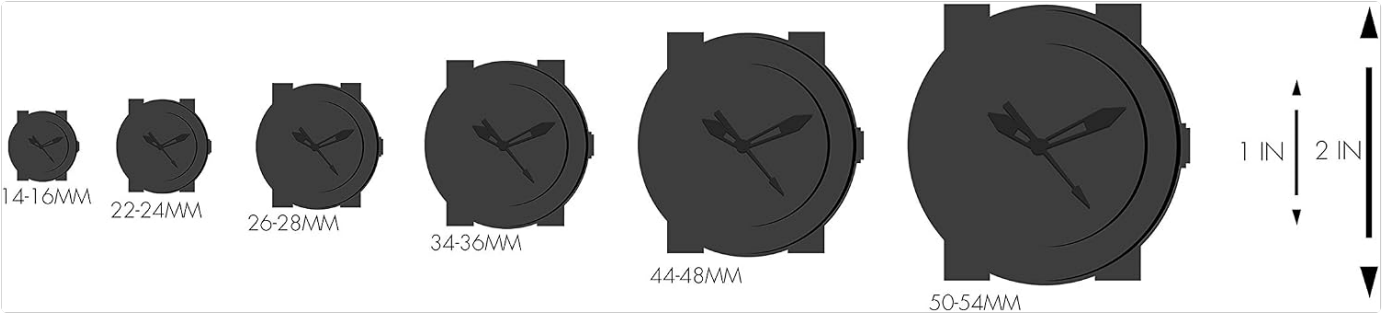


Image: Watch size guide, illustrating different watch diameters for reference.

TROUBLESHOOTING

1. Time Synchronization Issues

If the watch fails to synchronize with the atomic time signal:

- Ensure your home city setting is correct for your region.
- Place the watch near a window overnight, away from electronic devices that may cause interference.
- Check the signal reception status (often indicated by 'RCVD' or 'ERR'). If 'ERR' appears, try a different location.

2. Power Level Issues

If the power indicator is consistently 'M' or 'L':

- Expose the watch to bright light for an extended period.
- Ensure the watch face is not obstructed.
- If the issue persists after prolonged charging, the rechargeable battery may need servicing.

3. Display Readability

The GW2310FB-1 features a reverse LCD display, which can appear darker than standard displays. In low light, use the EL backlight. In bright sunlight, adjust the viewing angle for optimal clarity.

SPECIFICATIONS

Model Number	GW-2310FB-1CR
Brand	Casio
Display Type	Digital
Movement	Quartz
Power Source	Tough Solar (Solar Powered)

Water Resistance Depth	200 Meters (660 Feet)
Case Material	Resin
Band Material	Resin
Case Diameter	46.4 Millimeters
Case Thickness	15.6 Millimeters
Item Weight	52 Grams
Special Features	Atomic Timekeeping (Multi-Band 6), Shock Resistant, World Time, Alarms, Stopwatch, Countdown Timer, Full Auto EL Backlight

WARRANTY

This Casio G-Shock watch is covered by a **1-Year Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For further assistance, detailed operational guides, or to locate an authorized service center, please visit the official Casio website or contact Casio customer support in your region. You can often find additional resources and FAQs on the Casio support pages.

For general inquiries, you may visit the [Casio Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question