

CUCKOO CR-0351F

CUCKOO Micom Rice Cooker CR-0351F Instruction Manual

Model: CR-0351F

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your CUCKOO Micom Rice Cooker, model CR-0351F. Please read these instructions thoroughly before first use and retain for future reference.

The CUCKOO CR-0351F is a versatile 3-cup uncooked (6-cup cooked) Micom rice cooker designed for various cooking needs, including white rice, brown/GABA rice, porridge, and steaming. It features Fuzzy Logic Technology for optimized cooking and a non-stick inner pot for easy cleaning.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Always connect to a grounded outlet.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid contact with moving parts.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



Figure 1: Safety Features Overview. This image displays four icons representing key safety features: Overheat Control Circuit, Abnormal Power Cutoff Circuit, Over-Temperature Control, and Automatic Temperature Control Device, emphasizing the product's built-in safety mechanisms.

3. PACKAGE CONTENTS

Verify that all items are included in the package:

- CUCKOO Micom Rice Cooker CR-0351F
- Non-Stick Inner Pot
- Rice Measuring Cup
- Rice Spatula
- Instruction Manual (this document)



Figure 2: Essentials Included. This image illustrates the main components and accessories that come with the rice cooker, including the stick-free coating inner pot, rice measuring cup, rice scooper, user manual, steam cap, and detachable inner lid.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your CUCKOO Micom Rice Cooker.



Figure 3: Front View of the Rice Cooker. This image shows the CUCKOO Micom Rice Cooker CR-0351F from the front, highlighting its compact design, red and white color scheme, and the digital control panel.

4.1 Control Panel Functions

- **GLUTINOUS / TURBO / STEAM:** Selects cooking modes for various rice types and steaming.
- **WARM / REHEAT / CANCEL:** Activates keep warm, reheat functions, or cancels current operation.
- **PRESET / Hrs.:** Sets the delay timer in hours.
- **MENU / Min.:** Navigates through menu options and sets minutes for the delay timer.
- **COOK / REHEAT:** Starts the cooking or reheating process.
- **MIXED / BROWN / PORRIDGE / REHEAT:** Additional cooking mode selections.
- **LCD Display:** Shows current time, cooking mode, and timer information.

5. SETUP

5.1 Unpacking and Initial Cleaning

1. Carefully remove all packaging materials, including any tape or protective films.
2. Wash the inner pot, detachable inner lid, rice measuring cup, and rice spatula with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the rice cooker with a damp cloth. Do not immerse the main unit in water.

5.2 Placement

Place the rice cooker on a stable, level, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.

5.3 Power Connection

Plug the power cord into a grounded electrical outlet. The display will illuminate.

5.4 Setting the Clock

To set the current time on your rice cooker:

1. Press and hold the **PRESET / Hrs.** button for approximately two seconds. The hour display will begin to blink.
2. Press the **PRESET / Hrs.** button repeatedly to adjust the hour.
3. Press the **MENU / Min.** button repeatedly to adjust the minutes.
4. Once the correct time is displayed, press the **COOK / REHEAT** button to confirm and set the time. The display will stop blinking.

6. OPERATING INSTRUCTIONS

6.1 Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice. One cup of uncooked rice typically yields two cups of cooked rice.
2. **Wash Rice:** Rinse the rice thoroughly under cold water until the water runs clear.
3. **Add Water:** Place the washed rice into the inner pot. Add water according to the water level markings inside the inner pot, corresponding to the number of rice cups. For example, if cooking 2 cups of rice, fill water to the "2" mark. Adjust water levels based on desired rice texture.
4. **Place Inner Pot:** Insert the inner pot into the main body of the rice cooker. Close the lid securely.
5. **Select Mode:** Press the **MENU / Min.** button to cycle through the available cooking modes (e.g., GLUTTONOUS, TURBO, MIXED/BROWN, PORRIDGE). The selected mode will be displayed on the LCD.
6. **Start Cooking:** Press the **COOK / REHEAT** button to begin cooking. The cooker will automatically adjust cooking time and temperature using Fuzzy Logic Technology.
7. **Completion:** Once cooking is complete, the cooker will switch to Keep Warm mode.



Figure 4: Food Made Simple. This image showcases the versatility of the rice cooker by displaying various dishes that can be prepared, such as regular white rice, braised short ribs, oatmeal, porridge, steamed dishes, and veggie bowls.

6.2 Cooking Modes and Times

The CR-0351F offers several cooking modes:

- **White Rice (Glutinous):** Standard setting for white rice. Cooking time: 30-41 minutes.
- **Turbo White Rice:** For faster cooking of white rice. Cooking time: 22-32 minutes.
- **Brown/GABA Rice (Mixed/Brown):** Optimized for brown rice and GABA rice. Cooking time: 42-63 minutes.
- **Porridge:** For preparing various types of porridge. Cooking time: Approximately 50 minutes.
- **Steam:** For steaming vegetables, dumplings, or other foods. Cooking time: 20-60 minutes, depending on food type.



Figure 5: Cooking Time Reference. This image provides estimated cooking times for different modes, including Turbo White Rice, White Rice, Multigrain, Porridge, and Steamed Dishes.

6.3 Delay Timer Function

The delay timer allows you to set a specific time for cooking to complete.

1. Prepare rice and water in the inner pot as described in "Basic Rice Cooking".
2. Select your desired cooking mode using the **MENU / Min.** button.
3. Press the **PRESET / Hrs.** button. The display will show a preset time.
4. Use the **PRESET / Hrs.** button to adjust the hours and the **MENU / Min.** button to adjust the minutes until your desired completion time is set.
5. Press the **COOK / REHEAT** button to activate the delay timer. The cooker will start cooking automatically at the calculated time to finish at your set time.

6.4 Keep Warm and Reheat Functions

- **Keep Warm:** After cooking, the rice cooker automatically switches to Keep Warm mode to maintain the rice at an optimal serving temperature without overcooking.
- **Reheat:** To reheat cold rice, place it in the inner pot, add a small amount of water (about 1-2 tablespoons per cup of rice), close the lid, and press the **REHEAT** button.

6.5 My Mode Function

The My Mode function allows for customization of rice texture based on cooking temperature. Refer to the specific instructions in the full manual for detailed adjustments, as this feature provides an array of unique rice flavor and texture choices.



Figure 6: Beyond a Rice Cooker. This image highlights the product's versatile menu options, eco-friendly design, and custom flavor modes, including the My Mode function for personalized texture.

7. CARE AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your rice cooker.

7.1 Cleaning the Inner Pot

- Always unplug the rice cooker and allow it to cool completely before cleaning.
- Remove the non-stick inner pot. Wash it with warm, soapy water using a soft sponge or cloth. Do not use abrasive cleaners or metal scrubbers, as this can damage the non-stick coating.
- Rinse thoroughly and dry completely before placing it back into the cooker.

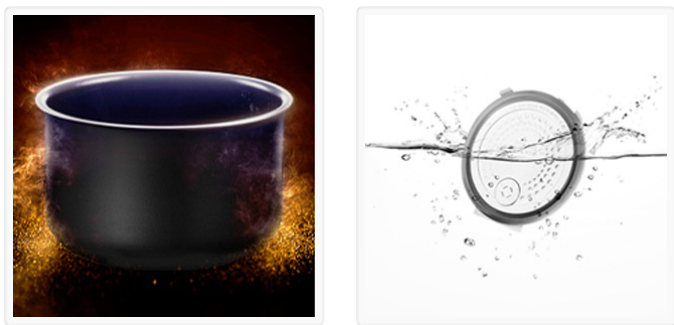


Figure 7: Inner Pot and Detachable Lid. The left image shows the non-stick inner pot. The right image shows the detachable inner lid being cleaned under running water, illustrating its easy maintenance.

7.2 Cleaning the Detachable Inner Lid and Steam Cap

- Remove the detachable inner lid and steam cap from the main lid.
- Wash them with warm, soapy water. Rinse thoroughly and ensure no food particles remain.
- Dry completely before reattaching. Ensure they are properly secured before next use.

7.3 Cleaning the Main Body

- Wipe the exterior and interior of the main body with a clean, damp cloth.
- Do not use harsh chemicals or abrasive materials.
- Ensure no water enters the electrical components.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Rice is too hard or undercooked.	Insufficient water; incorrect rice-to-water ratio; lid not properly closed; wrong cooking mode selected.	Add more water next time; ensure lid is sealed; select appropriate cooking mode (e.g., White Rice instead of Turbo for softer texture).
Rice is too soft or mushy.	Too much water; incorrect rice-to-water ratio.	Reduce water next time; ensure correct water level markings are followed.
Rice sticks to the inner pot.	Inner pot coating damaged; not enough water; rice not rinsed properly.	Ensure inner pot is not scratched; use correct water ratio; rinse rice thoroughly.
Display is dim or unreadable.	Environmental lighting; internal battery issue (after several years).	Adjust viewing angle or ambient light. If persistent after several years, contact customer support for potential battery replacement.
Cooker does not turn on.	Power cord not plugged in; power outage; faulty outlet.	Check power connection; test outlet with another appliance; check circuit breaker.
Rice turns yellow or dries out during Keep Warm.	Rice kept warm for too long.	For best quality, consume rice within a few hours of cooking. If storing longer, transfer to an airtight container and refrigerate.

9. SPECIFICATIONS

Feature	Detail
Brand	CUCKOO
Model Name	CR-0351F
Capacity	3 Cups (Uncooked) / 6 Cups (Cooked)
Product Dimensions	7.8"D x 11.5"W x 8.9"H
Power Source	Corded Electric
Wattage	425 watts
Material	Aluminum (Inner Pot), Plastic (Lid)
Special Feature	Non-Stick Inner Pot, Fuzzy Logic Technology, Delay Timer, Keep Warm Setting
Product Care Instructions	Hand Wash (Inner Pot, Detachable Lid)
Item Weight	5.5 Pounds

10. WARRANTY AND CUSTOMER SUPPORT

CUCKOO products are manufactured with high-quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official CUCKOO website. For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact CUCKOO customer

support.

Contact information can typically be found on the CUCKOO official website or on the product packaging.