

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 6V AC Adapter Instruction Manual for Freemotion Ellipticals and Bikes

UPBRIGHT Freemotion 310 R 310R C5.7 E5.1 Power

UpBright 6V AC Adapter Instruction Manual

Compatible with Freemotion and ICON Health & Fitness Equipment

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your UpBright 6V AC Adapter. This adapter is designed to provide reliable power to compatible Freemotion and ICON Health & Fitness elliptical machines and exercise bikes. Please read this manual thoroughly before use and retain it for future reference.



Figure 1: UpBright 6V AC Adapter

2. SAFETY INFORMATION

- **Read all instructions:** Before using the adapter, read all safety and operating instructions.
- **Proper Voltage:** Ensure the adapter's output voltage (6V DC) matches the requirements of your device. Using an incorrect voltage can damage your equipment.
- **Indoor Use Only:** This adapter is designed for indoor use. Do not expose it to rain, moisture, or extreme temperatures.
- **Avoid Overloading:** Do not overload electrical outlets or extension cords, as this can result in a risk of fire or electric shock.
- **Handle with Care:** Do not drop, puncture, or disassemble the adapter. Avoid sharp impacts.
- **Cord Protection:** Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the adapter.
- **Unplug When Not in Use:** Disconnect the adapter from the power outlet when not in use for extended periods.
- **Cleaning:** Clean the adapter only with a dry cloth. Do not use liquid cleaners.

3. SETUP

3.1 Identifying the Adapter Components

Your UpBright 6V AC Adapter consists of two main parts: the main adapter unit with a standard two-prong AC plug and the attached DC output cable with a barrel connector.



Figure 2: Adapter Components

3.2 Connecting the Adapter

1. **Locate the Power Input:** Identify the DC power input port on your Freemotion or ICON Health & Fitness equipment. This port is typically labeled for DC input and specifies the required voltage (e.g., "6V DC").
2. **Connect the DC Plug:** Carefully insert the barrel connector of the adapter's DC output cable into the power input port of your equipment. Ensure a snug fit.

- 3. **Plug into AC Outlet:** Insert the two-prong AC plug of the adapter into a standard 100-240VAC 50/60Hz wall outlet.
- 4. **Verify Power:** Once connected, your equipment should receive power. Check for any power indicator lights on your equipment to confirm.

4. OPERATION

The UpBright 6V AC Adapter operates automatically once connected. It converts the alternating current (AC) from your wall outlet into direct current (DC) at 6 volts, suitable for your compatible fitness equipment. There are no user-adjustable settings on the adapter itself.

Ensure the adapter is always connected to a functional power outlet and that the connection to your equipment is secure for uninterrupted operation.

5. MAINTENANCE

- **Keep Clean:** Periodically wipe the adapter with a dry, soft cloth to remove dust. Do not use abrasive cleaners or solvents.
- **Inspect Cables:** Regularly check the power cord and connector for any signs of damage, fraying, or bending. If damage is observed, discontinue use immediately and replace the adapter.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Ventilation:** Ensure the adapter has adequate ventilation and is not covered, as this can lead to overheating.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Equipment not powering on.	Adapter not plugged in correctly. Wall outlet is not active. Adapter or equipment fault.	Ensure the adapter is fully plugged into both the equipment and the wall outlet. Test the wall outlet with another device. If possible, test with another compatible adapter or contact support.
Adapter feels hot.	Normal operation (slight warmth). Overload or poor ventilation.	A slight warmth is normal. If it's excessively hot, unplug immediately. Ensure the adapter is not covered and has proper airflow. Verify equipment compatibility and power requirements.
Intermittent power to equipment.	Loose connection. Damaged cable.	Check all connections for tightness. Inspect the cable for visible damage. If damaged, replace the adapter.

7. SPECIFICATIONS


Feature	Detail
Input Voltage	100-240VAC, 50/60Hz

Feature	Detail
Output Voltage	6V DC
Output Current	2 Amps (2000mA)
Connector Type	Barrel Connector
Protection Features	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)
Compatible Devices	Freemotion and ICON Health & Fitness Elliptical Machines, Exercise Bikes (e.g., 310R, C5.7, E5.1, R5.7 models)
Product Dimensions	3 x 3 x 1 inches
Item Weight	5 ounces

8. WARRANTY INFORMATION

UpBright provides a warranty for this product. The warranty includes a **30-day refund policy** and a **24-month exchange policy** for tested units in great working condition. Please retain your proof of purchase for warranty claims.

Come With A Suitable Outlet Adapter (Only One) to Fit
Your Country/Area For International Order

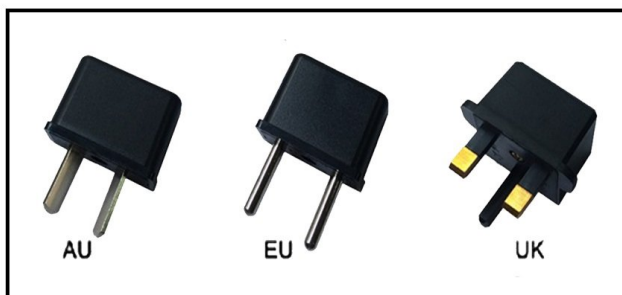

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UPBRIGHT® LIMITED WARRANTY



Figure 3: UpBright Warranty Certificate and International Adapters

For international orders, a suitable outlet adapter may be included to fit your country or area.

9. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact UpBright

customer support through your purchase platform or the official UpBright website. Provide your product model number and a detailed description of the issue for efficient support.