

SEIKO SQ772G

Seiko SQ772G Digital Radio Clock with Night Light User Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Seiko SQ772G Digital Radio Clock. This compact and modern device features a clear digital display, an automatic night light, radio functionality, and a timer. Please read this manual thoroughly before using your clock to ensure proper function and longevity.

SETUP

Battery Installation


The Seiko SQ772G requires two AAA batteries for operation. These batteries are included with your purchase. To install:

1. Open the battery compartment cover located on the back of the clock.
2. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

Once batteries are installed, the digital display should activate.

Automatic Time Synchronization (Radio Wave Reception)

This clock automatically receives radio waves to set and maintain precise time. For optimal reception, place the clock in a location free from interference from other electronic devices or large metal objects. The clock will attempt to synchronize with the nearest standard time radio transmitter.

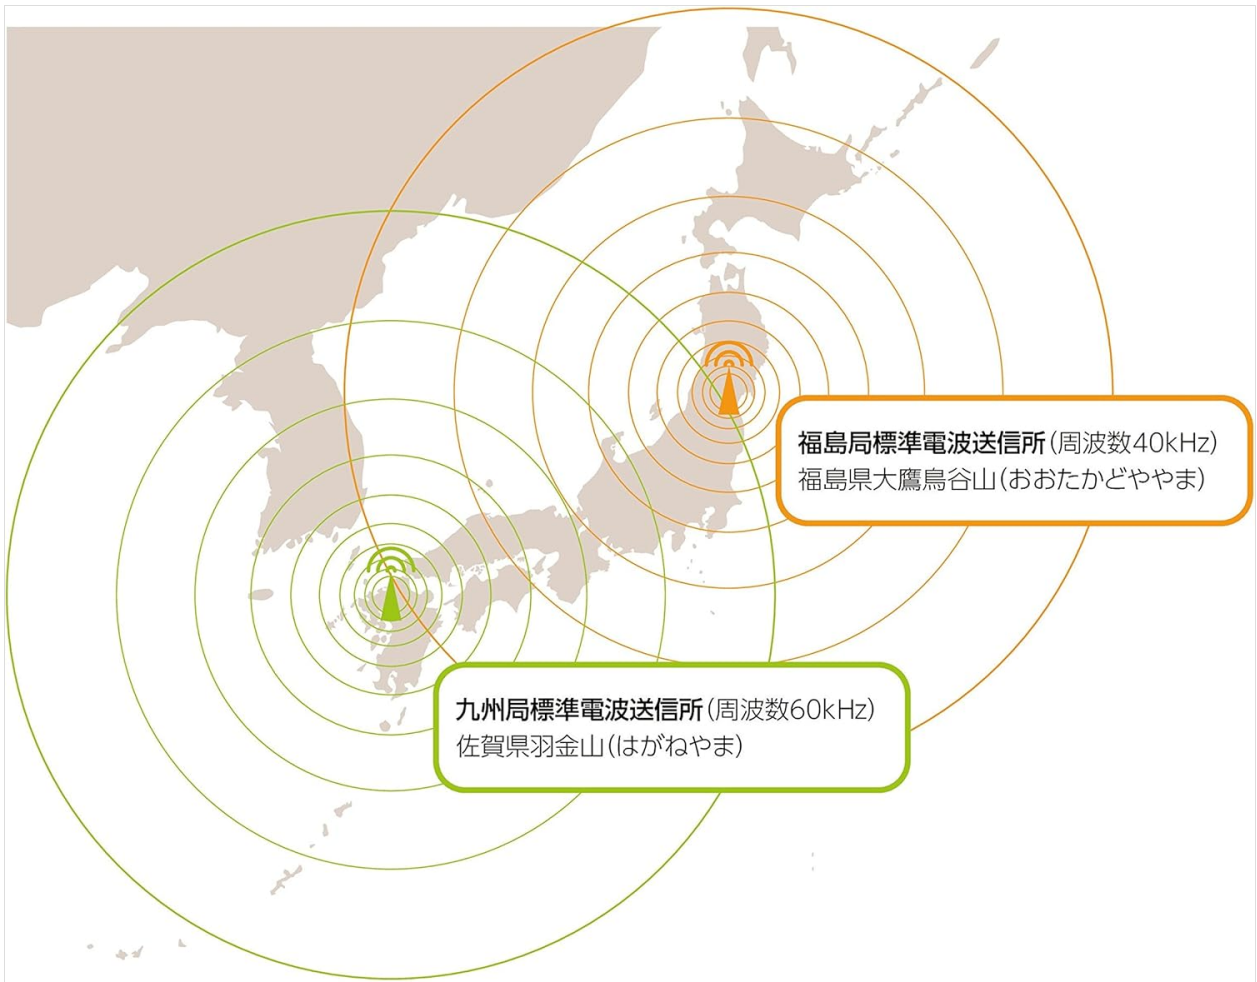

電波クロック

正確な時刻情報をのせた電波を受信し、
自動的に表示時刻を修正するクロックです。

- 電波を受信していないときは、クォーツの精度で作動します。

Image: Map illustrating the radio wave reception areas for automatic time synchronization. The clock receives signals from designated standard time radio transmitters to ensure accurate timekeeping.

OPERATING INSTRUCTIONS

Digital Display

The clock features a clear digital display that shows the current time, date, and temperature. The entire LCD screen is designed for easy readability.



フタを開けた状態で周囲が一定以下の暗さになると、自動的に点灯します。

液晶面全体が明るいから表示が見やすい

Image: A close-up view of the Seiko SQ772G digital display, showing the time (10:08:59), date (10/25), and temperature (25.0°C). This image highlights the clarity and detail of the display.

Night Light Function

The clock is equipped with an automatic night light. When the clock's cover is open and the surrounding environment becomes sufficiently dark, the display will automatically illuminate with a soft glow. To temporarily brighten the display further, press the snooze button.



スヌーズボタンでより明るく光ります。

液晶面全体が明るいから表示が見やすい

Image: The digital display showing time, date, and temperature, accompanied by text indicating that pressing the snooze button will make the display brighter. This illustrates the temporary brightness feature.

Disabling Automatic Night Light

To turn off the automatic night light function, simply close the clock's cover. The automatic illumination feature will be deactivated when the cover is closed.



自動点灯機能OFF

フタを閉じた状態

※自動点灯機能はOFF状態になります。

Image: The Seiko SQ772G clock shown with its cover closed. This position indicates that the automatic night light function is turned off, providing a visual guide for disabling the feature.

Radio Functionality

The clock includes a radio function, allowing you to listen to your preferred radio stations. Use the dedicated controls on the device to tune to stations and adjust the volume.

Timer Functionality

An integrated timer function allows you to set a specific duration after which the night light will automatically turn off. Consult the clock's controls for setting and activating the timer.

Note on Alarm Function

Please note: This Seiko SQ772G model does not include an alarm clock function.



Image: The Seiko SQ772G clock positioned on a nightstand next to a bed. This image demonstrates the clock's compact size and how it integrates into a typical bedroom environment, highlighting its suitability as a bedside companion.

MAINTENANCE

Cleaning

To clean the clock, gently wipe its surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish or internal components.

Battery Replacement

When the display dims, the night light becomes weak, or the clock's functions become erratic, it is time to replace the batteries. Follow the battery installation steps outlined in the 'Setup' section. Always replace both AAA batteries simultaneously with new ones. Dispose of old batteries according to local regulations.

TROUBLESHOOTING

- **No Display or Dim Display:** Check if the batteries are correctly installed and have sufficient power.

Replace batteries if necessary.

- **Incorrect Time:** Ensure the clock is placed in an area with good radio wave reception. Avoid placing it near large metal objects or other electronic devices that may cause interference. Allow time for the clock to synchronize automatically.
- **Night Light Not Activating:** Verify that the clock's cover is open and the ambient light is sufficiently dark for the automatic illumination feature to engage. Check battery level.
- **Radio Not Functioning:** Check battery power. Ensure the clock is not in an area with poor radio signal.

SPECIFICATIONS

Brand	SEIKO
Model Number	SQ772G
Display Type	Digital
Color	Pale Gold Color
Power Source	Battery Powered (2 AAA batteries included)
Special Features	Night Lights, Radio Functionality, Timer Functionality
Material	Plastic
Item Weight	95 Grams
Indoor/Outdoor Usage	Indoor
Alarm Clock	No

WARRANTY AND SUPPORT

For detailed warranty information, product registration, or customer support, please refer to the documentation included with your original purchase. You may also visit the official SEIKO website for further assistance and contact information.