

## Oxelo OXELO MID

# OXELO MID 5 Kids Scooter User Manual

Model: OXELO MID | Brand: Oxelo

## 1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your OXELO MID 5 Kids Scooter. Please read it thoroughly before first use and retain it for future reference.



Figure 1: The OXELO MID 5 Kids Scooter, showcasing its green and black design from a front-side perspective.

## 2. SAFETY INFORMATION

Always prioritize safety when using the scooter. Failure to follow these guidelines may result in injury.

- Always wear a helmet, knee pads, and elbow pads.
- Ensure all clamps and quick releases are securely fastened before each ride.
- Do not ride in traffic or on public roads.
- Avoid riding on wet, uneven, or slippery surfaces.

- Maximum user weight: 100 Kilograms.
- Adult supervision is recommended for younger riders.
- Regularly inspect the scooter for wear and tear, especially wheels and brakes.

### 3. SETUP AND ASSEMBLY

---

The OXELO MID 5 Scooter comes partially assembled. Follow these steps to prepare it for use.

#### 1. Unfolding the Scooter:

Locate the folding mechanism near the base of the handlebar stem. Release the locking lever and carefully unfold the scooter until the stem clicks into its upright position. Ensure the locking mechanism is fully engaged.



*Figure 2: Detail of the folding mechanism, crucial for unfolding and folding the scooter.*

#### 2. Adjusting Handlebar Height:

The handlebar height is adjustable. Open the quick-release clamp on the handlebar stem. Adjust the handlebar to a comfortable height, typically around hip level when standing on the deck. Close the quick-release clamp securely. Ensure the handlebar is aligned with the front wheel.



Figure 3: The handlebar assembly with the brake lever and height adjustment clamp.

### 3. Brake Check:

Test the hand brake by squeezing the lever. The rear wheel should stop smoothly. Ensure the brake cable is not frayed and is properly routed.

## 4. OPERATING INSTRUCTIONS

---

Learn how to safely ride and control your OXELO MID 5 Scooter.

### 1. Starting to Ride:

Place one foot firmly on the deck. Use your other foot to push off the ground, gaining momentum. Once moving, place both feet on the deck, one behind the other, or side-by-side if preferred.

### 2. Steering:

Steer by gently leaning in the desired direction and turning the handlebars. Avoid sharp, sudden turns at high speeds.

### 3. Braking:

To slow down or stop, gently squeeze the hand brake lever on the handlebar. For emergency stops, apply the brake firmly. Practice braking at low speeds first.



Figure 4: The rear wheel assembly, showing the integrated foot brake for stopping.

#### 4. Folding for Storage/Transport:

To fold the scooter, ensure it is stationary. Release the handlebar height clamp and lower the handlebar fully. Then, engage the folding mechanism lever and fold the handlebar stem down towards the deck until it locks into the folded position.



Figure 5: The scooter compactly folded, ready for storage or transport.

## 5. MAINTENANCE AND CARE

---

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Wheel Inspection:** Regularly check the wheels for wear, cracks, or damage. Replace worn wheels promptly.
- **Bearing Maintenance:** If wheels do not spin freely, bearings may need cleaning or replacement.
- **Brake Adjustment:** Ensure the brake lever has proper tension and the brake pad makes full contact with the wheel. Adjust cable tension if necessary.
- **Fastener Check:** Periodically check all bolts, nuts, and clamps to ensure they are tight. Do not overtighten.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures.



Figure 6: The front wheel with its suspension system, which requires periodic inspection.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Handlebar is loose or wobbly.	Quick-release clamp not tightened; stem bolts loose.	Ensure quick-release clamp is fully closed. Tighten stem bolts if necessary.
Brake is not effective.	Brake cable too loose; brake pads worn.	Adjust brake cable tension. Inspect and replace worn brake pads.
Wheels do not spin freely.	Dirty or damaged bearings; overtightened axle nuts.	Clean or replace bearings. Loosen axle nuts slightly, ensuring wheels are still secure.
Scooter does not fold/unfold easily.	Folding mechanism stiff or obstructed.	Apply a small amount of lubricant to the hinge. Check for any obstructions.

## 7. PRODUCT SPECIFICATIONS


Feature	Detail
Brand	Oxelo
Model Name	OXELO MID
Colour	Green
Age Range (Description)	Kid
Maximum Age Recommendation	12
Special Feature	Adjustable Handlebar Height
Weight Limit	100 Kilograms
Number of Wheels	2
Wheel Material	Rubber
Frame Material	Aluminium
Item Weight	3.7 Kilograms (3 kg 700 g)
Handlebar Type	Adjustable
Handle Height	13.8 Centimetres
Wheel Size	100 Millimetres
Wheel Type	Solid
Suspension Type	Front Suspension
Grip Type	Contoured
Brake Style	Brake (Hand brake)
Recommended Uses	Kid's transportation, Recreational riding
Package Dimensions	10 x 10 x 2 cm
ASIN	B010NJA0F2
Date First Available	30 June 2015

## 8. WARRANTY AND SUPPORT


For warranty information or technical support, please refer to the official Oxelo website or contact their customer service. Keep your purchase receipt as proof of purchase.

**Online Resources:** [Oxelo Official Website](#) (Example link, actual link may vary by region)

## Related Documents

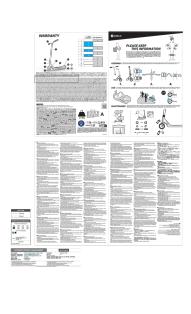	<p><a href="#">Oxelo MF100 Freestyle Scooter: Instruction Manual and Safety Guide</a></p> <p>Official instruction manual for the Oxelo MF100 Freestyle Scooter. Includes assembly steps, usage guidelines, maintenance tips, safety warnings, and warranty information for optimal and safe use.</p>
	<p><a href="#">OXELO RIDE 920E Electric Scooter User Manual</a></p> <p>Comprehensive user manual for the OXELO RIDE 920E electric scooter, covering usage, safety, maintenance, and features. Learn how to safely operate and care for your electric scooter, designed for users aged 14+ with a 100 kg capacity.</p>

## Documents - Oxelo – OXELO MID

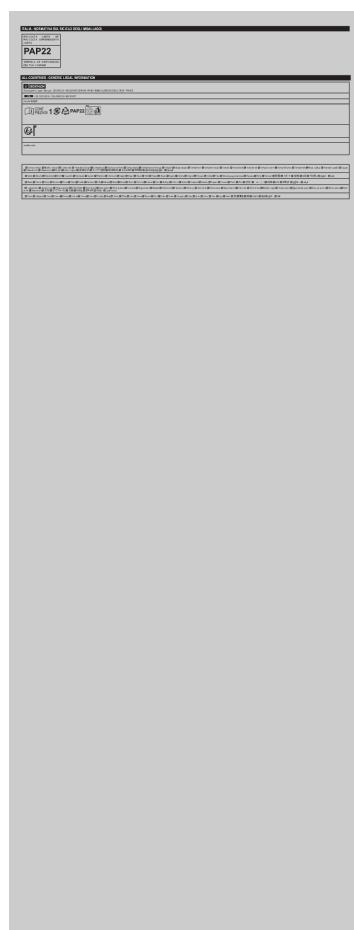

[\[pdf\]](#)

KONFORMITÄTSERKLÄRUNGSCOOTER OXELO MID 7 MIT STÄNDER GRAU BLAU WEISS  
legal data  
chn 5033678 aw23 83013 stkcdn decathlon share legal marking 6448edc9e742d stk |||  
ITALIA - NORMATIVA SUL RICICLO DEGLI IMBALLAGGI RACCOLTA CARTA OR  
RACCOLTA DIFFERENZIATA CARTA VERIFIICA LE DISPOSIZIONI DEL TUO  
COMUNE ALL COUNTRIES - GENERIC LEGAL INFORMATION - , : - DECATHLON  
- 4 BOULEVARD DE MONS - BP 299 - 59650 VILLENEUVE D ASCQ CEDEX -  
FRANCE II QR CODE INDICA : COSA FARE...

lang:af score:17 filesize: 349.11 K page\_count: 1 document date: 2023-04-04