

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [MARATHON](#) /

› [Marathon 100 Hour Dual Digital Timer User Manual](#)

### MARATHON TI030017WH

## Marathon 100 Hour Dual Digital Timer User Manual

Model: TI030017WH | Brand: MARATHON

### INTRODUCTION

The Marathon 100 Hour Dual Digital Timer is a versatile and essential tool designed for precise time management in various settings, including kitchens, offices, labs, and schools. Featuring a large, easy-to-read LCD display and a loud alarm, this timer ensures you never miss an important moment. It offers dual functionality, allowing you to track two separate events simultaneously, with both countdown and count-up capabilities.



Front view of the Marathon 100 Hour Dual Digital Timer, highlighting its clear dual LCD display and intuitive button layout for T1, T2, M, HR, MIN, SEC, and START/STOP.

### KEY FEATURES

- **Dual Digital Timer:** Simultaneously track two separate events with individual timers (T1 and T2).
- **Large, Easy-to-Read LCD Display:** High-contrast display ensures clear visibility of time from a distance.
- **Loud Ring Alarm:** Audible alarm can be heard across a room, ensuring timely alerts.
- **Dual Functionality:** Each timer can operate as a countdown timer (up to 99 hours, 59 minutes, 59 seconds) or a count-up stopwatch.
- **Built-in Memory Function:** Easily recall previous timer settings for repetitive tasks.
- **Versatile Placement:** Features a magnetic back for attachment to metal surfaces (like refrigerators) and a fold-out stand for tabletop use.
- **Batteries Included:** Comes with 2 AAA batteries for immediate use.





**DUAL FUNCTION**

Count down or up from a desired time



**BATTERIES INCLUDED**

Long-lasting 2x AAA battery



**VERSATILE**

Tabletop stand, wall mount, wall magnet can be used anywhere

Image illustrating the timer's dual function (count down or up), inclusion of 2x AAA batteries, and versatile placement options (tabletop stand, wall mount, wall magnet).

### SETUP

## 1. Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Slide open the battery cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery cover securely.

## 2. Initial Power-On

Upon battery installation, the timer's LCD display will activate, showing "00:00:00" for both T1 and T2. The timer is now ready for use.

## OPERATING INSTRUCTIONS

---

### Setting a Countdown Timer (T1 or T2)

1. Press the **T1** or **T2** button to select the desired timer. The selected timer's display will flash.
2. Press the **HR** button to set the hours.
3. Press the **MIN** button to set the minutes.
4. Press the **SEC** button to set the seconds.
5. Once the desired time is set, press the **START/STOP** button to begin the countdown.
6. During countdown, a green light will flash. When the timer reaches zero, the alarm will sound, and a red light will flash. The timer will then automatically begin counting up to show elapsed time since the alarm.
7. To stop the alarm and the count-up, press the **START/STOP** button.

### Using as a Count-Up Timer (Stopwatch)

1. Ensure the selected timer (T1 or T2) is set to "00:00:00". If not, press the **M** (Memory) button to clear any previous setting, or press **HR** and **MIN** simultaneously to reset.
2. Press the **START/STOP** button to begin counting up.
3. Press the **START/STOP** button again to pause the count-up.
4. Press the **START/STOP** button once more to resume.
5. To reset the count-up timer to "00:00:00", press the **HR** and **MIN** buttons simultaneously while the timer is paused or running.

### Memory Function

The timer features a built-in memory function. If you stop a countdown timer within one minute after it reaches zero, it will automatically remember the previous setting. To recall a stored memory, press the **M** button.

### Alarm Volume Adjustment

On the side of the timer, there is a switch to adjust the alarm volume. Options include: Mute, Low, and High. Select the appropriate volume level for your environment.



The timer displaying active green and red indicator lights for T1 and T2, signifying active or completed timers.

## PLACEMENT OPTIONS

- **Magnetic Back:** The timer has strong magnets on its back, allowing it to be securely attached to metal surfaces such as refrigerators, ovens, or whiteboards.
- **Fold-Out Stand:** A convenient fold-out stand is integrated into the back of the timer, enabling it to stand upright on any flat surface like a countertop or desk.
- **Clip:** The fold-out stand can also function as a clip, allowing you to attach the timer to a belt, pocket, or apron for portability.



A user demonstrating the magnetic attachment feature of the timer on a refrigerator, showcasing its convenience in a kitchen environment.

## MAINTENANCE

- **Cleaning:** Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Battery Replacement:** Replace batteries when the display dims or the timer functions become erratic. Always use 2 new AAA alkaline batteries. Dispose of old batteries responsibly.
- **Storage:** If storing the timer for an extended period, remove the batteries to prevent leakage and damage.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is blank or dim.	Batteries are low or incorrectly installed. Replace with new AAA batteries, ensuring correct polarity.
Alarm is too quiet or not sounding.	Check the volume switch on the side of the timer and set it to "Low" or "High". Ensure the speaker on the back is not obstructed.



Problem	Possible Cause / Solution
Timer not responding to button presses.	Try removing and reinserting the batteries to perform a soft reset. If the issue persists, replace the batteries.
Timer does not reset to zero.	To reset a timer, ensure it is paused (if counting up) or has completed its countdown. Then, press the HR and MIN buttons simultaneously.
Magnetic attachment is not strong enough.	Ensure the surface is clean and flat. For heavier items or less magnetic surfaces, consider using additional magnets or the fold-out stand.

## SPECIFICATIONS

**Model Number:** TI030017WH

**Color:** Double Timer White

**Material:** Plastic

**Product Dimensions:** 5 x 4.2 x 1.4 inches

**Item Weight:** 3.2 ounces (0.2 Pounds)

**Power Source:** 2 AAA batteries (included)

**Maximum Time Setting:** 99 hours, 59 minutes, 59 seconds

**Number of Settings:** 2 (Dual Timers)

**UPC:** 063442000229

**Manufacturer:** Marathon

# MEASUREMENTS



3.5 in (9 cm)



2.7 in (7 cm)

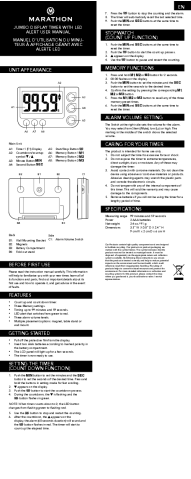
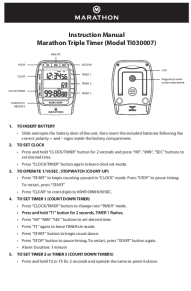

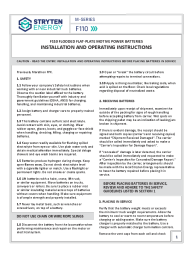
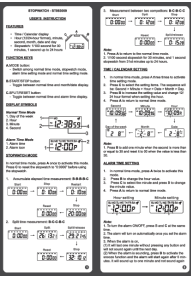
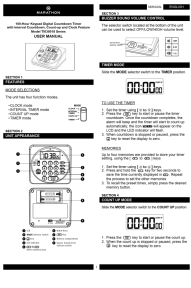
Image displaying the physical measurements of the timer, indicating its compact size for easy placement.

## WARRANTY AND SUPPORT

Marathon has been manufacturing precision timing instruments since 1941, combining modern design sensibility with Swiss engineering and craftsmanship to ensure the highest quality products. For specific warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official MARATHON website.

*Note: This manual provides general instructions. Specific features and operations may vary slightly. Always refer to the latest information from the manufacturer.*

**Related Documents - TI030017WH**

	<p><a href="#">Marathon Jumbo Display Timer with LED Alert User Manual - TI030016</a></p> <p>User manual for the Marathon Jumbo Display Timer with LED Alert (Model TI030016). Learn how to set up, operate countdown and stopwatch functions, use memory settings, and care for your timer.</p>
	<p><a href="#">Marathon Triple Timer T1030007 Instruction Manual and User Guide</a></p> <p>Detailed instructions and features for the Marathon Triple Timer Model T1030007, covering setup, operation, care, and mounting.</p>
	<p><a href="#">Casio Watch Module 1531 User Manual</a></p> <p>User manual for the Casio Module 1531 watch, detailing features like stopwatch, timer, alarm, auto backlight, and marathon runner's data.</p>
	<p><a href="#">Stryten Energy M-Series F110 Flooded Flat-Plate Motive Power Batteries: Installation and Operating Instructions</a></p> <p>Detailed installation and operating instructions for Stryten Energy M-Series F110 flooded flat-plate motive power batteries. Covers safety precautions, receiving, placement, operation, temperature management, charging procedures, regular maintenance, water additions, cleaning, service, parts, and recycling guidelines.</p>
	<p><a href="#">Marathon ST083009 Stopwatch User Instructions</a></p> <p>User instructions for the Marathon ST083009 stopwatch, detailing features, function keys, display symbols, and operation for time, calendar, alarm, and stopwatch modes. Includes battery replacement and hourly chime settings.</p>
	<p><a href="#">Marathon TI030018 100-Hour Digital Countdown Timer User Manual</a></p> <p>Comprehensive user manual for the Marathon TI030018 100-Hour Keypad Digital Countdown Timer, covering its features, operation modes (Clock, Interval Timer, Count Up, Timer), unit appearance, button functions, battery replacement, precautions, and technical specifications.</p>





[\[pdf\]](#) Catalog

CATALOGUE Marathon Timer Catalogue small new tech products support |||

TIMER C ATA L O G U E 1 ABOUT MARATHON TABLE OF CONTENTS This family photo was taken in 1892. He ... ts with built-in magnets or hanger 2 x AAA batteries included 6 BLACK CASE 1 WHITE CASE 2 SKU# **TI030017WH** 1 WHITE CASE DOUBLE/TRIPLE TIMERS SKU# TI030017BK 2 BLACK CASE LARGE DISPLAY 100 HOUR ...

lang:en score:23 filesize: 2.55 M page\_count: 8 document date: 2019-02-27