

Princess 219000

Princess Healthy 219000 Turbo-mixer Instruction Manual

Model: 219000

INTRODUCTION

Thank you for choosing the Princess Healthy 219000 Turbo-mixer. This instruction manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- The blades are extremely sharp. Handle with extreme care when cleaning the jug and blades.
- Do not immerse the motor base in water or any other liquid. Clean it with a damp cloth only.
- Keep hands and utensils out of the jug while blending to prevent injury and damage to the appliance. Use the tamper provided only when the lid is securely in place.
- Ensure the lid is properly secured on the jug before operating the blender. The blender will not operate if the lid is not correctly positioned.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not overfill the jug. Refer to the maximum fill lines.
- Avoid contact with moving parts.
- Do not use attachments not recommended or sold by the manufacturer.

PRODUCT OVERVIEW

The Princess Healthy 219000 Turbo-mixer is a powerful kitchen appliance designed for efficient blending,

grinding, and crushing. It features a robust 1600-watt motor capable of 26,800 revolutions per minute, ensuring professional results for various tasks.

- **Powerful Motor:** 1600 Watts, 26,800 RPM for high-performance blending.
- **Durable Jug:** 2-liter Tritan jug, resistant to scratches and impacts.
- **Advanced Blade System:** Six extremely durable blades for processing hard ingredients like frozen fruit, nuts, and ice cubes.
- **Pre-programmed Settings:** Six automatic programs for various blending needs.
- **Manual Control:** Adjustable speed and timer for customized blending.
- **Premium Design:** High-quality UV coating and aluminum base for durability and aesthetics.
- **Easy Cleaning:** All removable parts are dishwasher safe.



Image: The Princess Healthy 219000 Turbo-mixer displayed with a variety of blended foods and drinks, showcasing its versatility.





Image: A front view of the Princess Healthy 219000 Turbo-mixer, highlighting its brushed aluminum base and digital control panel.



Image: A close-up view of the 2-liter Tritan jug, showing the measurement markings and the robust six-blade assembly at the base.

COMPONENTS

The Princess Healthy 219000 Turbo-mixer consists of the following main components:

1. **Motor Base:** Contains the powerful motor, control panel, and power cord.
2. **Tritan Jug (2 Liter):** The main blending container with integrated blades.
3. **Lid:** Secures the jug during operation and features a removable measuring cup insert.
4. **Measuring Cup Insert:** Fits into the lid, allowing ingredients to be added during blending.
5. **Tamper:** Used to push ingredients towards the blades, especially for thick mixtures, while the blender is running.





Image: An exploded view showing the individual components of the Princess Healthy 219000 Turbo-mixer: the motor base, Tritan jug with blades, lid, measuring cup insert, and tamper.

SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Clean:** Before first use, wash the jug, lid, measuring cup insert, and tamper in warm, soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth.
3. **Position the Motor Base:** Place the motor base on a clean, dry, and stable surface. Ensure there is adequate ventilation around the unit.
4. **Place the Jug:** Position the Tritan jug onto the motor base. Ensure it is seated correctly and securely.
5. **Secure the Lid:** Place the lid onto the jug and rotate it clockwise until it locks into place. Insert the measuring cup into the lid opening. The blender will not operate unless the lid is correctly secured.
6. **Connect Power:** Plug the power cord into a grounded electrical outlet.



Image: A close-up view of the lid mechanism on the Tritan jug, showing how it securely attaches to ensure safe operation.

OPERATING INSTRUCTIONS

Control Panel Overview



Image: A detailed view of the control panel, displaying the digital screen for speed and time, along with buttons for pre-programmed settings and manual controls.

The control panel features a digital display showing speed and time, along with several buttons for both pre-programmed and manual operation.

- **Display:** Shows current speed and remaining time.
- **Pre-programmed Buttons:** Ice, Fruits, Grinding, Soup, Soy Milk, Sauces.
- **Manual Control Buttons:** Pulse, Time, Speed.

Using Pre-programmed Settings

1. Add ingredients to the jug, ensuring not to exceed the maximum fill line.
2. Secure the lid and measuring cup insert.
3. Select the desired program by pressing the corresponding button (e.g., "Ice" for crushing ice). The blender will automatically adjust speed and duration for optimal results.
4. The blender will stop automatically once the program is complete.

Note on Soup Program: The "Soup" program utilizes the high-speed friction of the blades to heat ingredients, allowing for warm soup preparation directly in the jug.

Manual Operation

1. Add ingredients and secure the lid.
2. Press the "Speed" button to adjust the blending speed. The display will show the current speed level

(1-10).

3. Press the "Time" button to set the desired blending duration.
4. Press the "Start/Stop" button (often integrated with a program button or a separate power button) to begin blending.
5. To stop blending manually, press the "Start/Stop" button again.

Using the Pulse Function

The "Pulse" function provides short bursts of high-speed blending. This is ideal for chopping ingredients, controlling texture, or dislodging food from the blades. Press and hold the "Pulse" button for continuous pulsing, and release to stop.

Adding Ingredients During Blending

To add ingredients while the blender is operating, remove the measuring cup insert from the lid and carefully drop ingredients through the opening. Use the tamper to push ingredients down towards the blades if necessary, ensuring it does not touch the blades.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Princess Healthy 219000 Turbo-mixer.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Self-Cleaning (Quick Clean):** For a quick clean, fill the jug halfway with warm water and a drop of dish soap. Secure the lid and run the blender on a low speed for 30-60 seconds, or use the "Pulse" function a few times. Rinse the jug thoroughly.
3. **Dishwasher Safe Parts:** The Tritan jug, lid, measuring cup insert, and tamper are dishwasher safe. Place them on the top rack of your dishwasher.
4. **Hand Washing:** If hand washing, use warm, soapy water and a non-abrasive sponge. Exercise extreme caution when cleaning around the blades, as they are very sharp. A brush designed for cleaning blender blades can be helpful.
5. **Motor Base:** Wipe the motor base with a soft, damp cloth. Do not immerse the motor base in water or spray it with liquids. Ensure it is completely dry before plugging it back in.
6. **Storage:** Store the assembled blender in a clean, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start.	<ul style="list-style-type: none">• Power cord not plugged in.• Lid not securely locked.• Overload protection activated.	<ul style="list-style-type: none">• Ensure the power cord is firmly plugged into a working outlet.• Twist the lid clockwise until it clicks into its locked position.• Unplug the blender, remove the jug, and let the motor base cool down for 15-20 minutes before restarting. Reduce the load.

Problem	Possible Cause	Solution
Ingredients are not blending smoothly.	<ul style="list-style-type: none"> • Too little liquid. • Ingredients are too large or packed too tightly. • Air pocket around the blades. 	<ul style="list-style-type: none"> • Add more liquid (water, juice, milk) to facilitate blending. • Cut ingredients into smaller pieces. • Use the tamper to push ingredients towards the blades. Stop the blender, remove the lid, stir, and restart.
Unpleasant odor during operation.	<ul style="list-style-type: none"> • New motor smell (normal for first few uses). • Overheating due to prolonged use or heavy load. 	<ul style="list-style-type: none"> • This is normal and will dissipate after a few uses. • Unplug the blender and allow it to cool down for at least 30 minutes. Reduce blending time or ingredient load.







SPECIFICATIONS


Brand:	Princess
Model Number:	01.219000.01.001
Power/Wattage:	1600 Watts
Voltage:	240 Volts
Capacity:	2 Liters
Material (Base):	Alloyed Steel
Material (Jug):	Tritan
Number of Speeds:	10
Special Features:	Heats soup by friction, crushes ice and frozen fruit, grinds coffee.

WARRANTY AND SUPPORT

For information regarding the warranty period and conditions, please refer to the warranty card included with your purchase or consult the retailer where the product was acquired. Keep your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact Princess customer service or visit their official website. Contact details can typically be found in your purchase documentation or on the manufacturer's website.

	<p>Princess 01.212092.01.001 Black Steel 1000 Blender User Manual and Safety Guide</p> <p>Comprehensive user manual for the Princess 01.212092.01.001 Black Steel 1000 Blender. Includes safety instructions, operating guide, cleaning tips, parts description, and environmental information.</p>
	<p>Princess Black Steel Blender - Instruction Manual</p> <p>Official instruction manual for the Princess Black Steel Blender (Model 01.212085.01.001), covering safety, parts description, assembly, usage, cleaning, maintenance, and environmental information.</p>
	<p>Princess Blender 01.212094.01.001 User Manual</p> <p>User manual for the Princess 01.212094.01.001 Blender, providing detailed instructions on safety, operation, cleaning, and maintenance for optimal use.</p>
	<p>Princess Hand Mixer Power 500 - Instruction Manual</p> <p>User manual for the Princess Hand Mixer Power 500 (Model 01.222206.01.001). Includes safety instructions, parts description, operating guide, cleaning, and maintenance information.</p>
	<p>Princess Digital Aerofryer Instruction Manual</p> <p>Comprehensive instruction manual for the Princess Digital Aerofryer, covering safety, usage, cleaning, and maintenance. Learn how to operate your air fryer efficiently and safely.</p>
	<p>Princess Blender 01.212077.01.650 Instruction Manual</p> <p>Instruction manual for the Princess Blender model 01.212077.01.650, covering safety precautions, parts description, usage, cleaning, maintenance, warranty, and environmental disposal information.</p>

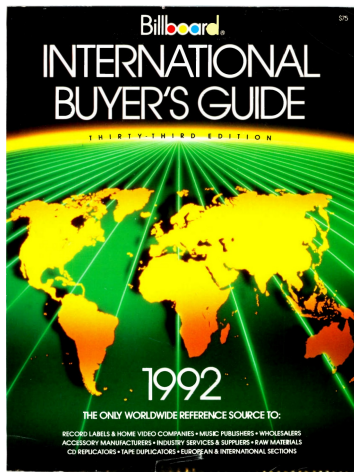

[Billboard International Buyer's Guide 1992](#)

The 1992 Billboard International Buyer's Guide is a comprehensive directory for the music and home video industries, listing record labels, music publishers, home video companies, and industry services and suppliers worldwide. It includes contact information, key personnel, and label details for businesses in the music and entertainment sectors.

lang:en score:16 filesize: 29.26 M page_count: 317 document date: 2019-07-11



[\[pdf\]](#)

01 219000 001 IM Princess Batidora Healthy Turbo 34913589 e4cf 4276 b029 e9fe8914116d

princesshome eu es product attachment productId attachmentName |||

3 1. 2. 3. 4. 5. 6. 7. 8. 9. 10. 11. 11 10 4 1 2 3 4 5 6 7 8 9 5 6 7 8 Problems Cause and solution ...

lang:de score:12 filesize: 24.44 M page_count: 96 document date: 2016-12-05



[\[pdf\]](#) User Manual

90 219000 01 001 IM Princess Batidora Select Cuisine Turbo 66cce94b bd4c 46f9 b520 5e85eeb9ae80

princesshome eu es product attachment productId attachmentName |||

EN Instruction manual DE BedienungsanleitungFR Mode d'emploi ES Manual de usuario PT Manual de utilizador PL Instrukcja obsługi IT Manuale utente SV Bruksanvisning CS Nvod na použití SK Nvod na použitie Gebruiksaanwijzing Turbo Blender 2 NL Veiligheidsinstructies Door het negeren van de veili...

lang:nl score:11 filesize: 2.34 M page_count: 94 document date: 2015-11-23



[\[pdf\]](#) Catalog

Princess 2017 Flipping book layers DE bdkeizer affordable together What s a Digitale Familie Aerofryer 5 2 L Korb Digitalregler mit 7 Fritteuse Digital XL 3 Bedienung Frittieren auf E1mtyKwkXBS images eu ssl amazon I |||

Catalog 2018 SURPRISING, affordable EXCITING ENJOY together What s a HOME without a PRINCESS L ... 2 Sicherheitsschalter Splmaschinenfestes Zubehr Leistung: 1600 Watt 26800 2L RPM Blenders 01.219000.01.001 Die starke Basis ist aus DruckgussAluminium gefertigt und sehr stabil whrend der Anwen...

lang:de score:10 filesize: 16.62 M page_count: 148 document date: 2017-08-16

