

[manuals.plus](#) /

› [Marathon](#) /

› [Marathon Digital Desktop Clock User Manual](#)

## Marathon CL030050WH

# Marathon Digital Desktop Clock User Manual

Model: CL030050WH

## INTRODUCTION

Thank you for purchasing the Marathon Digital Desktop Clock. This clock features an easy-to-read 3.5-inch display, temperature and date functions, and a dual alarm with snooze and backlight. This manual provides detailed instructions for setting up, operating, and maintaining your new clock.



Front view of the Marathon Digital Desktop Clock, showing the large digital display with time, date, and temperature.

## SETUP

### 1. Battery Installation

The clock requires 2 AA batteries (included).

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding it downwards.
3. Insert 2 AA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover.

# MEASUREMENTS



3.7 in (9.4 cm)



3.7 in (9.4 cm)

Rear view of the clock, highlighting the battery compartment and control buttons.

## 2. Initial Power On

Once batteries are installed, the clock will power on automatically. The display will show default settings.

## OPERATING INSTRUCTIONS

Familiarize yourself with the control buttons located on the back of the clock:

- **MODE:** Toggles between Time, Alarm, and Date display modes. Used to confirm settings.
- **BELL Icon (Alarm):** Activates/deactivates the alarm.
- **UP Arrow:** Increases values during setting.
- **DOWN Arrow:** Decreases values during setting.
- **C/F:** Toggles temperature display between Celsius and Fahrenheit.
- **RESET:** Resets the clock to factory default settings.

## Setting Time and Date

1. Press and hold the **MODE** button for 3 seconds to enter time setting mode. The hour digits will flash.
2. Use the **UP** or **DOWN** arrows to adjust the hour.
3. Press **MODE** to confirm the hour and move to minutes. The minute digits will flash.
4. Use the **UP** or **DOWN** arrows to adjust the minutes.
5. Continue pressing **MODE** to cycle through and set the year, month, and day using the **UP** or **DOWN** arrows.
6. After setting the day, press **MODE** to exit setting mode.

## Setting Temperature Unit

Press the **C/F** button to switch the temperature display between Celsius (°C) and Fahrenheit (°F).

## Setting Alarm

1. Press the **MODE** button repeatedly until the alarm time is displayed (indicated by a bell icon).
2. Press and hold the **BELL Icon** button for 3 seconds to enter alarm setting mode. The alarm hour digits will flash.
3. Use the **UP** or **DOWN** arrows to adjust the alarm hour.
4. Press the **BELL Icon** button to confirm the hour and move to alarm minutes. The minute digits will flash.
5. Use the **UP** or **DOWN** arrows to adjust the alarm minutes.
6. Press the **BELL Icon** button again to exit alarm setting mode.
7. To activate or deactivate the alarm, simply press the **BELL Icon** button once. A bell symbol on the display indicates the alarm is active.

## Snooze Function

When the alarm sounds, press the large **SNOOZE** button (usually located on top of the clock) to temporarily silence the alarm. The alarm will sound again after approximately 5 minutes.

## Backlight

Press the **SNOOZE** button to activate the blue backlight. The backlight will remain lit for approximately 10 seconds.

## Language Settings

The day of the week can be displayed in seven languages: English, Dutch, French, Spanish, Italian, Danish, and German. To change the language:

1. Enter time setting mode by pressing and holding the **MODE** button for 3 seconds.
2. Press **MODE** repeatedly until the language setting flashes (usually after setting the date).
3. Use the **UP** or **DOWN** arrows to cycle through the available languages.
4. Press **MODE** to confirm your selection and exit setting mode.

## MAINTENANCE

---

### Cleaning

To clean the clock, use a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the display or casing.

### Battery Replacement

When the display becomes dim or the clock functions erratically, it is time to replace the batteries. Follow the battery installation steps in the "Setup" section. Always replace both batteries at the same time with new AA batteries.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Display is blank or dim.	Batteries are low or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm symbol is visible on the display. Re-set the alarm time.
Time is incorrect.	Time was not set correctly or batteries were removed.	Re-set the time following the "Setting Time and Date" instructions.
Temperature reading seems inaccurate.	Clock is exposed to direct sunlight or heat source.	Move the clock to a location with stable ambient temperature.

## SPECIFICATIONS

- **Model:** CL030050WH
- **Display Type:** Digital
- **Color:** White
- **Product Dimensions:** 3.7"W x 3.7"H
- **Power Source:** Battery Powered (2 AA batteries, included)
- **Material:** Plastic
- **Item Weight:** 4.2 ounces (120 Grams)
- **Special Features:** Alarm, Snooze, Backlight, Temperature Display (°C/°F), Date Display, Multi-language Day of Week

# DYNAMIC DISPLAY

Time (12/24 H) • Day of the Week • Temperature (°C & °F)

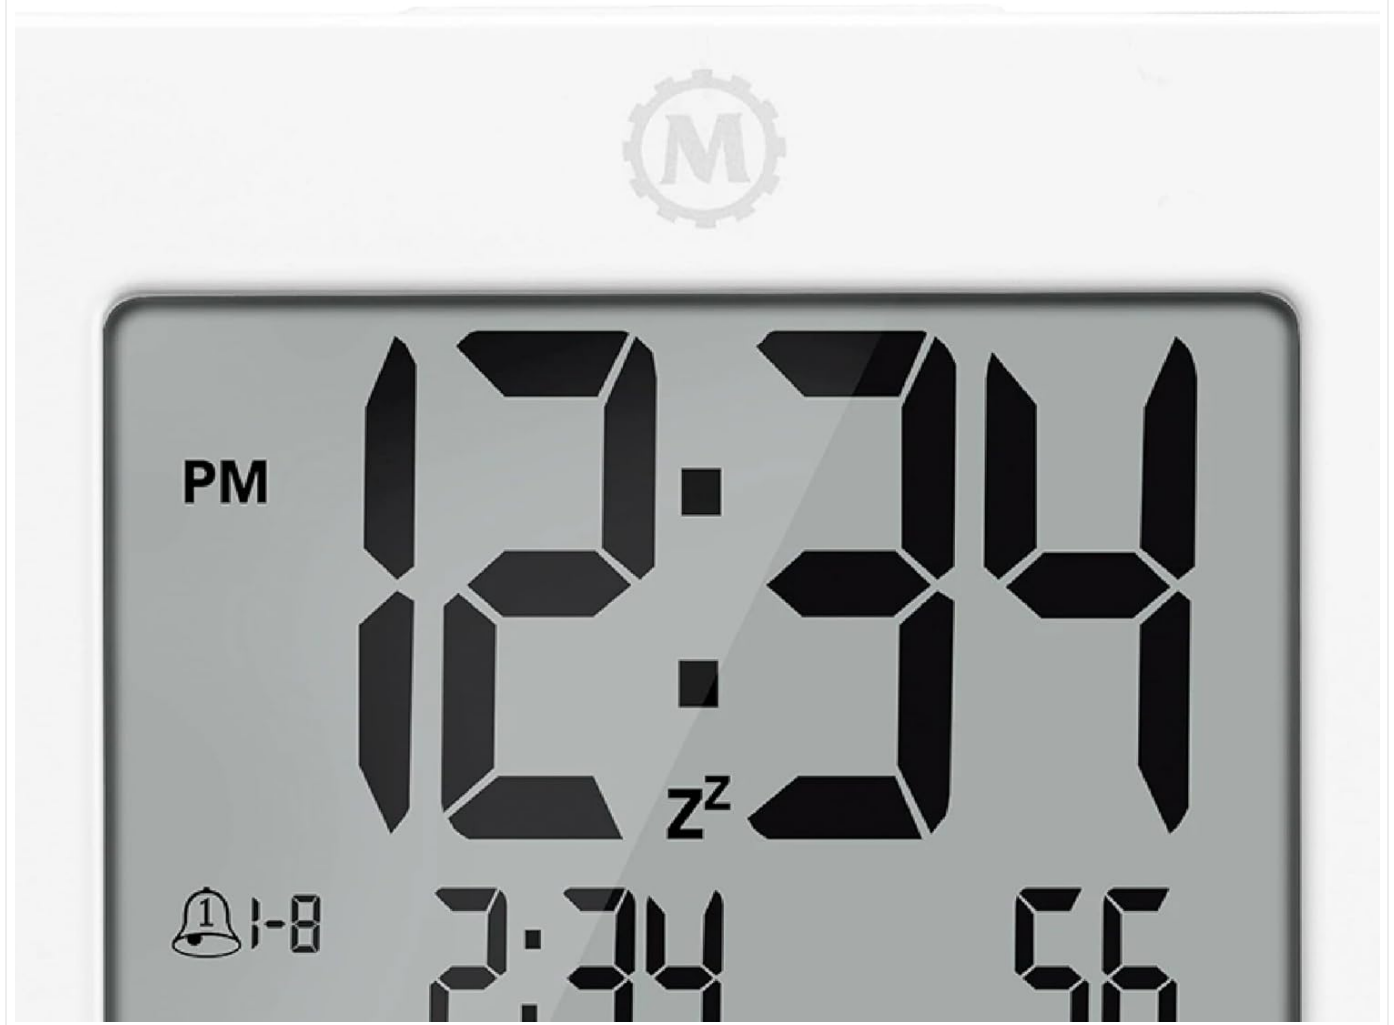


Diagram showing the dimensions of the Marathon Digital Desktop Clock (3.7 inches by 3.7 inches).

## WARRANTY AND SUPPORT

### Warranty Information

This Marathon Digital Desktop Clock comes with a limited warranty. Please refer to the product packaging or the official Marathon website for specific warranty terms and conditions.



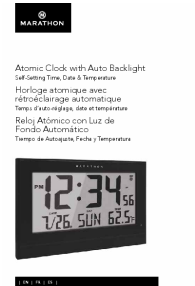
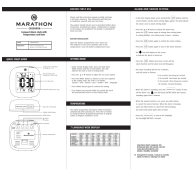

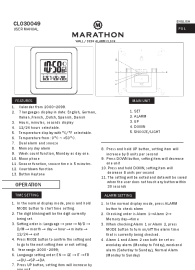
### Customer Support

For further assistance, troubleshooting, or inquiries regarding your Marathon Digital Desktop Clock, please visit the official Marathon website or contact their customer support.

[Visit the Marathon Store on Amazon](#)



Related Documents - CL030050WH

	<p><a href="#">Marathon CL030058 Compact Alarm Clock with Temperature and Date User Manual</a></p> <p>Comprehensive user manual for the Marathon CL030058 Compact Alarm Clock. This guide covers battery installation, setting time and date, configuring alarms, using snooze and backlight features, understanding temperature display, and important warranty and recycling information.</p>
	<p><a href="#">Marathon CL030075WH Medication Reminder Alarm Clock User Manual</a></p> <p>Comprehensive user manual for the Marathon CL030075WH medication reminder alarm clock. Learn to set time, alarms, use features like temperature display and snooze, and find care instructions.</p>
	<p><a href="#">Marathon Atomic Clock with Auto Backlight - User Manual and Features</a></p> <p>Comprehensive guide for the Marathon Atomic Clock with Auto Backlight (Model CL030089). Covers features like radio-controlled time, thermometer, auto backlight, setup instructions, manual settings, time zones, and DST. Includes troubleshooting and precautions.</p>
	<p><a href="#">Marathon CL030058 Compact Alarm Clock with Temperature and Date User Manual</a></p> <p>User manual and quick start guide for the Marathon CL030058 compact alarm clock. Learn how to set the time, date, alarm, temperature display, and use snooze and backlight features.</p>
	<p><a href="#">Marathon CL030062 Slim Jumbo Atomic Digital Clock User Manual</a></p> <p>User manual for the Marathon CL030062 Slim Jumbo Atomic Digital Clock, detailing features, specifications, setup, operation, and safety precautions.</p>
	<p><a href="#">Marathon CL030049 Wall/Desk Alarm Clock User Manual</a></p> <p>Comprehensive user manual for the Marathon CL030049 digital wall and desk alarm clock. Covers features like calendar, temperature display, dual alarms, snooze, countdown timer, and language settings. Includes operation instructions, precautions, and warranty information.</p>