

[Manuals.plus](#) /

› [CakCity](#) /

› CakCity Digital Sports Watch User Manual

## CakCity 1068

# CakCity Digital Sports Watch User Manual

Comprehensive instructions for your CakCity Digital Sports Watch, Model 1068. This manual covers setup, operation, features, maintenance, and troubleshooting to ensure optimal performance and longevity of your timepiece.

## 1. PRODUCT OVERVIEW

The CakCity Digital Sports Watch is designed for active individuals, featuring a large LED screen, military-style outlook, and robust functionality. It includes a stopwatch, alarm, and backlight, making it suitable for various sports and daily use.



Figure 1.1: Front view of the CakCity Digital Sports Watch, showcasing its large digital display and robust design.

### Key Features:

- **Digital Display:** Fashionable sporty dial design with large numbers and LED backlight for clear visibility in the dark.
- **Multi-functional:** Auto Date, Alarm, Water Resistant, LED display, Shock Resistant, Stopwatch, Back Light.
- **Shock Resistant:** Ideal for both outdoor and indoor sports such as running, climbing, and fishing.
- **Waterproof:** 164 Ft / 50 M water resistance. *Note: Do not press any buttons underwater to prevent damage to the waterproof seal. Avoid steam and hot water.*

## 2. SETUP

### 2.1 Initial Preparation

Before first use, ensure you remove any protective film from the watch face. This film is applied during manufacturing to prevent scratches during transit.



Figure 2.1: Remove the protective film from the watch face before use.

## 2.2 Battery Information

Your CakCity Digital Sports Watch comes with 1 CR2 battery included and pre-installed. No immediate battery installation is required for initial use.

## 2.3 Button Identification

Familiarize yourself with the watch's buttons, which are essential for navigating its functions. Refer to the diagram below for button locations and their primary functions.



Figure 2.2: Button layout and functions. (A) Light, (B) Mode, (C) Reset, (D) Start/Stop.

## 3. OPERATING INSTRUCTIONS

This section details how to operate the various functions of your CakCity Digital Sports Watch.

### 3.1 General Operation

- At any mode, press the "LIGHT" button (A) to activate the EL backlight for 3 seconds.
- Press the "MODE" button (B) to cycle through modes: Normal time display mode → Chronograph mode → Alarm mode → Time setting mode.

### 3.2 Chronograph Functions (Stopwatch)

The chronograph function allows you to measure elapsed time.

1. In normal mode, press "MODE" button (B) twice to enter Chronograph mode.
2. Press "START/STOP" button (D) to start the stopwatch.
3. Press "START/STOP" button (D) again to stop the stopwatch.
4. Press "RESET" button (C) to continue timing from the stopped point.
5. Press "RESET" button (C) and hold to reset the stopwatch to zero.

### 3.3 Alarm & Chime ON/OFF

You can activate or deactivate the daily alarm and hourly chime.

- In normal mode, press "MODE" button (B) twice to enter Alarm mode.
- Press "START/STOP" button (D) to toggle the alarm ON/OFF. The "ALM" symbol indicates the alarm is ON.
- Press "RESET" button (C) to toggle the hourly chime ON/OFF. The "SIG" symbol indicates the chime is ON.

### 3.4 Alarm Setting

Set the desired time for your alarm.

1. In normal display mode, press "MODE" button (B) twice to enter Alarm mode.
2. Press "RESET" button (C). The "Hours" will flash. Press "START/STOP" button (D) to adjust the hour. Pay attention to AM/PM for 12-hour format.
3. Press "RESET" button (C) again. The "Minutes" will flash. Press "START/STOP" button (D) to adjust the minutes.
4. Press "MODE" button (B) to exit alarm setting.

### 3.5 Time & Date Setting

Adjust the current time and date settings.

1. In normal mode, press "MODE" button (B) three times to enter time setting mode. The "Seconds" will flash. Press "START/STOP" button (D) to reset seconds to zero.
2. Press "RESET" button (C). The "Hours" will flash. Press "START/STOP" button (D) to adjust the hours.
3. Press "RESET" button (C). The "Minutes" will flash. Press "START/STOP" button (D) to adjust the minutes.
4. Press "RESET" button (C). The "Month" will flash. Press "START/STOP" button (D) to adjust the month.
5. Press "RESET" button (C). The "Date" will flash. Press "START/STOP" button (D) to adjust the date.
6. Press "RESET" button (C). The "Week" will flash. Press "START/STOP" button (D) to adjust the day of the week.
7. Press "MODE" button (B) to exit time and date setting.

# OPERATION INSTRUCTION

(A)Light

(D)Start/Stop

(B)Mode

(C)Reset




## A.Features :

- ◆ 12 Digits LCD Display, Display Hour ,Minute ,Second ,Month ,Day and Week
- ◆ Chime hourly and Daily Alarm
- ◆ 12 / 24H format selectable, Auto Calendar
- ◆ 1/100 second Chronograph with split functions
- ◆ EL backlight

## B.Operational Manual:

- ◆ At any mode , press A key , the EL back light on for 3s.
- ◆ Press B key to convert mode:
- ◆ Normal time display mode → Chronograph mode → Alarm mode → Time setting mode

## Chronograph functions:

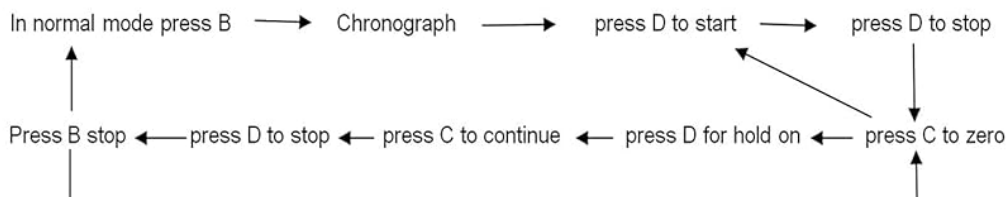

## Alarm & Chime ON/OFF:

- ◆ In normal mode press B key twice enter into Alarm mode , press D key to ON/OFF the "ALM" / "SIG" function
- ◆ If "ALM" / "SIG" symbol appears, means ALM/SIG function ON, otherwise means OFF.

## Alarm Setting:

- ◆ In normal display Mode, press B key twice enter into Alarm Mode
- ◆ Press C key the Hours will flash, Press D key to adjust "Hour" for your Alarm. Pay attention to AM/PM
- ◆ Press C key the Minutes will flash. Press D key to adjust "Minutes" for your Alarm.
- ◆ Press B key to exit.

## Time & date setting:

- ◆ In normal Mode, press B key three times to enter into setting mode and the "Seconds" flashing. Press D key to zero.
- ◆ Press C the "Hours" will flash. Press D to adjust "Hours"
- ◆ Press C the "Minute" will flash. Press D to adjust "Minutes"
- ◆ Press C the "Month" will flash. Press D to adjust "Month"
- ◆ Press C the "Date" will flash. Press D to adjust "Date"
- ◆ Press C the "Week" will flash. Press D to adjust the "Week"
- ◆ Press B key to exit.

Figure 3.1: Official operation instructions for the CakCity Digital Sports Watch.

## 4. MAINTENANCE

### 4.1 Cleaning Your Watch

To maintain the appearance and functionality of your watch, clean it regularly. Use a soft, damp cloth to wipe the watch case and strap. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid harsh chemicals or abrasive materials.

### 4.2 Water Resistance Care

Your watch is water resistant to 50 meters (164 feet). To preserve its water resistance, **do not press any buttons while the watch is submerged in water**. Avoid exposing the watch to steam or hot water, such as in showers or saunas, as this can compromise the waterproof seals.



Figure 4.1: The watch is water resistant up to 50 meters, suitable for various water activities but not deep diving.

### 4.3 Battery Replacement

When the display dims or functions become erratic, it may be time to replace the battery. This watch uses a CR2 battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

## 5. TROUBLESHOOTING

If you encounter issues with your CakCity Digital Sports Watch, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Display is dim or blank.	Low battery.	Replace the battery (CR2).
Time is incorrect.	Time not set correctly or accidental button press.	Refer to Section 3.5 "Time & Date Setting" to reset the time.
Alarm does not sound.	Alarm is turned off or set incorrectly.	Refer to Section 3.3 "Alarm & Chime ON/OFF" and 3.4 "Alarm Setting" to ensure the alarm is activated and set to the correct time.
Water inside the watch.	Buttons pressed underwater or exposure to hot water/steam.	Immediately take the watch to a professional for inspection and repair to prevent further damage. Avoid pressing buttons underwater.

## 6. SPECIFICATIONS

Detailed technical specifications for the CakCity Digital Sports Watch, Model 1068.

**Model Number:** 1068

**Product Dimensions:** 3.31 x 3.19 x 3.19 inches

**Item Weight:** 1.6 ounces

**Clasp Type:** Buckle

**Water Resistance Depth:** 50 Meters (164 Feet)

**Battery Type:** 1 CR2 battery (included)

**Display Type:** Digital LED

**Functions:** Time (12/24H), Date, Day of Week, Alarm, Stopwatch, EL Backlight

**Manufacturer:** CakCity

**First Available Date:** November 25, 2015

## 7. WARRANTY AND SUPPORT

For information regarding product warranty, returns, or additional support, please refer to the retailer's policy where the product was purchased. For general inquiries about CakCity products, you may visit the official CakCity store page.

**Online Store:** [Visit the CakCity Store on Amazon](#)

A detailed User Manual in PDF format is also available for download from the product's Amazon listing page for further reference.