

manuals.plus /

› **MARATHON** /

› **MARATHON ST083013 Adanac Digital Glow Stopwatch Timer - Battery Included Red User Manual**

MARATHON FBA_ST083013RD

MARATHON ST083013 Adanac Digital Glow Stopwatch Timer User Manual

Model: FBA_ST083013RD

INTRODUCTION

Thank you for choosing the MARATHON ST083013 Adanac Digital Glow Stopwatch Timer. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read it thoroughly to ensure optimal performance and longevity of your stopwatch.



Front view of the MARATHON ST083013 Adanac Digital Glow Stopwatch Timer, displaying time and mode indicators.

PRODUCT FEATURES

- **Jumbo LCD Display:** Features a super-glow backlight for excellent visibility in various lighting conditions.
- **Time and Calendar Function:** Displays hour, minute, seconds, month, date, and day.
- **Alarm Clock:** Integrated alarm function.
- **Stopwatch Modes:** Supports single event timing, split event timing, and time-out mode timing.
- **Precision:** Laser-tuned for 1/100th second accuracy.
- **Durability:** Water, dust, and shock resistant design.
- **User-Friendly Buttons:** Conveniently located start-stop and reset buttons for easy navigation.
- **Lanyard Included:** Comes with a 46-inch neckband for portability and security.
- **Battery:** Powered by one CR2032 battery (included).



The stopwatch shown with its included 46-inch lanyard, designed for convenient carrying around the neck.

Battery Installation

Your MARATHON ST083013 stopwatch comes with a CR2032 battery pre-installed. If the LCD screen dims or the device does not power on, the battery may need replacement.

1. Locate the battery compartment on the back of the stopwatch.
2. Using a small Phillips head screwdriver, carefully remove the screws securing the battery cover.
3. Gently remove the old CR2032 battery.
4. Insert a new CR2032 battery with the positive (+) side facing up.
5. Replace the battery cover and secure it with the screws.



Rear view of the stopwatch, highlighting the battery compartment and product information.

Attaching the Lanyard

The included 46-inch lanyard can be attached to the small loop at the bottom of the stopwatch for convenient carrying.

1. Thread the thin loop of the lanyard through the small hole at the bottom of the stopwatch.
2. Pass the main body of the lanyard through the thin loop and pull to secure.

OPERATING INSTRUCTIONS

The MARATHON ST083013 features three primary buttons: **MODE**, **START/STOP**, and **SPLIT/RESET**.

Time and Date Setting

1. From the normal time display, press the **MODE** button repeatedly until the time setting mode is activated (usually indicated by flashing digits).
2. Use the **START/STOP** button to adjust the flashing digit (hours, minutes, seconds, month, date, day).
3. Press the **SPLIT/RESET** button to move to the next digit or setting.
4. Once all settings are complete, press **MODE** to exit the setting mode.

Using the Stopwatch Function

1. From the normal time display, press the **MODE** button to cycle to the stopwatch mode (usually indicated by "00:00:00" or similar).
2. Press **START/STOP** to begin timing.
3. To record a split time (lap time) while timing continues, press **SPLIT/RESET**. The display will momentarily show the split time, then return to the running total.
4. To pause the stopwatch, press **START/STOP**. Press again to resume.
5. To stop the stopwatch completely, press **START/STOP**.
6. To reset the stopwatch to zero, press **SPLIT/RESET** when the stopwatch is stopped.

Alarm Setting

1. From the normal time display, press the **MODE** button to cycle to the alarm setting mode.
2. Use **START/STOP** to adjust the alarm hour and minute.
3. Use **SPLIT/RESET** to toggle the alarm on/off or to move between hour/minute settings.
4. Press **MODE** to exit the alarm setting mode.

Using the Backlight

The stopwatch features a super-glow backlight for improved visibility in low-light conditions. Press the **LIGHT** button (located at the bottom front) to activate the backlight. It will remain on for a few seconds.



The stopwatch held in hands, illustrating its ergonomic design and portability.

MAINTENANCE

- **Cleaning:** Wipe the stopwatch with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the stopwatch in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace the CR2032 battery when the display dims. Refer to the "Battery Installation" section for instructions.
- **Water Resistance:** While the stopwatch is water, dust, and shock resistant, it is not designed for submersion. Avoid prolonged exposure to water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

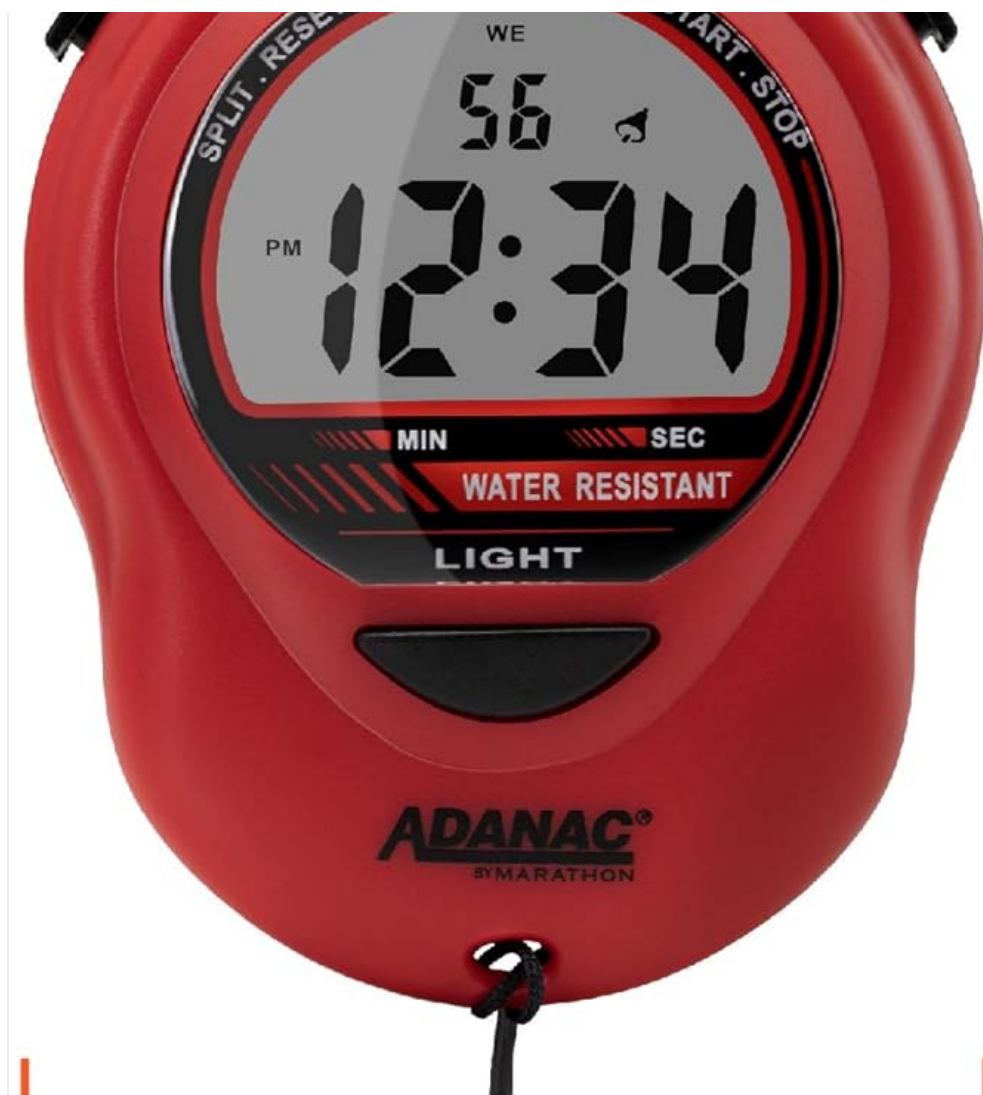
Problem	Possible Cause	Solution
Display is dim or blank.	Low or dead battery.	Replace the CR2032 battery.
Buttons are unresponsive.	Device malfunction or temporary software glitch.	Remove and reinsert the battery to perform a soft reset. If the issue persists, contact customer support.
Alarm sounds randomly.	Alarm is set and active.	Refer to the "Alarm Setting" section to disable the alarm.
Inaccurate timing.	Rare internal error.	Perform a battery reset. If the problem continues, the unit may require service.

SPECIFICATIONS

Feature	Detail
Model Number	FBA_ST083013RD
Dimensions (L x W x H)	5.51 x 1.5 x 8 cm (2.17 x 0.59 x 3.15 inches)
Weight	68 g (0.15 lbs)
Power Source	1 x CR2032 Battery
Display Type	Digital LCD with Backlight
Material	Plastic
Color	Red
Water Resistance	Water, Dust, and Shock Resistant
Lanyard Length	46 inches

3.15 inches
8.9 cm





2.17 inches
5.5 cm

Dimensional diagram of the stopwatch, indicating its height and width.

WARRANTY AND SUPPORT

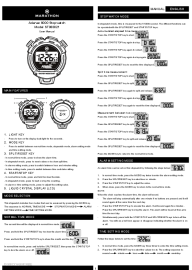
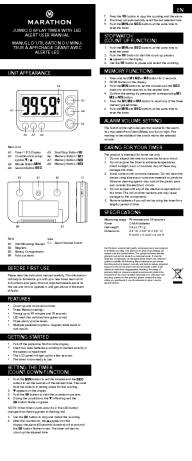
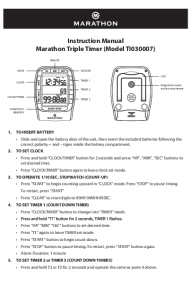
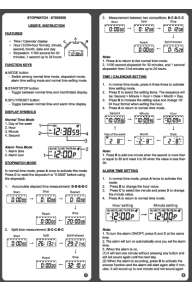
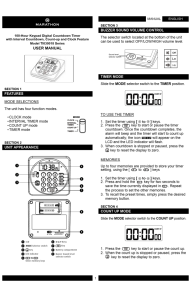
For warranty information or technical support, please contact MARATHON customer service. Details can typically be found on the manufacturer's website or product packaging.


Manufacturer: MARATHON

Place of Business: Vaughan, ON L4K 5Y3, CA

Website: www.MarathonWatch.com

Related Documents - FBA_ST083013RD

	<p>Marathon Adanac 8000 Stopwatch ST083021 User Manual Features & Operation</p> <p>Comprehensive user manual for the Marathon Adanac 8000 Stopwatch (Model ST083021). Learn about its features, modes, operation, settings, battery replacement, precautions, and specifications.</p>
	<p>Marathon Jumbo Display Timer with LED Alert User Manual - TI030016</p> <p>User manual for the Marathon Jumbo Display Timer with LED Alert (Model TI030016). Learn how to set up, operate countdown and stopwatch functions, use memory settings, and care for your timer.</p>
	<p>Marathon Triple Timer T1030007 Instruction Manual and User Guide</p> <p>Detailed instructions and features for the Marathon Triple Timer Model T1030007, covering setup, operation, care, and mounting.</p>
	<p>Marathon ST083009 Stopwatch User Instructions</p> <p>User instructions for the Marathon ST083009 stopwatch, detailing features, function keys, display symbols, and operation for time, calendar, alarm, and stopwatch modes. Includes battery replacement and hourly chime settings.</p>
	<p>Marathon TI030018 100-Hour Digital Countdown Timer User Manual</p> <p>Comprehensive user manual for the Marathon TI030018 100-Hour Keypad Digital Countdown Timer, covering its features, operation modes (Clock, Interval Timer, Count Up, Timer), unit appearance, button functions, battery replacement, precautions, and technical specifications.</p>

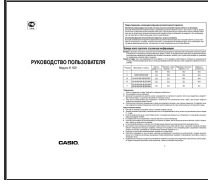

[Casio Watch Module 1531 User Manual](#)

User manual for the Casio Module 1531 watch, detailing features like stopwatch, timer, alarm, auto backlight, and marathon runner's data.