

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Philips](#) /
- › [Philips HR3652/01 ProBlend Blender Instruction Manual](#)

Philips HR3652/01

Philips HR3652/01 ProBlend Blender Instruction Manual

Model: HR3652/01

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Philips HR3652/01 ProBlend Blender. Please read these instructions carefully before first use and retain them for future reference.

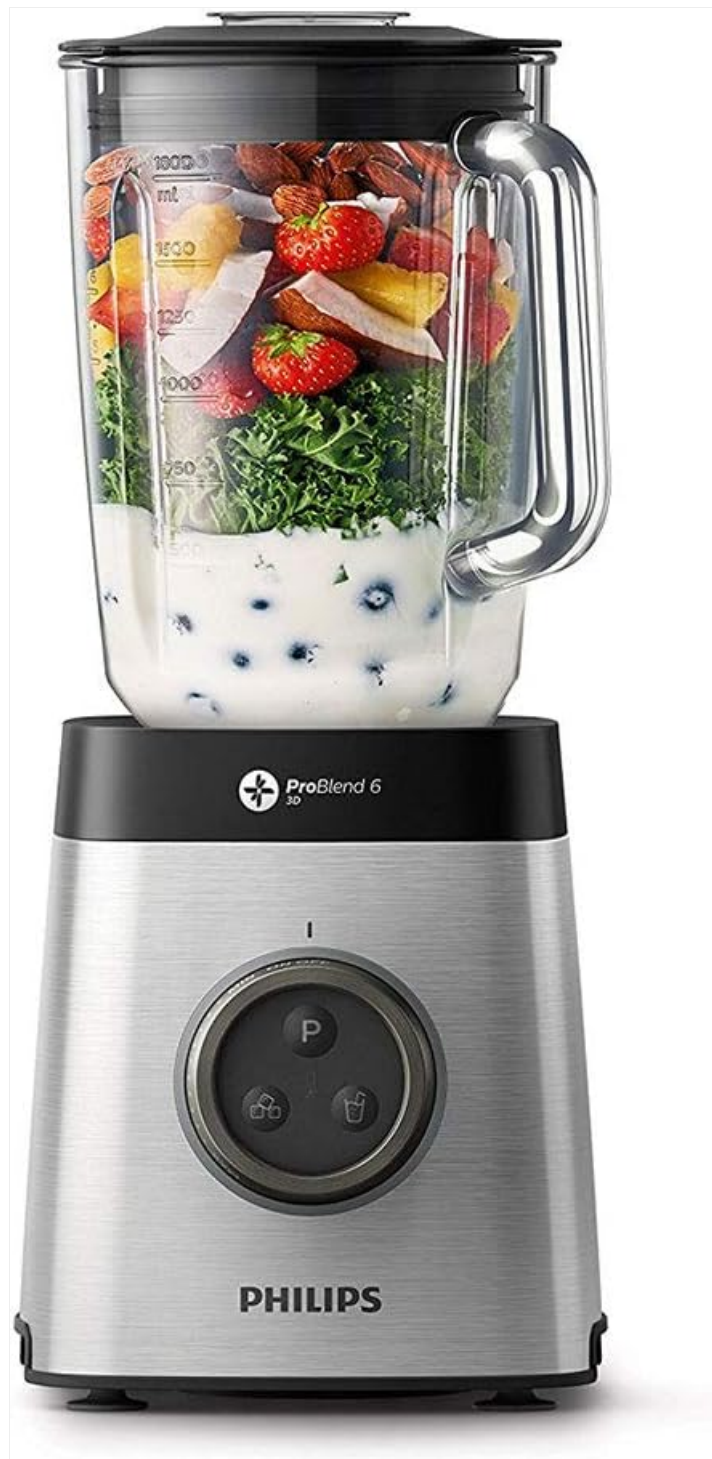


Image 1.1: The Philips HR3652/01 ProBlend Blender with its jar filled with fruits, vegetables, and liquid, ready for blending.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before use.
- Do not immerse the motor unit in water or other liquids.
- Keep hands and utensils out of the container while blending to prevent severe injury and/or damage to the blender.
- Ensure the lid is securely locked in place before operating the appliance.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

3. PRODUCT OVERVIEW

The Philips HR3652/01 ProBlend Blender is designed for efficient blending of various ingredients. It features a powerful 1400W motor and ProBlend 6 3D technology for optimal results.

Components:

- Motor Unit (Base)
- Blender Jar (2-liter capacity, 1.5-liter working capacity)
- Lid with removable measuring cup
- Blade Unit (integrated into the jar)



Image 3.1: The Philips HR3652/01 ProBlend Blender positioned on a wooden kitchen counter, surrounded by various fresh fruits and vegetables, highlighting its presence in a healthy kitchen environment.

4. SETUP AND ASSEMBLY

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the blender jar, lid, and blade unit in warm soapy water. Rinse thoroughly and dry. The motor unit can be wiped with a damp cloth.
3. **Assemble Jar:** Ensure the blade unit is securely attached to the bottom of the blender jar.
4. **Place Jar on Motor Unit:** Place the assembled blender jar onto the motor unit. Ensure it is seated correctly and locked into position. The blender has suction cups at the bottom for stability.
5. **Add Ingredients:** Place your desired ingredients into the blender jar. Do not exceed the maximum fill level indicated on the jar (1.5 liters for operational capacity).
6. **Secure Lid:** Place the lid onto the blender jar and turn it clockwise until it locks securely. Ensure the measuring cup is inserted into the lid opening.



Image 4.1: A hand dropping ice cubes into the blender jar, which already contains a mix of fresh fruits, vegetables, and liquid, demonstrating the preparation stage before blending.

5. OPERATING INSTRUCTIONS

The Philips HR3652/01 offers variable speed settings and a dedicated smoothie program for optimal blending results.

1. **Connect Power:** Plug the blender into a suitable power outlet.
2. **Select Speed:** Turn the control dial to select your desired speed. The blender offers variable manual speed options, from gentle blending for soft fruits to a powerful burst for harder ingredients.
3. **Pulse Function:** For short bursts of power, turn the dial to the 'P' (Pulse) setting and hold it. Release to stop. This is ideal for chopping or breaking down tough ingredients.
4. **Smoothie Program:** For consistent smoothie results, select the dedicated smoothie program. This program is pre-set to ensure all ingredients are finely blended.
5. **Blending:** Allow the blender to operate until the desired consistency is achieved. The 1400W motor and 35,000 RPM ensure efficient blending.
6. **Stop:** Turn the control dial to the 'OFF' position to stop the blender.
7. **Unplug:** Always unplug the appliance after use.



Image 5.1: A hand turning the central control dial of the Philips HR3652/01 blender, which features 'P' for Pulse and other settings, demonstrating how to select blending modes.



Image 5.2: A vibrant green smoothie being poured from the Philips HR3652/01 blender's jar into a tall glass, showcasing the final blended product.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygiene of your blender.

1. **Unplug:** Always unplug the blender before cleaning.
2. **Disassemble:** Remove the blender jar from the motor unit. Separate the lid and, if possible, the blade unit from the jar.
3. **Jar and Lid:** All detachable parts of your Philips blender are dishwasher-safe, except for the blade unit. Alternatively, wash them in warm soapy water, rinse, and dry.
4. **Blade Unit:** The blade unit can be easily rinsed under running water. Use a brush to clean around the blades carefully.
Caution: Blades are sharp. Handle with extreme care.
5. **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
6. **Storage:** Store the blender in a dry place, away from direct sunlight.

7. TROUBLESHOOTING

If you encounter issues with your blender, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Blender does not start.	Not plugged in; Jar not correctly assembled or locked; Overload protection activated.	Ensure plug is firmly in outlet; Reassemble jar correctly and lock it; Unplug, remove some ingredients, wait 15 minutes, then restart.
Ingredients are not blending smoothly.	Too little liquid; Too many ingredients; Ingredients are too large.	Add more liquid; Reduce the amount of ingredients; Cut ingredients into smaller pieces.
Leakage from the bottom of the jar.	Blade unit not securely tightened; Seal ring damaged or missing.	Ensure blade unit is tightly screwed onto the jar; Check if the seal ring is correctly placed and undamaged.
Unusual noise during operation.	Hard object in the jar; Overload.	Stop the blender, unplug, and check for any foreign objects; Reduce ingredients.

8. SPECIFICATIONS

Feature	Detail
Brand	Philips
Model Number	HR3652/01
Power	1400 Watts
Voltage	230 Volts
Capacity	2000 Milliliters (2 Liters)
Operational Capacity	1.5 Liters
Material	Glass Jar, Other (for main unit)
Dimensions (L x W x H)	31 x 21 x 43.5 cm
Item Weight	4.93 Kilograms
Special Features	Portable, Programmable, Safety Lock, Multiple Speeds
Technology	ProBlend 6 3D
RPM	35,000

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Philips website.

You can also contact Philips customer service for assistance with product registration, troubleshooting, or spare parts.

Online Support: www.philips.com/support



© 2023 Philips. All rights reserved.