

[Manuals.plus](#) /

› [Think Gizmos](#) /

› Think Gizmos Aero Advantage Pogo Stick XN012 User Manual

Think Gizmos XN012

Think Gizmos Aero Advantage Pogo Stick XN012 User Manual

Model: XN012

1. INTRODUCTION

Thank you for choosing the Think Gizmos Aero Advantage Pogo Stick. This manual provides essential information for the safe and effective use of your pogo stick. Please read it thoroughly before use and retain it for future reference.

The Aero Advantage Pogo Stick is designed for children aged 5 and up, weighing between 40 to 80 pounds (18 kg to 36 kg). It features a durable construction with a foam-covered frame and non-slip foot pads, promoting active play and skill development.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in serious injury.

- Always wear a helmet, elbow pads, and knee pads (not included) when using the pogo stick.
- Use the pogo stick only on flat, solid surfaces. Avoid uneven terrain, wet surfaces, or areas with obstacles.
- Ensure the user's weight is within the recommended range of 40-80 pounds (18-36 kg).
- Adult supervision is required at all times, especially for beginners.
- Inspect the pogo stick before each use for any signs of damage, loose parts, or wear. Do not use if damaged.
- Keep fingers and clothing away from moving parts, especially the spring mechanism.
- Do not attempt stunts or tricks beyond your skill level.
- Do not use the pogo stick in traffic or near roads.

3. PRODUCT FEATURES

- **Foam Covered Frame:** Provides comfort and protection during use.
- **Padded Foam Handles:** Ensures a secure and comfortable grip.
- **Non-Slip Foot Pads:** Designed for stability and control.
- **Concealed Low Friction Spring:** Offers improved performance and a smoother bounce.
- **Durable Construction:** Built to withstand active play.

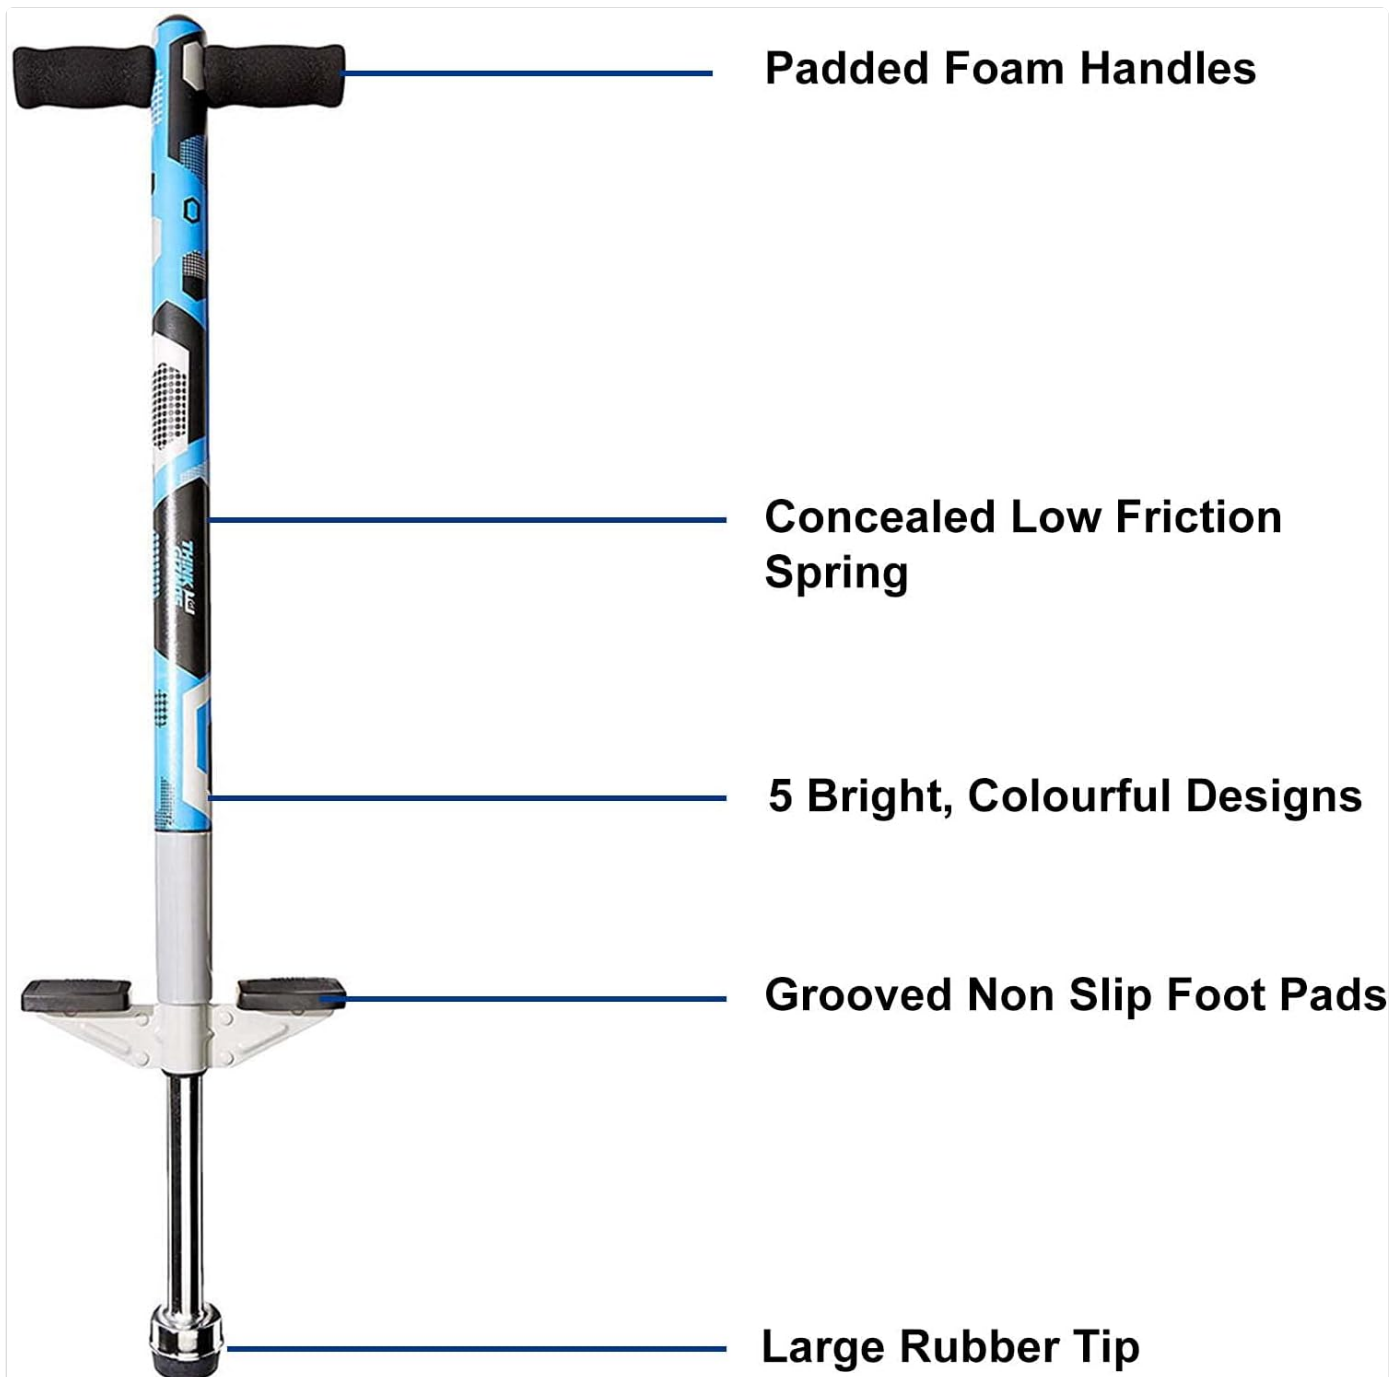


Figure 1: Key Features of the Aero Advantage Pogo Stick

4. SETUP

The Think Gizmos Aero Advantage Pogo Stick comes fully assembled and ready for use. No additional assembly is required.





Figure 2: Pogo Stick ready for use

5. OPERATING INSTRUCTIONS

5.1 Getting Started

1. Place the pogo stick on a flat, stable surface.
2. Stand with one foot on a foot pad, holding the handles firmly.
3. With adult assistance, place your second foot on the other foot pad.
4. Maintain a balanced posture, keeping your knees slightly bent.

5.2 Jumping Technique

1. Begin by gently bouncing up and down, using your legs to compress the spring.
2. As you gain confidence, increase the force of your pushes to achieve higher bounces.
3. Keep your body centered over the pogo stick and maintain a firm grip on the handles.
4. To stop, gradually reduce your bouncing height until you can safely step off the foot pads.



Figure 3: Child demonstrating proper pogo stick use with safety gear

Your browser does not support the video tag.

Video 1: Official Think Gizmos Pogo Stick Range for Kids, Teens and Adults. This video demonstrates various pogo stick models in action, highlighting their use for different age groups and promoting active outdoor play.

6. MAINTENANCE

- **Cleaning:** Wipe down the pogo stick with a damp cloth after each use to remove dirt and debris. Avoid harsh chemicals.
- **Inspection:** Regularly check all components, including the handles, foot pads, spring mechanism, and rubber tip, for wear, cracks, or damage.
- **Storage:** Store the pogo stick in a dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Lubrication:** The concealed spring mechanism is designed for low friction and generally does not require user lubrication. If you notice unusual sounds or stiffness, contact customer support.

7. TROUBLESHOOTING

- **Pogo stick not bouncing effectively:** Ensure the user's weight is within the recommended range (40-80 lbs). Insufficient weight may result in less bounce.
- **Unusual noises during use:** Stop using the pogo stick immediately and inspect for any loose or damaged parts. If the issue persists, contact customer support.
- **Difficulty maintaining balance:** Practice on a flat, open surface with adult supervision. Ensure a firm grip on the handles and keep your body centered.

8. SPECIFICATIONS

Feature	Detail
Model Number	XN012
Product Dimensions	10.24 x 2.76 x 37.4 inches
Item Weight	5.14 pounds
Recommended Age	5 years and up
Recommended Weight Range	40 to 80 pounds (18 kg to 36 kg)
Manufacturer	Think Gizmos

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official Think Gizmos website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B076HRQD2X>

More documents and user manuals: <https://manuals.plus/>