

Midea MB-FS5017B

Midea Multi-Function Rice Cooker User Manual

Model: MB-FS5017B



1. INTRODUCTION

Thank you for choosing the Midea Multi-Function Rice Cooker. This appliance is designed to simplify your cooking process with its versatile functions and user-friendly interface. It offers 10 pre-set programs for various cooking needs, including different types of rice, steaming, slow cooking, and more. Please read this manual thoroughly before operation to ensure safe and efficient use of your new appliance.

2. PRODUCT OVERVIEW

The Midea Multi-Function Rice Cooker is equipped with features designed for convenience and performance.

2.1 Components

- Main Unit (with control panel and heating element)
- Removable Non-stick Inner Pot
- Removable Upper Lid
- Steamer Basket
- Ladle
- Soup Spoon
- Measuring Cup
- Power Cord

2.2 Key Features

- **10 Cooking Programs:** Brown Rice, White Rice, Steam, Slow Cook, Manual, Soup, Oatmeal, Pasta, Saute, and Defrost.

- **Automatic Keep Warm:** Maintains food temperature for up to 12 hours after cooking.
- **24-Hour Delay Timer:** Allows pre-setting cooking start time.
- **Easy Cleaning:** Non-stick inner pot, removable upper lid, and stainless steel surface for simple maintenance.
- **LED Digital Control Panel:** Intuitive interface for program selection and settings.
- **Brushed Stainless Steel Shell:** Durable and aesthetically pleasing exterior.

2.3 Product Visuals



Figure 2.3.1: Front view of the Midea Multi-Function Rice Cooker, showcasing its sleek design and digital control panel.



Figure 2.3.2: Interior view of the rice cooker with the lid open, showing the non-stick inner pot and the removable upper lid.

Easy-to-read

LED Digital Panel


- » Easy-to-press Touch Button
- » Multi-function cooking by menu settings
- » 24 hours preset timer.
- » Automatic keep warm function



Figure 2.3.3: Close-up of the easy-to-read LED Digital Panel, highlighting the touch buttons for various functions and the 24-hour preset timer.

Brushed Stainless

Steel Shell

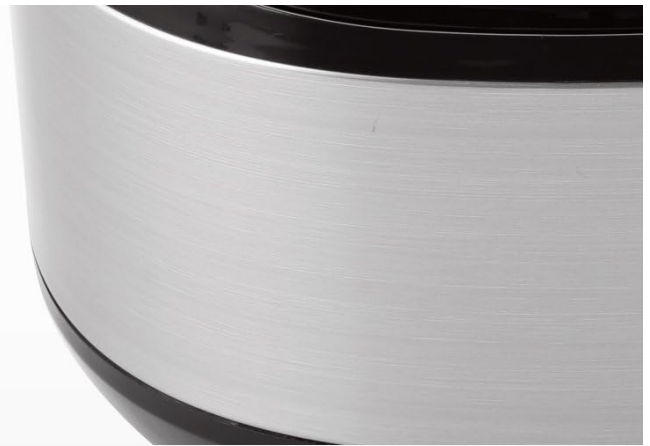

Removable

large steam vent.

Removable and

Washable Inner Cover



Figure 2.3.4: Detailed view of key design elements including the brushed stainless steel exterior, the removable large steam vent, and the washable inner cover for easy maintenance.

Up to 12 Cups of Cooked Rice!



1 cup
uncooked



2 cup
cooked



Figure 2.3.5: Illustration demonstrating the capacity of the rice cooker, capable of producing up to 12 cups of cooked rice from 10 cups of uncooked rice.



Figure 2.3.6: Visual representation of the diverse dishes that can be prepared using the multi-function rice cooker, such as Beef Soup, Shrimp, White Beans, Meatballs, Spaghetti, Paella, Stew Meat, Pumpkin Soup.

3. SETUP

3.1 Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or stickers from the appliance.
3. Retain packaging materials for future storage or transport.

3.2 Initial Cleaning

1. Wash the inner pot, steamer basket, ladle, soup spoon, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

3.3 Placement

- Place the rice cooker on a stable, flat, heat-resistant surface.
- Ensure adequate ventilation around the appliance.
- Keep away from direct sunlight, heat sources, and moisture.

3.4 Assembly

1. Place the clean inner pot into the main unit, ensuring it sits properly.
2. Close the lid securely.
3. Plug the power cord into a grounded electrical outlet (120 Volts AC).

4. OPERATING INSTRUCTIONS

4.1 Basic Operation

1. Add desired ingredients (e.g., rice and water) to the inner pot. Use the provided measuring cup for accurate ratios.
2. Close the lid firmly.
3. Press the **ON/OFF START** button to power on the unit. The LED display will illuminate.
4. Use the **MENU** button to cycle through the available cooking programs.
5. Once the desired program is selected, press **ON/OFF START** again to begin cooking.
6. The cooker will automatically switch to "Keep Warm" mode once cooking is complete.

4.2 Cooking Programs

The Midea Multi-Function Rice Cooker offers 10 specialized programs:

- **Brown Rice:** Optimized for cooking brown rice to perfection.
- **White Rice:** Standard program for fluffy white rice.
- **Steam:** For steaming vegetables, fish, or other foods using the steamer basket.
- **Slow Cook:** Ideal for stews, soups, and tenderizing meats over a longer period.
- **Manual:** Allows for custom cooking time and temperature settings.
- **Soup:** Specifically designed for preparing various soups.
- **Oatmeal:** For cooking creamy oatmeal.
- **Pasta:** Simplifies pasta cooking.
- **Saute:** For browning ingredients before cooking or for stir-frying.
- **Defrost:** For safely defrosting frozen foods.

4.3 Using the Delay Timer

1. Add ingredients to the inner pot.
2. Press the **TIMER/TEMP** button.
3. Use the **+** and **-** buttons to adjust the desired delay time (up to 24 hours).
4. Select your cooking program using the **MENU** button.
5. Press **ON/OFF START** to confirm. The cooker will start at the set delayed time.

4.4 Keep Warm Function

After any cooking program finishes, the cooker will automatically switch to "Keep Warm" mode. This function can keep food warm for up to 12 hours. To cancel "Keep Warm" mode, press the **WARM/CANCEL** button.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Midea Rice Cooker.

5.1 Daily Cleaning

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Remove the inner pot and wash it with warm, soapy water. The non-stick coating allows for easy cleaning. Avoid abrasive cleaners or metal scouring pads.
3. Remove the removable upper lid and steam vent. Wash them with warm, soapy water and rinse thoroughly.
4. Wipe the exterior of the main unit with a soft, damp cloth. Do not use harsh chemicals or immerse the main unit in water.
5. Ensure all parts are completely dry before reassembling or storing.

5.2 Storage

Store the rice cooker in a dry, cool place when not in use. Ensure the inner pot and all accessories are clean and dry before storage.

6. TROUBLESHOOTING

If you encounter issues with your Midea Multi-Function Rice Cooker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outlet issue; power cord damaged.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker. Contact customer support if cord is damaged.
Rice is too hard/dry.	Insufficient water; incorrect rice-to-water ratio.	Add more water next time. Refer to rice packaging or general guidelines for proper ratios. Ensure inner pot is seated correctly.
Rice is too soft/mushy.	Too much water; incorrect rice-to-water ratio.	Reduce water next time. Refer to rice packaging or general guidelines for proper ratios.
Steam escaping from lid.	Lid not closed properly; steam vent blocked.	Ensure lid is securely closed. Check and clean the steam vent for any blockages.
Food sticks to inner pot.	Not enough liquid; inner pot damaged.	Ensure sufficient liquid is used for cooking. Avoid using metal utensils that can scratch the non-stick coating.

7. SPECIFICATIONS

Feature	Detail
Brand	Midea
Model Name	MB-FS5017B

Feature	Detail
Capacity	10 Cups (uncooked) / 5 Liters
Product Dimensions	10.5"D x 10.8"W x 13.89"H
Power Source	Corded Electric
Voltage	120 Volts (AC)
Wattage	890 watts
Material	Stainless Steel (exterior), ABS+PC (Lid), Non-stick (Inner Pot)
Item Weight	8.5 Pounds
Special Feature	Countdown Timer, Automatic Keep Warm
Included Components	Lid, Measuring Cup, Inner Pot, Rice Paddle, Instruction Manual, Steamer Basket

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This Midea Multi-Function Rice Cooker comes with a **1-year manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage resulting from misuse, accident, alteration, neglect, unauthorized repair, or commercial use.

8.2 Customer Support

For technical assistance, warranty claims, or general inquiries, please contact Midea customer support. Refer to the contact information provided on the product packaging or the official Midea website.

When contacting support, please have your product model number (MB-FS5017B) and proof of purchase ready.

