



Manuals.plus /

› Sumeet /

› Sumeet 4-in-1 Nonstick Multi Snack Maker User Manual

## Sumeet 1-2KA4

# Sumeet 4-in-1 Nonstick Multi Snack Maker User Manual

Model: 1-2KA4

## INTRODUCTION

Thank you for choosing the Sumeet 4-in-1 Nonstick Multi Snack Maker. This versatile kitchen appliance is designed to help you prepare a variety of snacks such as dosas, parathas, uttapam, pancakes, and chilas with ease. Its unique design ensures even heating and features a durable nonstick coating for convenient cooking and cleaning. Please read this manual thoroughly before first use to ensure safe and optimal operation of your snack maker.

## IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions carefully before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the pan or handle in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This appliance is not oven safe. Do not place in an oven.

## PRODUCT OVERVIEW

---

The Sumeet 4-in-1 Nonstick Multi Snack Maker features a unique design for efficient cooking.

- **Four Compartments:** Allows for simultaneous cooking of multiple snacks.
- **Nonstick Coating:** 4-layer nonstick coating for easy food release and cleaning.
- **Even Heat Distribution:** Unique base design ensures uniform heating across all compartments.
- **Ergonomic Handle:** Designed for comfortable and secure grip.
- **Durable Construction:** Made from thick aluminum for longevity.



*Figure 1: Top-down view of the Sumeet 4-in-1 Nonstick Multi Snack Maker, showing the four circular cooking compartments with grill lines and the attached handle.*



Figure 2: Angled view of the snack maker highlighting key features such as thick aluminum construction, easy cleaning, fuel efficiency, food-grade material, PFDA-free coating, even heat distribution, nutrition preservation, and 4-layer nonstick coating with a 12-month warranty.

## SETUP

- 1. Unpacking:** Carefully remove the snack maker from its packaging. Retain packaging for future storage or transport if needed.
- 2. Initial Cleaning:** Before first use, wash the snack maker thoroughly with warm soapy water. Rinse well and dry completely.
- 3. Seasoning (Optional but Recommended):** For enhanced nonstick performance and longevity, lightly coat the cooking surface with a small amount of cooking oil. Heat the pan over low heat for 1-2 minutes, then let it cool and wipe off any excess oil.
- 4. Placement:** Place the snack maker on a stable, heat-resistant surface over a suitable heat source (e.g., gas stove, electric cooktop). Ensure the handle is positioned away from direct heat and within comfortable reach.

## OPERATING INSTRUCTIONS

Follow these steps to use your Sumeet 4-in-1 Nonstick Multi Snack Maker:

1. **Preheating:** Place the snack maker on your stove over medium heat. Allow it to preheat for 1-2 minutes. The unique base ensures even heating.
2. **Adding Ingredients:** Once preheated, lightly grease each compartment with a small amount of oil or butter if desired (though the nonstick coating minimizes this need). Pour or place your snack batter (e.g., dosa, pancake, uttapam, chila) into each of the four compartments.
3. **Cooking:** Cook for the recommended time according to your recipe. The individual compartments help maintain shape and cook evenly.
4. **Flipping/Removing:** Use a non-abrasive spatula (preferably silicone or wood) to flip or remove the cooked snacks. Avoid using metal utensils as they can damage the nonstick coating.
5. **Repeat:** Continue cooking batches as needed.



Figure 3: The Sumeet 4-in-1 Nonstick Multi Snack Maker in use, demonstrating four mini pizzas cooking simultaneously in its compartments.

## MAINTENANCE AND CLEANING

---

Proper care will extend the life of your Sumeet Snack Maker.

- **Cool Down:** Always allow the snack maker to cool completely before cleaning.
- **Hand Washing:** Hand wash with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners, scouring pads, or steel wool, as these can damage the nonstick coating.
- **Dishwasher Safe:** The manufacturer states the product is dishwasher safe. However, hand washing is generally recommended for preserving the nonstick coating over time.
- **Drying:** Dry thoroughly with a soft cloth to prevent water spots.
- **Storage:** Store in a dry place. To protect the nonstick surface, place a soft cloth or paper towel between the snack maker and other cookware if stacking.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Food sticks to the surface.	Insufficient oil; nonstick coating wear; pan not preheated properly.	Ensure pan is lightly oiled (especially for first few uses). Preheat pan adequately. Avoid high heat which can degrade nonstick coating.
Uneven cooking.	Heat source not centered; pan not level; incorrect heat setting.	Ensure the pan is centered over the heat source. Use a level surface. Adjust heat to medium for best results.
Handle becomes loose.	Screws may have loosened over time.	Carefully tighten the screws attaching the handle to the pan using a suitable screwdriver. Do not overtighten.
Nonstick coating appears damaged.	Use of metal utensils; abrasive cleaning; overheating.	Always use non-abrasive utensils (silicone, wood, plastic). Clean with soft sponges. Avoid extremely high heat.

## SPECIFICATIONS

- **Model:** 1-2KA4
- **Brand:** Sumeet
- **Material:** Aluminium
- **Coating:** 4-layer Nonstick
- **Color:** Silver
- **Dimensions (L x W x H):** Approximately 19.5 cm x 19.5 cm x 1.3 cm (Pan body)
- **Item Weight:** Approximately 560 grams (1.23 pounds)
- **Special Feature:** Dishwasher Safe (Hand wash recommended for longevity)
- **Compatible Devices:** Smooth Surface Induction
- **Oven Safe:** No

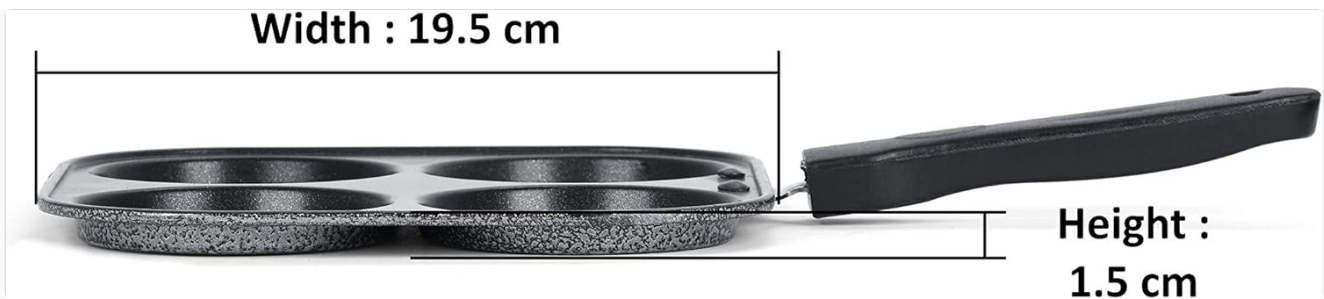


Figure 4: Side view of the Sumeet 4-in-1 Nonstick Multi Snack Maker illustrating its width (19.5 cm) and height (1.5 cm) for the pan body.



Figure 5: Bottom view of the Sumeet 4-in-1 Nonstick Multi Snack Maker, showing the textured base designed for even heat distribution and the attachment point for the handle.

## WARRANTY AND SUPPORT

The Sumeet 4-in-1 Nonstick Multi Snack Maker comes with a 12-month warranty, as indicated by product information. For specific warranty terms, conditions, or to claim warranty service, please refer to the documentation included with your purchase or contact Sumeet customer support directly.

For further assistance, product inquiries, or troubleshooting not covered in this manual, please contact Sumeet customer service through their official website or the retailer from whom you purchased the product.