

ROCAM ROCAM CR1008 RED

ROCAM Digital Alarm Clock User Manual

Model: ROCAM CR1008 RED

INTRODUCTION

Thank you for choosing the ROCAM Digital Alarm Clock. This user manual provides comprehensive instructions for setting up, operating, and maintaining your new alarm clock. Designed for ease of use, this clock features a large 7.5-inch LED display, a loud alarm with adjustable volume, 7 colored night light options, a smooth dimmer function, and convenient dual USB charging ports. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

KEY FEATURES

- **7.5-Inch Large Red LED Display:** Easy to read time from across the room, suitable for all ages.
- **7 Colored Night Light:** Offers a choice of ambient lighting, ideal for children or subtle room illumination.
- **Adjustable 0-100% Brightness:** A sliding dimmer allows for seamless adjustment of display brightness to your preference.
- **Dual USB Charging Ports:** Conveniently charge your phone, tablet, or other small electronic devices.
- **Loud Alarm with Volume Control:** Adjustable alarm buzzer volume (Low-Medium-High) perfect for heavy sleepers.
- **Snooze Function:** Provides an extra 9 minutes of sleep with a simple press.
- **Battery Backup:** Ensures time and alarm settings are retained during power outages (display does not show).
- **12/24 Hour Customization & DST:** Easily switch between 12-hour and 24-hour formats and adjust for Daylight Saving Time.

SETUP

1. Power Connection

Connect the provided USB power cable to the DC IN port on the back of the alarm clock. Plug the other end into a standard USB power adapter (not included) and then into a wall outlet. The display will light up, indicating the clock

is powered on.



Image: The ROCAM Digital Alarm Clock with its large red LED display and various night light color options shown below it.

2. Battery Backup Installation

For battery backup, open the battery compartment on the back of the clock. Insert two AAA batteries (not included), ensuring correct polarity (+/-). These batteries will preserve your time and alarm settings during a power outage, though the display will not be visible.

USB & Type-C Port for Charging



Battery Backup
(Don't worry about time resetting
after a power outage)



Image: Rear view of the alarm clock, highlighting the battery compartment and control buttons.

Your browser does not support the video tag.

Video: An official product video demonstrating the features of the ROCAM Alarm Clock, including battery installation and button functions.

OPERATING INSTRUCTIONS

1. Setting Time

1. Press the **SET TIME** button on the back of the clock. The hour digits will flash.

2. Use the **HOUR** and **MINUTE** buttons on the top of the clock to adjust the hour.
3. Press **SET TIME** again to confirm the hour and move to minute setting. Adjust minutes using the **HOUR** and **MINUTE** buttons.
4. Press **SET TIME** one more time to save the time and exit setting mode.
5. To switch between 12-hour and 24-hour format, use the **TIME FORMAT** slider on the back.
6. To adjust for Daylight Saving Time (DST), press and hold the **SET TIME** button for a few seconds. The DST indicator will light up, and the time will adjust by one hour. Repeat to turn off DST.



Image: Front view of the alarm clock displaying 10:15 AM, illustrating the large, clear digits and top-mounted buttons.

2. Setting Alarm

1. Press the **SET ALARM** button on the back of the clock. The alarm hour digits will flash.
2. Use the **HOUR** and **MINUTE** buttons on the top to set the desired alarm hour.
3. Press **SET ALARM** again to confirm the hour and move to minute setting. Adjust minutes using the **HOUR** and **MINUTE** buttons.
4. Press **SET ALARM** one more time to save the alarm time. The alarm indicator (ALM) will appear on the display.
5. To turn the alarm ON or OFF, use the **ALARM ON/OFF** slider on the back.
6. Adjust the alarm volume using the **ALARM VOLUME** slider (Low, Medium, High).

Easy to Set Up

Each feature has its own dedicated button

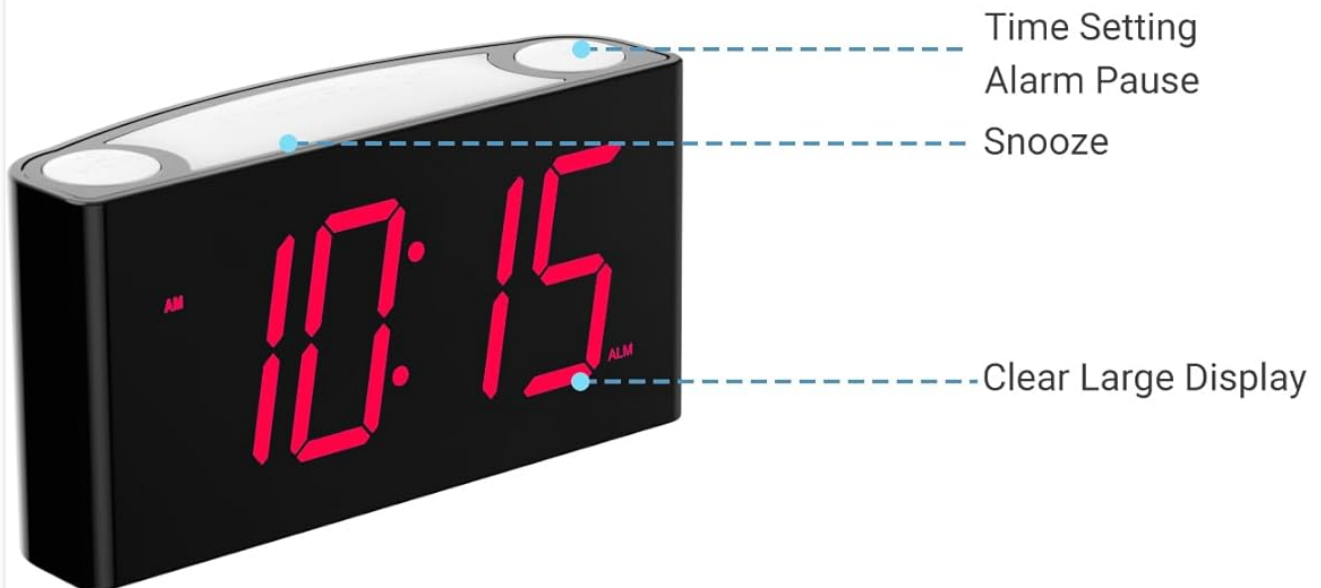


Image: Close-up of the clock's rear panel, detailing the dimmer, time format, alarm volume, and set buttons.

3. Snooze Function

When the alarm sounds, press the large **SNOOZE** button on the top of the clock to temporarily silence the alarm for 9 minutes. The alarm will sound again after 9 minutes. To turn off the alarm for the day, press the **ALARM PAUSE** button on the back.

4. Night Light

The clock features a built-in night light with 7 color options. Tap the **SNOOZE** button on the top to cycle through the

different colors. Press and hold the **SNOOZE** button to turn the night light off.

Easy to Read

Time-accurate
Brightness is adjustable; can be set to a low dimmer for nighttime.





0%

100%





oFF



20%(LOW)



50%(Medium)



100%(Bright)

Image: The alarm clock with its night light illuminated, positioned on a bedside table next to a sleeping child.

5. Display Brightness (Dimmer)

Adjust the display brightness from 0% to 100% using the **DIMMER** slider on the back of the clock. This allows you to customize the display intensity for comfortable viewing in any lighting condition, from complete darkness to bright daylight.

Easy to Use

Simple Alarm Clock for Kids and Seniors



Image: The alarm clock on a table, illustrating various brightness settings for its display, from off to full brightness.

6. Dual USB Charging Ports

The clock is equipped with two USB charging ports (USB-A and USB-C) on the back. These ports provide convenient charging for your mobile devices, smartwatches, or other small electronics while you sleep or work.

Loud Enough to Wake Up Heavy Sleepers



Image: The alarm clock on a wooden table, with a smartphone and earbuds connected to its USB charging ports.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the AAA backup batteries annually or when the clock's settings are no longer retained during power interruptions.
- **Storage:** If storing the clock for an extended period, remove the backup batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is off or dim.	Not powered, dimmer set to 0%, or power outage.	Ensure power adapter is connected. Adjust dimmer slider. If power outage, battery backup retains settings but display is off.
Alarm not sounding.	Alarm is OFF, volume is too low, or alarm time is incorrect.	Check ALARM ON/OFF slider. Adjust ALARM VOLUME . Verify alarm time is set correctly.
Time/Alarm settings reset after power outage.	Backup batteries are dead or not installed.	Install two fresh AAA batteries or replace existing ones.
USB charging not working.	Device not compatible, cable faulty, or clock not powered.	Ensure device is compatible with 5V USB charging. Try a different USB cable. Confirm clock is powered via AC adapter.
Accidentally turned off alarm instead of snooze.	Pressed ALARM PAUSE instead of SNOOZE .	The ALARM PAUSE button is designed to turn off the alarm for the day. To snooze, press the large SNOOZE button on top.

SPECIFICATIONS

Brand	ROCAM
Model Number	ROCAM CR1008 RED
Display Type	Digital LED
Display Size	7.5 inches
Product Dimensions	6.5"W x 3.1"H
Item Weight	10.8 ounces
Power Source	Corded Electric
Backup Battery	2 x AAA (not included)
USB Charging Ports	Dual (USB-A, USB-C)
Material	Acrylonitrile Butadiene Styrene (ABS)
Special Features	Snooze, Alarm, Adjustable Brightness, Adjustable Volume, Charging Port, 7 Colored Night Light

WARRANTY AND SUPPORT

ROCAM stands behind the quality of its products. The ROCAM Digital Alarm Clock comes with the following warranty:

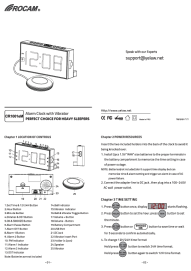
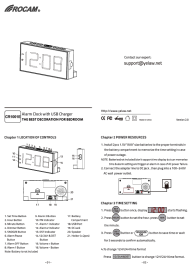
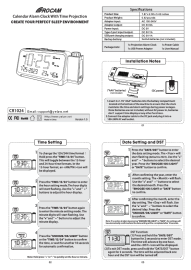
- **30 Days:** Money-back guarantee.
- **90 Days:** Free replacement for defective units.
- **12 Months:** Limited warranty covering manufacturing defects.

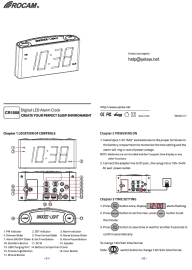
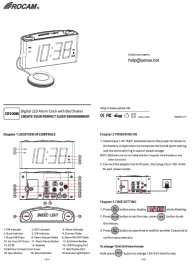
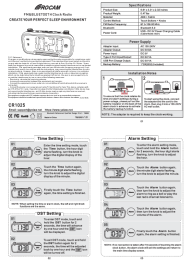
For any operational problems, questions, or warranty claims, please contact ROCAM customer service. We are committed to providing the highest quality products and excellent customer support.

You can also visit the official ROCAM Store for more information and products:[ROCAM Store on Amazon](#)

© 2025 ROCAM. All rights reserved.

Related Documents - ROCAM CR1008 RED

	<p>ROCAM CR1001eM Alarm Clock with Vibrator User Manual</p> <p>User manual for the ROCAM CR1001eM Alarm Clock with Vibrator, detailing its features, setup, and operation for heavy sleepers.</p>
	<p>ROCAM CR1001E Alarm Clock with USB Charger User Manual</p> <p>User manual for the ROCAM CR1001E digital alarm clock with USB charger. This guide details how to set time and alarms, adjust display brightness, use Daylight Saving Time (DST) features, and utilize the USB charging port. Includes information on power resources and control locations.</p>
	<p>ROCAM CR1024 Calendar Alarm Clock with Time Projection User Manual</p> <p>Comprehensive user manual for the ROCAM CR1024 Calendar Alarm Clock, detailing its features including time projection, alarm settings, date configuration, DST function, brightness control, temperature/humidity monitoring, night light, and device charging capabilities.</p>

	<p>ROCAM CR1008 Digital LED Alarm Clock User Manual</p> <p>User manual for the ROCAM CR1008 Digital LED Alarm Clock. This guide provides instructions on setting up, operating features like time and alarm setting, dimmer, night light, DST, USB charging, and warranty information.</p>
	<p>ROCAM CR1008i Digital LED Alarm Clock with Bed Shaker User Manual</p> <p>User manual for the ROCAM CR1008i Digital LED Alarm Clock with Bed Shaker. Learn how to set time, alarms, use the bed shaker, night light, and understand warranty information.</p>
	<p>ROCAM CR1025 FM & Bluetooth Clock Radio User Manual</p> <p>Comprehensive user manual for the ROCAM CR1025 FM & Bluetooth Clock Radio, detailing setup, features like alarm, DST, Bluetooth connectivity, FM radio, and charging capabilities.</p>